

## WEB Configuration Command

## Table of Contents

1.1 ip http language.....	1
1.2 ip http port.....	1
1.3 ip http secure-port.....	2
1.4 ip http server.....	2
1.5 ip http http-access enable.....	3
1.6 ip http ssl-access enable.....	3
1.7 ip http web use-footer.....	4
1.8 ip http web max-vlan.....	4
1.9 ip http web max-macaddr-table.....	5
1.10 ip http web igmp-groups.....	5
1.11 ip http web portpanel update-interval.....	6
1.12 ip http web portpanel visible.....	7
1.13 ip http web max-syslogs.....	7
1.14 show ip http.....	8

# Chapter 1 HTTP Configuration Commands

## 1.1 ip http language

### Syntax

To set the prompt language when a command is configured, run the following command.

```
[no] ip http language { english}
```

### Parameters

Parameters	Description
english	Sets the language to English.

### Default Value

None

### Usage Guidelines

This command is configured in global configuration mode.

### Example

The following example shows how to set the language to English.

```
Switch_config#ip http language english
```

## 1.2 ip http port

### Syntax

To set the HTTP port, run the following command. To return to the default setting, use the no form of this command.

```
ip http port { portNumber }
no ip http port
```

### Parameters

Parameters	Description
portNumber	Means the HTTP port's valid range is from 1 to 65535.

**Default Value**

80

**Usage Guidelines**

This command is configured in global configuration mode.

**Example**

The following example shows how to set the HTTP port to 1234.

```
Switch_config#ip http port 1234
```

## 1.3 ip http secure-port

**Syntax**

To set the HTTPS port, run this command. To return to the default setting, use the no form of this command.

```
ip http secure-port {portNumber}  
no ip http secure-port
```

**Parameters**

Parameters	Description
<i>portNumber</i>	Means the HTTPS port's valid range is from 1 to 65535.

**Default Value**

443

**Usage Guidelines**

This command is configured in global configuration mode.

**Example**

The following example shows how to set the HTTPS port to 1234.

```
Switch_config# ip http secure-port 1234
```

## 1.4 ip http server

**Syntax**

To set the HTTP service, run this command.

[no] ip http server

#### Usage Guidelines

This command is set in global configuration mode.

#### Example

The following example shows how to set the HTTP service.

Switch\_config# ip http server

## 1.5 ip http http-access enable

#### Syntax

[no] ip http http-access enable

To set the HTTP access mode, run this command.

#### Usage Guidelines

This command is set in global configuration mode and used to access the website, which starts with `http://`.

#### Example

The following example shows how to set the HTTP access mode.

Switch\_config# ip http http-access enable

## 1.6 ip http ssl-access enable

#### Syntax

[no] ip http ssl-access enable

To set the HTTPS access mode, run this command.

#### Usage Guidelines

This command is set in global configuration mode and used to access the website, which starts with `https://`.

#### Example

The following example shows how to set the HTTPS access mode.

Switch\_config# ip http ssl-access enable

## 1.7 ip http web use-footer

### Syntax

`ip http web use-footer`

To configure “About” option on the Web page, run the command.

`no ip http web use-footer`

To remove “About” option on the Web page, run the command.

### Usage Guidelines

This command is set in global configuration mode.

### Example

The following example shows how to hide “About” option on the Web page.

```
Switch_config# no ip http web use-footer
```

## 1.8 ip http web max-vlan

### Syntax

`ip http web max-vlan { max-vlan }`

To set the maximum number of VLAN entries displayed in a web page, run this command.

`no ip http web max-vlan`

To resume the default maximum number of VLAN entries to 100, run this command.

### Parameters

Parameters	Notes:
<i>max-vlan</i>	Means the maximum number of vlan entries in the web page, which ranges from 1 to 4094.

### Default Value

100

### Usage Guidelines

This command is configured in global configuration mode.

### Example

The following example shows how to set the maximum number of VLAN entries displayed in a web page to 123.

---

```
Switch_config# ip http web max-vlan 123
```

## 1.9 ip http web max-macaddr-table

### Syntax

```
ip http web max-macaddr-table { max-macaddr-table }
```

To configure the max number of MAC address item shown on the Web page, run the command.

```
no ip http web max-macaddr-table
```

To return the max number of MAC address item shown on the Web page to 100, run the command.

### Parameters

Parameters	Description
<i>max-macaddr-table</i>	The max number of MAC address items shown on the Web page, the valid range is 1 to 500.

### Default Value

100

### Usage Guidelines

This command is set in global configuration mode.

### Example

The following example shows how to set the max number of MAC address items on the Web page.

```
Switch_config# ip http web max-macaddr-table 123
```

## 1.10 ip http web igmp-groups

### Syntax

```
ip http web igmp-groups { igmp-groups }
```

To set the maximum number of multicast entries displayed in a web page, run this command.

```
no ip http web igmp-groups
```

To resume the default maximum number of multicast entries to 15, run this command.

## Parameters

Parameters	Notes:
<i>igmp-groups</i>	Means the maximum number of multicast entries in the web page, which ranges from 1 to 100.

## Default Value

15

## Usage Guidelines

This command is configured in global configuration mode.

## Example

The following example shows how to set the maximum number of multicast entries displayed in a web page to 12.

```
Switch_config#ip http web igmp-groups 12
```

## 1.11 ip http web portpanel update-interval

### Syntax

```
ip http web portpanel update-interval { update-interval }
```

To configure the update interval of the web port panel, run the command.

```
no ip http web portpanel update-interval
```

To return the update interval of the web port panel to 1 minute, run the command.

## Parameters

Parameters	Description
<i>update-interval</i>	The update interval of the web port panel. The valid range is 1 to 5.

## Default Value

1

## Usage Guidelines

This command is set in global configuration mode.

## Example

The following example shows how to set the update interval of the web port panel to 3 minutes.

```
Switch_config#ip http web portpanel update-interval 3
```

## 1.12 ip http web portpanel visible

### Syntax

```
ip http web portpanel visible
```

To enable the port panel of the web page visible, run the command.

```
no ip http web portpanel visible
```

To disable the port panel of the web page visible, run the command.

### Usage Guidelines

This command is set in global configuration mode.

### Example

The following example shows how to disable the port panel of the web page.

```
Switch_config#no ip http web portpanel visible
```

## 1.13 ip http web max-syslogs

### Syntax

```
ip http web max-syslogs { max-syslogs }
```

To configure the max number of system logs shown on the Web page, run the command.

```
no ip http web max-syslogs
```

To return the max number of system logs shown on the Web page to 128, run the command.

### Parameters

Parameters	Description
<i>max-syslogs</i>	The max number of system logs. The valid range is 100 to 500.

### Default Value

128

### Usage Guidelines

This command is set in global configuration mode.

### Example

The following example shows how to set the max number of system logs to 200.

```
Switch_config#ip http web max-syslogs 200
```

## 1.14 show ip http

### Syntax

```
show ip http
```

### Usage Guidelines

The command is used to browse whether the HTTP server is enabled.

### Example

```
Switch_config#show ip http  
Http server is running
```