



Features

- ◆ Operating Data Rate up to 1.25Gbps
- ♦ 8 Wavelengths: 1470nm~1610nm CWDM DFB Laser Transmitter
- ♦ High sensitivity APD detector
- ♦ ≥32dB Power Budget
- Single 3.3V Power Supply and LVTTL Control Logic Interface
- Hot-Pluggable SFP Footprint Duplex LC
 Connector Interface
- Class 1 FDA and IEC60825-1 Laser Safety Compliant
- Operating Case Temperature

Standard: 0C~+70C

- ◆ Compliant with SFP MSA Specification
- ◆ Compliant with SFF-8472 MSA



Applications

- ◆ 1.25Gbps Ethernet
- ◆ Fiber Channel

Ordering Information

Part No.	Bit Rate	Link Budget	Interface	Temperature	DDMI
SNR-SFP-CXX-120*(note1)	1.25Gbps	≥32dB	LC	Standard	NO
SNR-SFP-CXX-120-D*(note2)	1.25Gbps	≥32dB	LC	Standard	YES

Note1: Standard version is SNR-SFP-CXX-120

Note2: XX refers to CWDM wavelength range 1470nm to 1610nm, XX=47, 49...59, 61.





CWDM* Wavelength (0~70C)

Band	Nomenclature	Wavelength(nm)			
Barra	Homonolatare	Min.	Тур.	Max.	
	К	1464	1470	1477.5	
S-band Short	L	1484	1490	1497.5	
Wavelength	М	1504	1510	1517.5	
	N	1524	1530	1537.5	
C-band Conventional	0	1544	1550	1557.5	
	Р	1564	1570	1577.5	
L-band Long Wavelength	Q	1584	1590	1597.5	
	R	1604	1610	1617.5	

CWDM*: 8 Wavelengths from 1470nm to 1610nm, each step 20nm.

Regulatory Compliance

Feature	Standard	Performance
Electrostatic Discharge (ESD) to the Electrical Pins	MIL-STD-883G Method 3015.7	Class 1C (>1000 V)
Electrostatic Discharge to the enclosure	EN 55024:1998+A1+A2 IEC-61000-4-2 GR-1089-CORE	Compliant with standards
Electromagnetic Interference (EMI)	FCC Part 15 Class B EN55022:2006 CISPR 22B :2006 VCCI Class B	Compliant with standards Noise frequency range: 30MHz to 6GHz. Good system EMI design practice required to achieve Class B margins. System margins are dependent on customer host board and chassis design.
Immunity	EN 55024:1998+A1+A2 IEC 61000-4-3	Compliant with standards. 1KHz sine-wave, 80% AM, from 80MHz to 1GHz. No effect on transmitter/receiver performance is detectable between these limits.
Laser Eye Safety	FDA 21CFR 1040.10 and 1040.11 EN (IEC) 60825-1:2007 EN (IEC) 60825-2:2004+A1	CDRH compliant and Class I laser product. TüV Certificate No. 50135086
Component Recognition	UL and CUL	UL file E317337



32 dB Power Budget CWDM SFP Transceivers

EN60950-1:2006		TüV Certificate No. 50135086
		(CB scheme)
RoHS6	2002/95/EC 4.1&4.2	Compliant with standards*note3
KUNSO	2005/747/EC 5&7&13	Compilant with standards

Note3: For update of the equipments and strict control of raw materials, SNR has the ability to supply the customized products since Jan 1st, 2007, which meet the requirements of RoHS6 (Restrictions on use of certain Hazardous Substances) of European Union.

In light of item 5 in RoHS exemption list of RoHS Directive 2002/95/EC, Item 5: Lead in glass of cathode ray tubes, electronic components and fluorescent tubes.

In light of item 13 in RoHS exemption list of RoHS Directive 2005/747/EC, Item 13: Lead and cadmium in optical and filter glass. The three exemptions are being concerned for SNR's transceivers, because SNR's transceivers use glass, which may contain Pb, for components such as lenses, isolators, and other components.

Product Description

The SNR-SFP-CXX-120 series single mode transceiver is small form factor pluggable module for 1x Fiber Channel and 1000BASE Ethernet. It is with the SFP 20-pin connector to allow hot plug capability. This module is designed for single mode fiber and operates at a nominal CWDM wavelength from 1470nm to 1610nm. There are 8 center wavelengths available as listed in the CWDM wavelength table. A guaranteed minimum optical power budget of 32dB is offered.

The transmitter section uses a CWDM multiple quantum well DFB laser and is a class 1 laser compliant according to International Safety Standard IEC-60825. The receiver section uses an integrated InGaAs detector preamplifier (IDP) mounted in an optical header and a limiting post-amplifier IC.

The SNR-SFP-CXX-120-D series are designed to be compliant with SFF-8472 Multi-Source Agreement (MSA).

Absolute Maximum Ratings

Parameter	Symbol	Min.	Max.	Unit
Storage Temperature	Ts	-40	+85	S
Supply Voltage	Vcc	-0.5	3.6	V
Operating Relative Humidity		-	95	%

^{*}Exceeding any one of these values may destroy the device immediately.

Recommended Operating Conditions

Para	ameter	Symbol		Min.	Typical	Max.	Unit
1	ting Case perature	T _A SNR-SFP-CXX-120		0		+70	Ĉ
Power Su	pply Voltage	Vcc		3.15	3.3	3.45	V
Power Su	Power Supply Current		Icc			300	mA
Date Rate	1xFC				1.063		Gbps



Performance Specifications – Electrical

 $(T_{OP} = 0 \text{ to } 70^{\circ}\text{C}, V_{CC} = 3.15 \text{ to } 3.45\text{V})$

Parai	neter	Symbol	Min.	Тур.	Max	Unit	Notes	
Transmitter								
LVPECL Inputs(Differential)		Vin	400		2000	mVpp	AC coupled input	
-	pedance ential)	Zin	85	100	115	ohm	Rin > 100 kohm @ DC	
TX_Dis	Disable		2		Vcc+0.3	V		
1 7_018	Enable		0		0.8	V		
TV EALILT	Fault		2		Vcc+0.3	V		
TX_FAULT	Normal		0		0.5	V		
			Rece	eiver				
	LVPECL Outputs (Differential)		400	800	1200	mVpp	AC coupled output*(note4)	
-	Output Impedance (Differential)		85	100	115	ohm		
BY LOS	LOS		2		Vcc+0.3	V		
RX_LOS -	Normal		0		0.8	V		
MOD D	=E (0:2)	VoH	2.5			V	With Carial ID	
וט_טואו	EF (0:2)	VoL	0		0.5	V	With Serial ID	

Optical and Electrical Characteristics

 $(T_{OP} = 0 \text{ to } 70^{\circ}\text{C}, V_{CC} = 3.15 \text{ to } 3.45\text{V})$

Parameter	Symbol	Min.	Typical	Max.	Unit
9µm Core Diameter SMF	L		100		km
Data Rate		1.	.25		Gbps
Trans	mitter				
Center Wavelength	λς	λс-6	λc	λc+7.5	nm
Spectral Width (-20dB)	Δλ			1	nm
Side Mode Suppression Ratio	SMSR	30			dB
Average Output Power*(note5)	Pout	0		5	dBm
Extinction Ratio*(note6)	ER	9			dB
Rise/Fall Time(20%~80%)	tr/tf			90	ps
Output Optical Eye*(note6)	Compliant with ANSI FC-PI specification*(note8)				
TX_Disable Assert Time	t_off			10	us
Pout@TX Disable Asserted	Pout			-45	dBm
Rec	eiver				
Center Wavelength	λ _C	1260		1450	nm
Receiver Sensitivity*(note7)	Pmin			-32	dBm
Receiver Overload	Pmax	-10			dBm
LOS De-Assert	LOSD			-33	dBm



32 dB Power Budget CWDM SFP Transceivers

LOS Assert	LOSA	-40		dBm
LOS Hysteresis*(note9)		0.5		dB

Note4: LVPECL logic, internally AC coupled.


Note5: Output is coupled into a 9/125µm single-mode fiber.


Note6: Filtered, measured with a PRBS 2⁷-1 test pattern @1.25Gbps.

Note7: Minimum average optical power measured at BER less than 1E-12, with a 2⁷-1 PRBS and ER=9dB.


Note9: LOS Hysteresis

Note8: Eye Pattern Mask

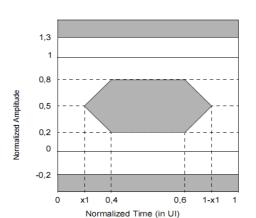

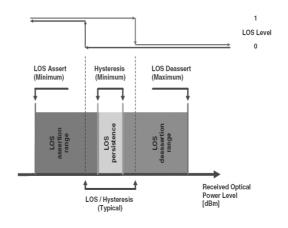



Functional Description of Transceiver

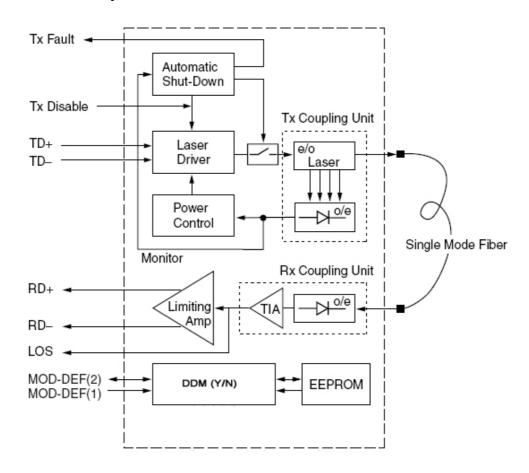



SFP Transceiver Electrical Pad Layout

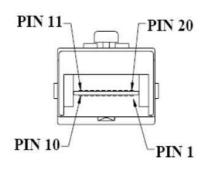

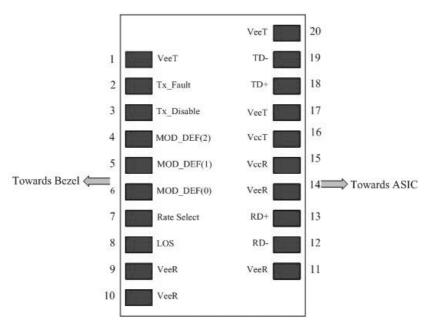

Pin Function Definition

Pin Num.	Name	Function	Plug Seq.	Notes
1	VeeT	Transmitter Ground	1	5)
2	TX Fault	Transmitter Fault Indication	3	1)
3	TX Disable	Transmitter Disable	3	2) Module disables on high or open
4	MOD-DEF2	Module Definition 2	3	3) Data line for Serial ID.
5	MOD-DEF1	Module Definition 1	3	3) Clock line for Serial ID.
6	MOD-DEF0	Module Definition 0	3	Grounded within the module.
7	Rate Select	Not Connect	3	Function not available
8	LOS	Loss of Signal	3	4)
9	VeeR	Receiver Ground	1	5)
10	VeeR	Receiver Ground	1	5)
11	VeeR	Receiver Ground	1	5)



32 dB Power Budget CWDM SFP Transceivers

12	RD-	Inv. Received Data Out	3	6)
13	RD+	Received Data Out	3	6)
14	VeeR	Receiver Ground	1	5)
15	VccR	Receiver Power	2	7) 3.3 ± 5%
16	VccT	Transmitter Power	2	7) 3.3 ± 5%
17	VeeT	Transmitter Ground	1	5)
18	TD+	Transmit Data In	3	8)
19	TD-	Inv. Transmit Data In	3	8)
20	VeeT	Transmitter Ground	1	5)

Notes

- 1) TX Fault is an open collector/drain output, which should be pulled up with a $4.7K 10K\Omega$ resistor on the host board. Pull up voltage between 2.0V and VccT/VccR+0.3V. When high, output indicates a laser fault of some kind. Low indicates normal operation. In the low state, the output will be pulled to < 0.8V.
- 2) TX disable is an input that is used to shut down the transmitter optical output. It is pulled up within the module with a $4.7 10 \text{ K}\Omega$ resistor. Its states are:

Low (0 - 0.8V): Transmitter on

(>0.8, < 2.0V): Undefined

High (2.0 – 3.465V): Transmitter Disabled

Open: Transmitter Disabled

- 3) Modulation Absent, connected to VEET or VEER in the module.
- 4) LOS (Loss of Signal) is an open collector/drain output, which should be pulled up with a $4.7K 10K\Omega$ resistor. Pull up voltage between 2.0V and VccT/VccR+0.3V. When high, this output indicates the received optical power is below the worst-case receiver sensitivity (as defined by the standard in use). Low indicates normal operation. In the low state, the output will be pulled to < 0.8V.
- 5) VeeR and VeeT may be internally connected within the SFP module.
- 6) RD-/+: These are the differential receiver outputs. They are AC coupled 100Ω differential lines which should be terminated with 100Ω (differential) at the user SERDES. The AC coupling is done inside the module and is thus not required on the host board. The voltage swing on these lines will be between 400 and 2000mV differential (200 –1000mV single ended) when properly terminated.
- 7) VccR and VccT are the receiver and transmitter power supplies. They are defined as 3.3V ±5% at the SFP connector pin. Maximum supply current is 300mA. Recommended host board



32 dB Power Budget CWDM SFP Transceivers

power supply filtering must compliant with MSA. Inductors with DC resistance of less than 1 ohm should be used in order to maintain the required voltage at the SFP input pin with 3.3V supply voltage. When the recommended supply-filtering network is used, hot plugging of the SFP transceiver module will result in an inrush current of no more than 30mA greater than the steady state value. VccR and VccT may be internally connected within the SFP transceiver module.

8) TD-/+: These are the differential transmitter inputs. They are AC-coupled, differential lines with 100Ω differential termination inside the module. The AC coupling is done inside the module and is thus not required on the host board. The inputs will accept differential swings of 400 - 2000mV (200 - 1000mV single-ended).


FFPROM


The serial interface uses the 2-wire serial CMOS EEPROM protocol defined for the ATMEL AT24C02/04 family of components. When the serial protocol is activated, the host generates the serial clock signal (SCL). The positive edge clocks data into those segments of the EEPROM that are not writing protected within the SFP transceiver. The negative edge clocks data from the SFP transceiver. The serial data signal (SDA) is bi-directional for serial data transfer. The host uses SDA in conjunction with SCL to mark the start and end of serial protocol activation. The memories are organized as a series of 8-bit data words that can be addressed individually or sequentially.

The Module provides diagnostic information about the present operating conditions. The transceiver generates this diagnostic data by digitization of internal analog signals. Calibration and alarm/warning threshold data is written during device manufacture. Received power monitoring, transmitted power monitoring, bias current monitoring, supply voltage monitoring and temperature monitoring all are implemented. If the module is defined as external calibrated, the diagnostic data are raw A/D values and must be converted to real world units using calibration constants stored in EEPROM locations 56 – 95 at wire serial bus address A2H. The digital diagnostic memory map specific data field define as following .For detail EEPROM information, please refer to the related document of SFF 8472 Rev 9.3.





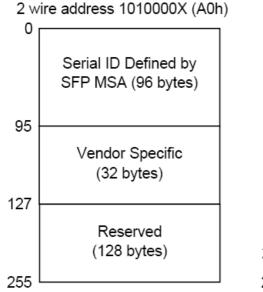

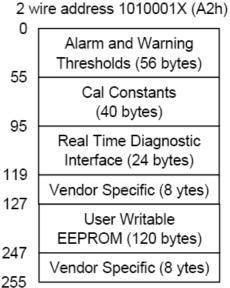

EEPROM Serial ID Memory Contents

Accessing Serial ID Memory uses the 2 wire address 1010000X (A0H). Memory Contents of Serial ID are shown in Table 1. The DDM information is with reference to SNR-SFP-CXX-120.

Table 1 Serial ID Memory Contents

Description Description	Addr.	Size (Bytes)	Name of Field	Hex	Description					
1		BASE ID FIELDS								
1 1 Ext. Identifier 04 serial ID only 2 1 Connector 07 LC Connector 3-10 8 Transceiver XX Transmitter Code 11 1 Encoding 03 NRZ 12 1 BR, Nominal XX ^(note10) 13 1 Reserved 00 14 1 Length (9μm)km 64 15 1 Length (9μm)Hom FF 16 1 Length (50μm) 10m 00 17 1 Length (62.5μm)10m 00 18 1 Length (Copper) 00 Not compliant 19 1 Reserved 00 Vendor name (ASCII) 20-35 16 Vendor name XX	0	1	Identifier	03	SFP					
3-10	1	1	Ext. Identifier	04	•					
11 1 Encoding 03 NRZ 12 1 BR, Nominal XX ^(note10) 13 1 Reserved 00 14 1 Length (9μm)km 64 15 1 Length (9μm)100m FF 16 1 Length (50μm) 10m 00 17 1 Length (62.5μm)10m 00 18 1 Length (Copper) 00 19 1 Reserved 00 20-35 16 Vendor name XX	2	1	Connector	07	LC Connector					
12	3-10	8	Transceiver	XX	Transmitter Code					
13	11	1	Encoding	= =	NRZ					
14 1 Length (9μm)km 64 15 1 Length(9μm)100m FF 16 1 Length (50μm) 10m 00 17 1 Length (62.5μm)10m 00 18 1 Length (Copper) 00 19 1 Reserved 00 20-35 16 Vendor name XX	12	1	BR, Nominal	XX ^(note10)						
15	13	1	Reserved	00						
16 1 Length (50μm) 10m 00 distance 17 1 Length (62.5μm)10m 00 Not compliant 18 1 Length (Copper) 00 Not compliant 19 1 Reserved 00 20-35 16 Vendor name XX	14	1	Length (9µm)km	64						
17	15	1	Length(9µm)100m	FF	Transceiver transmit					
18 1 Length (Copper) 00 Not compliant 19 1 Reserved 00 20-35 16 Vendor name XX	16	1	Length (50µm) 10m	00	distance					
19 1 Reserved 00 20-35 16 Vendor name XX	17	1	Length(62.5µm)10m	00						
XX XX XX XX XX XX XX XX	18	1	Length (Copper)	00	Not compliant					
20-35 16 Vendor name XX XX ^(note10) 20 20 20 Vendor name (ASCII) 36 1 Reserved 00 37-39 3 Vendor OUI XX XX XX ^(note10) 40-55 16 Vendor PN Transceiver part number	19	1	Reserved	00						
37-39 3 Vendor OUI XX XX XX ^(note10) 40-55 16 Vendor PN Transceiver part number	20-35	16	Vendor name	XX XX ^(note10) 20 20 20	Vendor name (ASCII)					
40-55 16 Vendor PN Transceiver part number	36	1	Reserved							
	37-39	3	Vendor OUI	XX XX XX ^(note10)						
56-59 4 Vendor rev XX XX XX XX XX XX XX	40-55	16	Vendor PN		Transceiver part number					
	56-59	4	Vendor rev	XX XX XX XX (note10)						

NAG LLC Page 9 of 16



32 dB Power Budget CWDM SFP Transceivers

60-61	2	Wavelength	06 0E	1550nm						
62	1	Reserved	00							
63	1	CC_BASE	Check Sum (Variable)	Check code for Base ID Fields						
				TX_DISABLE, TX_FAULT						
64-65	2	Options	00 1A	and Loss of Signal implemented.						
66	1	BR, max	00							
67	1	BR, min	00							
			XX XX XX XX XX XX	Serial Number of						
68-83	16	Vendor SN	XX XX 20 20 20 20 20 20 20 20 ^(note 10)	transceiver (ASCII). For example "B000822".						
84-91	8	Date Code	XX	Manufactory date code. For example "080405".						
92	1	Diagnostic Monitoring Type	XX ^(note10)	Digital diagnostic monitoring implemented						
93	1	Enhanced Options	XX ^(note10)	Optional flags						
94	1	SFF_8472 Compliance	XX ^(note10)	01 for diagnostics (Rev9.3 SFF-8472).						
95	1	CC_EXT	Check Sum (Variable)	Check sum for Extended ID Field.						
	VENDOR SPECIFIC ID FIELDS									
96-127	32	Vendor Specific	Read only	Depends on customer information						
128-255	128	Reserved	Read only							

Note10: The "xx" byte should be filled in according to practical case. For more information, please refer to the related document of SFP Multi-Source Agreement (MSA).

Digital Diagnostic Monitoring Interface (2-Wire Address A2H)

Alarm and Warning Thresholds (2 Wire Address A2H)

Address	# Bytes	Name of Field	Real Value	Unit
00-01	2	Temp High Alarm	105	Degree C
02-03	2	Temp Low Alarm	-45	Degree C
04-05	2	Temp High Warning	95	Degree C
06-07	2	Temp Low Warning	-42	Degree C
08-09	2	Voltage High Alarm	3.6	V
10-11	2	Voltage Low Alarm	2.9	V
12-13	2	Voltage High Warning	3.5	V
14-15	2	Voltage Low Warning	3.0	V
16-17	2	Bias High Alarm	90	Ма
18-19	2	Bias Low Alarm	2	Ма
20-21	2	Bias High Warning	80	Ма



32 dB Power Budget CWDM SFP Transceivers

22-23	2	Bias Low Warning	3	Ма
24-25	2	TX Power High Alarm	6	dBm
26-27	2	TX Power Low Alarm	-1	dBm
28-29	2	TX Power High Warning	5	dBm
30-31	2	TX Power Low Warning	0	dBm
32-33	2	RX Power High Alarm	-9	dBm
34-35	2	RX Power Low Alarm	-33	dBm
36-37	2	RX Power High Warning	-10	dBm
38-39	2	RX Power Low Warning	-32	dBm
40-55	16	Reserved		

Calibration Constants (2 Wire Address A2H)

Address	# Bytes	Name of Field	HEX	Description
56-59	4	RX_PWR (4)	00 00 00 00	Set to zero for "internally calibrated" devices.
60-63	4	RX_PWR (3)	00 00 00 00	Set to zero for "internally calibrated" devices.
64-67	4	RX_PWR (2)	00 00 00 00	Set to zero for "internally calibrated" devices.
68-71	4	RX_PWR (1)	3F 80 00 00	Set to 1 for "internally calibrated" devices.
72-75	4	RX_PWR (0)	00 00 00 00	Set to zero for "internally calibrated" devices.
76-77	2	TX_I (Slope)	01 00	Set to 1 for "internally calibrated" devices.
78-79	2	TX_I (Offset)	00 00	Set to zero for "internally calibrated" devices.
80-81	2	TX_PWR (Slope)	01 00	Set to 1 for "internally calibrated" devices.
82-83	2	TX_PWR (Offset)	00 00	Set to zero for "internally calibrated" devices.
84-85	2	T (Slope)	01 00	Set to 1 for "internally calibrated" devices.
86-87	2	T (Offset)	00 00	Set to zero for "internally calibrated" devices.
88-89	2	V (Slope)	01 00	Set to 1 for "internally calibrated" devices.
90-91	2	V (Offset)	00 00	Set to zero for "internally calibrated" devices.
92-94	3	Reserved	00 00 00	Reserved
95	1	Checksum	XX	Checksum of bytes 0 – 94.



32 dB Power Budget CWDM SFP Transceivers

A/D Value (2 Wire Address A2H)

Address	# Bytes	Name of Field	Description	
96-97	2	Temperature (MSB, LSB)	Internally measured module temperature	
98-99	2	Supply Voltage (MSB, LSB)	Internally measured supply voltage in	
90-99	2	Supply voltage (MSB, LSB)	module	
100-101	2	TX Bias Current (MSB, LSB)	Internally measured TX Bias current	
102-103	2	TX Optical Power (MSB, LSB)	Internally measured TX Optical Power	
104-105	2	RX Received Power (MSB,	Magazirad By input power	
104-105	2	LSB)	Measured Rx input power	
106-109	4	Reserved		

*Temperature (Signed twos complement value)

A2	A2H Byte 96 (Temperature MSB)							A2	H Byt	e 97 (Tempe	rature	LSB)		
S	2 ⁶	2 ⁵	2 ⁴	2 ³	2 ²	2 ¹	2 ⁰	2 ⁻¹	2 ⁻²	2 ⁻³	2 ⁻⁴	2 ⁻⁵	2 ⁻⁶	2 ⁻⁷	2 ⁻⁸

Supply Voltage, TX Bias Current, TX Optical Power, RX Received Power (Unsigned values)

<u> </u>	.,	<u></u>	, ,,		, ,	. • • • •		,			U U	(00.9			
A2H Byte 98 (Vcc MSB)									A	A2H B	yte 99	(Vcc L	SB)		
A2H Byte 100 (TX Bias MSB)								A2l	H Byte	101 (TX Bia	s LSB)		
	A2H	H Byte	102 (ΓX Pov	ver MS	SB)			A2H	Byte '	103 (T	X Pow	er LSE	3)	
A2H Byte 104 (RX Power MSB)								A2H	Byte 1	105 (R	X Pow	er LSE	3)		
2 ¹⁵	2 ¹⁴	2 ¹³	2 ¹²	2 ¹¹	2 ¹⁰	2 ⁹	2 ⁸	2 ⁷	2 ⁶	2 ⁵	2 ⁴	2 ³	2 ²	2 ¹	2 ⁰

The digital value conversions are updated every 13ms (nominal) or 20ms (max) in rotation. After getting digital value, each measurement could be obtained by multiplying digital value by corresponding LSB value:

Temperature = Temp (Digital Value) x LSBTemp = Temp (Digital Value) x 1/256; when Temperature<128

Temperature = Temp (Digital Value) x LSB_{Temp} = [Temp (Digital Value) x1/256]-256; when Temperature ≥128

Vcc = Vcc(Digital Value) x LSBvcc=Vcc(Digital Value) x 100Mv

TX Bias Current = TX Bias Current (Digital Value) x LSBTX,Bias = TX Bias Current (Digital Value) x 2Ma

TX Power = TX Power (Digital Value) x LSBTXPower = TX Power (Digital Value) x 0.1Mw

RX Power = RX Power (Digital Value) x LSB_{RXPower} = RX Power (Digital Value) x 0.1Mw

Status Bits and Alarm/Warning Flag Bits (2 Wire Address A2H)

Address	Bit	Name	Description
110	7	TX Disable State	Digital state of TX disable (1) and enabled (0)
110	6	Soft TX Disable	Not implemented
110	5-3	Reserved	
110	2	TX Fault State	1=TX failure state, 0=TX normal state
110	1	LOS	Digital state of LOS output pin. 0=optical signal
110	ľ		detected, 1=no optical signal detected
110	0	Data_Ready_Bar	Not implemented.
111	7-0	Reserved	Reserved
112	7	Temp High Alarm	Set when internal temperature exceeds high alarm
112	112 / Temp High Alaim		level.
112	6	Tomp Low Alarm	Set when internal temperature is below low alarm
112	O	Temp Low Alarm	level.



32 dB Power Budget CWDM SFP Transceivers


Set when internal supply voltage exceeds high alarm level.				
level. 112 4 Vcc Low Alarm 112 3 TX Bias High Alarm 112 2 TX Bias Low Alarm 112 1 TX Power High Alarm 113 5-0 Reserved 116 6 Temp Low Warning 116 4 Vcc Low Warning 117 3 TX Bias High Warning 118 4 Vcc Low Warning 119 5-0 TX Pisas Low Alarm 110 5-0 RX Power High Warning 1110 5-0 RX Power High Warning 1110 5-0 RX Power High Warning 1111 5-0 RX Power Bigh Warning 1111 5-0 RX Power Bigh Warning 1112 5-0 RX Power Bigh Warning 113 5-0 RX Power Bigh Warning 114-115 All Reserved 116 5 Vcc High Warning 117 7 RX Power High Warning 118 Set when internal temperature exceeds high warning level. 119 Set when internal supply voltage >high warning level. 110 Set when internal supply voltage < low warning level. 111 Set when TX Bias current exceeds high warning level. 111 Set when TX Bias current exceeds high warning level. 112 Set when TX Bias current exceeds high warning level. 113 Set when TX Bias current exceeds high warning level. 114 Set when TX Bias Current exceeds high warning level. 115 Set when TX Bias Current is below low warning level. 116 Set when TX Bias Current is below low warning level. 117 Set when TX Power is below low warning level. 118 Set when TX Power is below low warning level. 119 Set when TX Power is below low warning level. 110 Set when TX Power is below low warning level. 111 Set when TX Power is below low warning level. 111 Set when Received Power exceeds high warning level. 112 Set when Received Power is below low warning level. 113 Set when Received Power is below low warning level. 114 Set when Received Power is below low warning level. 115 Set when Received Power is below low warning level.	112	5	Vcc High Alarm	Set when internal supply voltage exceeds high alarm
112 4 Vcc Low Alarm level.			- v oo i ngii / iiaiiii	level.
Ievel.	112	1	Vcc Low Alarm	Set when internal supply voltage is below low alarm
112 2 TX Bias Low Alarm Set when TX Bias current is below low alarm level. 112 1 TX Power High Alarm Set when TX Power exceeds high alarm level. 113 7 RX Power High Alarm Set when TX Power is below low alarm level. 113 6 RX Power Low Alarm Set when Received Power exceeds high alarm level. 113 6 RX Power Low Alarm Set when Received Power is below low alarm level. 114 5-0 Reserved Alarm 114-115 All Reserved 116 7 Temp High Warning Set when internal temperature exceeds high warning level. 116 5 Vcc High Warning Set when internal temperature is below low warning level. 116 4 Vcc Low Warning Set when internal supply voltage >high warning level. 116 3 TX Bias High Warning Set when internal supply voltage < low warning level. 116 2 TX Bias Low Warning Set when TX Bias current exceeds high warning level. 116 1 TX Power High Warning Set when TX Power exceeds high warning level. 116 0 TX Power Low Warning Set when TX Power exceeds high warning level. 117 7 RX Power High Warning Set when TX Power is below low warning level. 117 8 RX Power Low Warning Set when Received Power exceeds high warning level. 117 6 RX Power Low Warning Set when Received Power exceeds high warning level. 117 5-0 Reserved Warning Set when Received Power is below low warning level.	112	7	VCC LOW Alaim	level.
1121TX Power High AlarmSet when TX Power exceeds high alarm level.1120TX Power Low AlarmSet when TX Power is below low alarm level.1137RX Power High AlarmSet when Received Power exceeds high alarm level.1136RX Power Low AlarmSet when Received Power is below low alarm level.1135-0Reserved Alarm114-115AllReserved1167Temp High WarningSet when internal temperature exceeds high warning level.1166Temp Low WarningSet when internal temperature is below low warning level.1165Vcc High WarningSet when internal supply voltage >high warning level.1164Vcc Low WarningSet when internal supply voltage < low warning level.	112	3	TX Bias High Alarm	Set when TX Bias current exceeds high alarm level.
112 0 TX Power Low Alarm Set when TX Power is below low alarm level. 113 7 RX Power High Alarm Set when Received Power exceeds high alarm level. 114 6 RX Power Low Alarm Set when Received Power is below low alarm level. 115 6 RX Power Low Alarm Set when Received Power is below low alarm level. 116 7 Reserved Set when internal temperature exceeds high warning level. 116 6 Temp High Warning Set when internal temperature is below low warning level. 116 5 Vcc High Warning Set when internal supply voltage >high warning level. 116 4 Vcc Low Warning Set when internal supply voltage < low warning level. 116 3 TX Bias High Warning Set when TX Bias current exceeds high warning level. 116 2 TX Bias Low Warning Set when TX Bias current is below low warning level. 116 1 TX Power High Warning Set when TX Power exceeds high warning level. 117 Y Power Low Warning Set when TX Power is below low warning level. 118 O RX Power Low Warning Set when Received Power exceeds high warning level. 119 Set when Received Power exceeds high warning level. 110 Set when Received Power is below low warning level. 111 Set when Received Power is below low warning level. 112 Set when Received Power is below low warning level. 113 Set when Received Power is below low warning level. 114 Set when Received Power is below low warning level.	112	2	TX Bias Low Alarm	Set when TX Bias current is below low alarm level.
113 7 RX Power High Alarm Set when Received Power exceeds high alarm level. 113 6 RX Power Low Alarm Set when Received Power is below low alarm level. 113 5-0 Reserved Alarm 114-115 All Reserved 116 7 Temp High Warning level. 116 6 Temp Low Warning level. 116 5 Vcc High Warning Set when internal temperature is below low warning level. 116 4 Vcc Low Warning Set when internal supply voltage >high warning level. 116 4 Vcc Low Warning Set when TX Bias current exceeds high warning level. 116 2 TX Bias High Warning Set when TX Bias current is below low warning level. 116 1 TX Power High Warning Set when TX Power exceeds high warning level. 116 0 TX Power Low Warning Set when Received Power exceeds high warning level. 117 7 RX Power Low Warning Set when Received Power is below low warning level. 117 6 RX Power Low Warning Set when Received Power is below low warning level. 117 5-0 Reserved Warning	112	1	TX Power High Alarm	Set when TX Power exceeds high alarm level.
113 6 RX Power Low Alarm Set when Received Power is below low alarm level. 114-115 All Reserved 116 7 Temp High Warning level. 116 6 Temp Low Warning Set when internal temperature exceeds high warning level. 116 5 Vcc High Warning Set when internal supply voltage > high warning level. 116 4 Vcc Low Warning Set when internal supply voltage < low warning level. 116 3 TX Bias High Warning Set when TX Bias current exceeds high warning level. 116 2 TX Bias Low Warning Set when TX Bias current is below low warning level. 116 1 TX Power High Warning Set when TX Power exceeds high warning level. 116 0 TX Power Low Warning Set when TX Power is below low warning level. 117 7 RX Power High Warning Set when Received Power exceeds high warning level. 118 Set when Received Power exceeds high warning level. 119 Set when Received Power is below low warning level. 110 Set when Received Power is below low warning level. 111 Set when Received Power is below low warning level. 112 Set when Received Power is below low warning level.	112	0	TX Power Low Alarm	Set when TX Power is below low alarm level.
1135-0Reserved Alarm114-115AllReserved1167Temp High WarningSet when internal temperature exceeds high warning level.1166Temp Low WarningSet when internal temperature is below low warning level.1165Vcc High WarningSet when internal supply voltage >high warning level.1164Vcc Low WarningSet when internal supply voltage < low warning level.	113	7	RX Power High Alarm	Set when Received Power exceeds high alarm level.
114-115AllReserved1167Temp High WarningSet when internal temperature exceeds high warning level.1166Temp Low WarningSet when internal temperature is below low warning level.1165Vcc High WarningSet when internal supply voltage >high warning level.1164Vcc Low WarningSet when TX Bias current exceeds high warning level.1163TX Bias High WarningSet when TX Bias current is below low warning level.1162TX Bias Low WarningSet when TX Power exceeds high warning level.1161TX Power High WarningSet when TX Power is below low warning level.1160TX Power Low WarningSet when Received Power exceeds high warning level.1177RX Power High WarningSet when Received Power is below low warning level.1176RX Power Low WarningSet when Received Power is below low warning level.1175-0Reserved Warning	113	6	RX Power Low Alarm	Set when Received Power is below low alarm level.
Temp High Warning Set when internal temperature exceeds high warning level. Temp Low Warning Set when internal temperature is below low warning level. Set when internal temperature is below low warning level. Set when internal supply voltage > high warning level. Set when internal supply voltage > high warning level. TX Bias High Warning Set when TX Bias current exceeds high warning level. TX Bias Low Warning Set when TX Bias current is below low warning level. TX Power High Warning Set when TX Power exceeds high warning level. TX Power Low Warning Set when TX Power is below low warning level. TX Power Low Warning Set when TX Power is below low warning level. TX Power Low Warning Set when Received Power exceeds high warning level. TX Power Low Warning Set when Received Power is below low warning level. Set when Received Power is below low warning level. Set when Received Power is below low warning level.	113	5-0	Reserved Alarm	
116 7 Temp High Warning level. 116 6 Temp Low Warning Set when internal temperature is below low warning level. 116 5 Vcc High Warning Set when internal supply voltage >high warning level. 116 4 Vcc Low Warning Set when internal supply voltage < low warning level. 116 3 TX Bias High Warning Set when TX Bias current exceeds high warning level. 116 2 TX Bias Low Warning Set when TX Bias current is below low warning level. 116 1 TX Power High Warning Set when TX Power exceeds high warning level. 116 0 TX Power Low Warning Set when TX Power is below low warning level. 117 7 RX Power High Warning Set when Received Power exceeds high warning level. 118 Set when TX Power is below low warning level. 119 Set when Received Power exceeds high warning level. 110 Set when Received Power is below low warning level. 111 Set warning Set when Received Power is below low warning level.	114-115	All	Reserved	
116 6 Temp Low Warning Set when internal temperature is below low warning level. 116 5 Vcc High Warning Set when internal supply voltage >high warning level. 116 4 Vcc Low Warning Set when internal supply voltage < low warning level. 116 3 TX Bias High Warning Set when TX Bias current exceeds high warning level. 116 2 TX Bias Low Warning Set when TX Bias current is below low warning level. 116 1 TX Power High Warning Set when TX Power exceeds high warning level. 116 0 TX Power Low Warning Set when TX Power is below low warning level. 117 7 RX Power Low Warning Set when TX Power is below low warning level. 118 Set when TX Power is below low warning level. 119 Set when Received Power exceeds high warning level. 110 Set when Received Power is below low warning level. 111 Set when Received Power is below low warning level. 112 Set when Received Power is below low warning level.	440	7	T	Set when internal temperature exceeds high warning
116 6 Temp Low Warning level. 116 5 Vcc High Warning Set when internal supply voltage >high warning level. 116 4 Vcc Low Warning Set when internal supply voltage < low warning level. 116 3 TX Bias High Warning Set when TX Bias current exceeds high warning level. 116 2 TX Bias Low Warning Set when TX Bias current is below low warning level. 116 1 TX Power High Warning Set when TX Power exceeds high warning level. 116 0 TX Power Low Warning Set when TX Power is below low warning level. 117 7 RX Power High Warning Set when Received Power exceeds high warning level. 118 Set when TX Power is below low warning level. 119 Set when Received Power exceeds high warning level. 110 Set when Received Power is below low warning level. 1110 Set when Received Power is below low warning level. 1111 Set when Received Power is below low warning level.	116	/	i emp High vvarning	level.
116 5 Vcc High Warning Set when internal supply voltage >high warning level.	110	•	Tanan Law Maraina	Set when internal temperature is below low warning
116 4 Vcc Low Warning Set when internal supply voltage < low warning level. 116 3 TX Bias High Warning Set when TX Bias current exceeds high warning level. 116 2 TX Bias Low Warning Set when TX Bias current is below low warning level. 116 1 TX Power High Warning Set when TX Power exceeds high warning level. 116 0 TX Power Low Warning Set when TX Power is below low warning level. 117 7 RX Power High Warning Set when TX Power is below low warning level. 118 Set when TX Power is below low warning level. 119 Set when TX Power is below low warning level. 119 Set when TX Power is below low warning level. 110 Set when Received Power is below low warning level. 111 Set when Received Power is below low warning level.	110	О	Temp Low Warning	level.
116 3 TX Bias High Warning Set when TX Bias current exceeds high warning level. 116 2 TX Bias Low Warning Set when TX Bias current is below low warning level. 116 1 TX Power High Warning Set when TX Power exceeds high warning level. 116 0 TX Power Low Warning Set when TX Power is below low warning level. 117 7 RX Power High Warning Set when Received Power exceeds high warning level. 118 Set when TX Power is below low warning level. 119 Set when Received Power exceeds high warning level. 110 Set when Received Power is below low warning level. 111 Set when Received Power is below low warning level.	116	5	Vcc High Warning	Set when internal supply voltage >high warning level.
116 2 TX Bias Low Warning Set when TX Bias current is below low warning level. 116 1 TX Power High Warning Set when TX Power exceeds high warning level. 116 0 TX Power Low Warning Set when TX Power is below low warning level. 117 7 RX Power High Warning Set when Received Power exceeds high warning level. 118 Set when Received Power exceeds high warning level. 119 Set when Received Power is below low warning level. 110 Set when Received Power is below low warning level. 1110 Set when Received Power is below low warning level.	116	4	Vcc Low Warning	Set when internal supply voltage < low warning level.
116 1 TX Power High Warning Set when TX Power exceeds high warning level. 116 0 TX Power Low Warning Set when TX Power is below low warning level. 117 7 RX Power High Warning Set when Received Power exceeds high warning level. 118 RX Power Low Warning Set when Received Power is below low warning level. 119 Set when Received Power is below low warning level. 110 Set when Received Power is below low warning level.	116	3	TX Bias High Warning	Set when TX Bias current exceeds high warning level.
116 1 Warning Set when TX Power exceeds high warning level. 116 0 TX Power Low Warning Set when TX Power is below low warning level. 117 7 RX Power High Warning Set when Received Power exceeds high warning level. 118 Set when TX Power is below low warning level. 119 Set when TX Power exceeds high warning level. 110 Set when TX Power exceeds high warning level. 110 Set when TX Power exceeds high warning level. 111 Set when TX Power is below low warning level. 112 Set when TX Power is below low warning level. 113 Set when TX Power exceeds high warning level. 114 Set when TX Power is below low warning level. 115 Set when TX Power is below low warning level. 116 Set when TX Power is below low warning level. 117 Set when TX Power is below low warning level.	116	2	TX Bias Low Warning	Set when TX Bias current is below low warning level.
TX Power Low Warning Set when TX Power is below low warning level. RX Power High Warning Set when Received Power exceeds high warning level. RX Power Low Warning RX Power Low Warning Set when Received Power is below low warning level. Set when Received Power is below low warning level. RX Power Low Warning RX Power Low Warning RX Power Low Warning	116	1	· ·	Set when TX Power exceeds high warning level
116 0 Warning Set when TX Power is below low warning level. 117 7 RX Power High Warning level. 117 6 RX Power Low Warning 117 5-0 Reserved Warning		·		Cot when the over execute high warming level.
Warning RX Power High Warning Warning RX Power Low Warning Set when Received Power exceeds high warning level. Set when Received Power is below low warning level. RX Power Low Warning RX Power Low Warning RX Power Low Warning	116	0	TX Power Low	Set when TX Power is below low warning level
117 7 Warning level. 117 6 RX Power Low Warning Set when Received Power is below low warning level. 117 5-0 Reserved Warning				The state of the s
Warning level. 117 6 RX Power Low Warning Set when Received Power is below low warning level. 117 5-0 Reserved Warning	117	7	RX Power High	Set when Received Power exceeds high warning
117 6 Warning Set when Received Power is below low warning level. 117 5-0 Reserved Warning	117	,		level.
Warning 117 5-0 Reserved Warning	117	6	RX Power Low	Set when Received Power is below low warning level
	117	J	Warning	Cot whom reconsed i ower is below low warning level.
118-119 All Reserved	117	5-0	Reserved Warning	
	118-119	All	Reserved	

Vendor Specific and User Accessible EEPROM (2 Wire Address A2H)


Address	# Bytes	Name	Description
120-127	8	Vendor Specific	Don't Access
128-247	120	User writable EEPROM	
248-255	8	Vendor Specific	Don't Access



Recommend Circuit Schematic

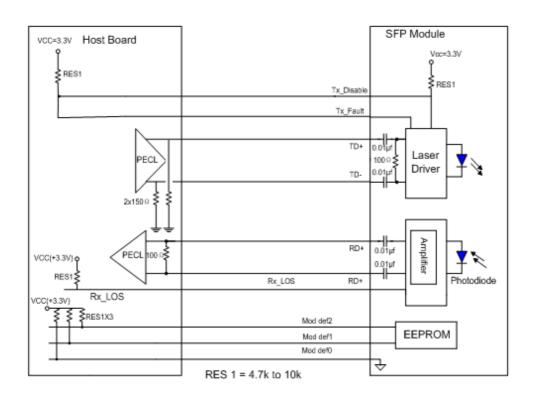


Mechanical Specifications

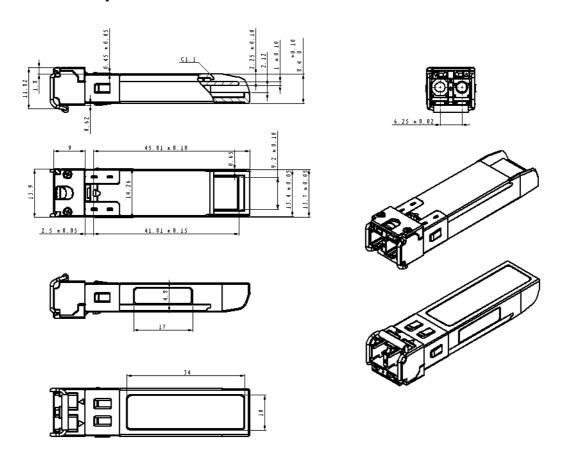



32 dB Power Budget CWDM SFP Transceivers

Class 1 Labels

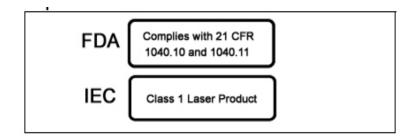

Laser Emission Data

Wavelength	> 1460nm
Total output power (as defined by FDA: 7mm aperture at 20cm distance)	<0.79Mw
Total output power (as defined by IEC: 7mm aperture at 10cm distance)	<10Mw
Beam divergence	12.5°

Laser Emission



Notice:

SNR reserves the right to make changes to or discontinue any optical link product or service identified in this publication, without notice, in order to improve design and/or performance. Applications that are described herein for any of the optical link products are for illustrative purposes only. SNR makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

32 dB Power Budget CWDM SFP Transceivers



GUARANTEE:



CONTACT:

Addres: Building 118, Vonsovskogo Street 1, Yekaterinburg, Russia

Tel: +7(343) 379-98-38 **Fax:** +7(343) 379-98-38

E-mail: info@nag.ru

Online shop: http://shop.nag.ru