

Content

CHAPTER 1 COMMANDS FOR DEVICE MANAGEMENT.....1

- 1.1 debug devsm.....1
- 1.2 force runcfg-sync.....1
- 1.3 force switchover.....1
- 1.4 reset slot.....1
- 1.5 runcfg-sync.....1
- 1.6 show fan.....1
- 1.7 show power.....2
- 1.8 show slot.....2

Chapter 1 Commands for Device Management

1.1 debug devsm

This command is not supported by the switch.

1.2 force runcfg-sync

This command is not supported by the switch.

1.3 force switchover

This command is not supported by the switch.

1.4 reset slot

This command is not supported by the switch.

1.5 runcfg-sync

This command is not supported by the switch.

1.6 show fan

Command: show fan

Function: Shows whether the fan tray is in place and its running status, and shows the speed of the fan.

Parameters: None.

Default: No display by default.

Command mode: Admin Mode.

Usage Guide: This command shows the fan running status. Fan board Inserted means whether the fan tray is in place; fan status indicates whether the fan is running normally and fan speed means the working speed of the fan.

Example:

SwitchT#show fan

Fan board information:

Fan No	Status	Speed
1	Normal	Medium
2	Normal	Medium
3	Normal	Medium
4	Normal	Medium
5	Normal	Medium

1.7 show power

Command: show power

Function: Shows if the power supply is in place and its running status.

Parameters: None.

Default: No display by default.

Command mode: Admin Mode.

Usage Guide: power Inserted means whether the power supply is in place; power Status means whether it is running status.

Example:

Switch#show power

System power information:

Power No	Inserted	Status
1	YES	Normal
2	YES	Abnormal

1.8 show slot

This command is not supported by the switch.