

Content

CHAPTER 1 COMMANDS FOR LAYER 3 MANAGEMENT 1-1

1.1 COMMANDS FOR LAYER 3 INTERFACE	1-1
1.1.1 description	1-1
1.1.2 interface vlan	1-1
1.1.3 no interface IFNAME	1-2
1.1.4 show ip route	1-2
1.2 COMMANDS FOR IPV4/V6 CONFIGURATION	1-3
1.2.1 clear ip traffic	1-3
1.2.2 clear ipv6 neighbor	1-3
1.2.3 debug ip icmp	1-4
1.2.4 debug ip packet	1-4
1.2.5 debug ipv6 packet	1-5
1.2.6 debug ipv6 icmp	1-5
1.2.7 debug ipv6 nd	1-6
1.2.8 ip address	1-7
1.2.9 ip default-gateway	1-7
1.2.10 ip route	1-8
1.2.11 ipv6 address	1-8
1.2.12 ipv6 default-gateway	1-9
1.2.13 ipv6 route	1-9
1.2.14 ipv6 redirect	1-9
1.2.15 ipv6 nd dad attempts	1-10
1.2.16 ipv6 nd ns-interval	1-10
1.2.17 ipv6 nd suppress-ra	1-10
1.2.18 ipv6 nd ra-lifetime	1-11
1.2.19 ipv6 nd min-ra-interval	1-11
1.2.20 ipv6 nd max-ra-interval	1-11
1.2.21 ipv6 nd prefix	1-11
1.2.22 ipv6 nd other-config-flag	1-11
1.2.23 ipv6 nd managed-config-flag	1-11
1.2.24 ipv6 neighbor	1-11
1.2.25 show ip interface	1-12

Commands for Layer 3 Forward and ARP	Content
1.2.26 show ip traffic.....	1-12
1.2.27 show ipv6 interface.....	1-14
1.2.28 show ipv6 route.....	1-15
1.2.29 show ipv6 neighbors	1-17
1.2.30 show ipv6 traffic.....	1-18
1.2.31 show ipv6 redirect.....	1-18
1.3 COMMANDS FOR ARP CONFIGURATION	1-19
1.3.1 arp.....	1-19
1.3.2 clear arp-cache.....	1-19
1.3.3 clear arp traffic	1-19
1.3.4 debug arp	1-20
1.3.5 ip proxy-arp	1-20
1.3.6 l3 hashselect.....	1-20
1.3.7 show arp.....	1-20
1.3.8 show arp traffic	1-21

CHAPTER 2 COMMANDS FOR ARP SCANNING PREVENTION

.....	2-1
2.1 ANTI-ARPCAN ENABLE.....	2-1
2.2 ANTI-ARPCAN PORT-BASED THRESHOLD	2-1
2.3 ANTI-ARPCAN IP-BASED THRESHOLD	2-2
2.4 ANTI-ARPCAN TRUST.....	2-2
2.5 ANTI-ARPCAN TRUST IP	2-3
2.6 ANTI-ARPCAN RECOVERY ENABLE	2-3
2.7 ANTI-ARPCAN RECOVERY TIME	2-4
2.8 ANTI-ARPCAN LOG ENABLE.....	2-4
2.9 ANTI-ARPCAN TRAP ENABLE	2-4
2.10 SHOW ANTI-ARPCAN.....	2-5
2.11 DEBUG ANTI-ARPCAN	2-6

CHAPTER 3 COMMANDS FOR PREVENTING ARP SPOOFING

.....	3-1
-------	-----

Commands for Layer 3 Forward and ARP	Content
3.1 IP ARP-SECURITY UPDATEPROTECT	3-1
3.2 IPV6 ND-SECURITY UPDATEPROTECT	3-1
3.3 IP ARP-SECURITY LEARNPROTECT	3-1
3.4 IPV6 ND-SECURITY LEARNPROTECT	3-2
3.5 IP ARP-SECURITY CONVERT	3-2
3.6 IPV6 ND-SECURITY CONVERT	3-2
3.7 CLEAR IP ARP DYNAMIC	3-2
3.8 CLEAR IPV6 ND DYNAMIC.....	3-3
CHAPTER 4 COMMAND FOR ARP GUARD	4-1
4.1 ARP-GUARD IP	4-1
CHAPTER 5 COMMANDS FOR GRATUITOUS ARP	
CONFIGURATION	5-1
5.1 IP GRATUITOUS-ARP.....	5-1
5.2 SHOW IP GRATUITOUS-ARP	5-1

Chapter 1 Commands for Layer 3 Management

1.1 Commands for Layer 3 Interface

1.1.1 description

Command: `description <text>`
`no description`

Function: Configure the description information of VLAN interface. The `no` command will cancel the description information of VLAN interface.

Parameter: `<text>` is the description information of VLAN interface, the length should not exceed 256 characters.

Default: Do not configure.

Command Mode: VLAN interface mode

Usage Guide: The description information of VLAN interface behind `description` and shown under the configured VLAN.

Example: Configure the description information of VLAN interface as test vlan.

```
Switch(config)#interface vlan 2
```

```
Switch(config-if-vlan2)#description test vlan
```

1.1.2 interface vlan

Command: `interface vlan <vlan-id>`
`no interface vlan <vlan-id>`

Function: Create a VLAN interface (a Layer 3 interface); the “`no interface vlan <vlan-id>`” command deletes the Layer 3 interface specified.

Parameters: `<vlan-id>` is the VLAN ID of the established VLAN, ranging from 1 to 4094.

Default: No Layer 3 interface is configured upon switch shipment.

Command mode: Global Mode

Usage Guide: When creating a VLAN interface (Layer 3 interface), VLANs should be configured first, for details, see the VLAN chapters. When VLAN interface (Layer 3 interface) is created with this command, the VLAN interface (Layer 3 interface)

configuration mode will be entered. After the creation of the VLAN interface (Layer 3 interface), interface vlan command can still be used to enter Layer 3 Port Mode. Configure 16 interface vlan to manage device that is supported by layer 2 switch, but layer 3 forward is not supported.

Example: Create a VLAN interface (layer 3 interface).

```
Switch(config)#interface vlan 1
Switch(Config-if-Vlan1)#
```

1.1.3 no interface IFNAME

Command: no interface IFNAME

Function: Delete the interface, deal with the interface vlan and interface loopback only.

Parameters: IFNAME: interface name.

Command Mode: Global mode.

Usage Guide: This command is used to delete the layer 3 interface. It can deal with the situation that the interface name is spelt in special way. IFNAME can match multiple ways, such as vlan1, Vlan1, v1, V1 and etc.

Example: Delete interface vlan1.

```
(config)# no interface vlan1
```

1.1.4 show ip route

Command: show ip route [database]

Function: Display routing table.

Parameter: database is database information.

Command Mode: Admin Mode

Usage Guide: Show kernal routing table, include: routing type, destination network, mask, next-hop address, interface, etc.

Example:

```
Switch#show ip route
```

Codes: C - connected, S - static, R - RIP derived, O - OSPF derived

A - OSPF ASE, B - BGP derived

Destination Mask Nexthop Interface Pref

```
C 2.2.2.0 255.255.255.0 0.0.0.0 vlan2 0
```

```
C 4.4.4.0 255.255.255.0 0.0.0.0 vlan4 0
```

```
    S 6.6.6.0 255.255.255.0 9.9.9.9 vlan9 1
```

Displayed information	Explanation
C -connected	Direct route, namely the segment directly

	connected with the layer 3 switch
S –static	Static route, the route manually configured by users
R - RIP derived	RIP route, acquired by layer 3 switch through the RIP protocol.
O - OSPF derived	OSPF route, acquired by layer 3 switch through the OSPF protocol
A- OSPF ASE	Route introduced by OSPF
B- BGP derived	BGP route, acquired by the BGP protocol.
Destination	Target network
Mask	Target network mask
Nexthop	Next-hop IP address
Interface	Next-hop pass-by layer 3 switch interfaces
Preference	Route priority. If other types of route to the target network exists, the kernel route will only shows those with high priority.

1.2 Commands for IPv4/v6 configuration

1.2.1 clear ip traffic

Command: clear ip traffic

Function: Clear the statistic information of IP protocol.

Parameter: None.

Command mode: Admin Mode.

Default: None.

Usage guide: Clear the statistic information of receiving and sending packets for IP kernel protocol, including the statistic of receiving packets, sending packets and dropping packets and the error information of receiving and sending packets for IP protocol, ICMP protocol, TCP protocol and UDP protocol.

Example: Clear statistic information of IP protocol.

Switch#clear ip traffic

1.2.2 clear ipv6 neighbor

Command: clear ipv6 neighbors

Function: Clear the neighbor cache of IPv6.

Parameter: None

Command Mode: Admin Mode

Default: None

Usage Guide: This command can not clear static neighbor.

Example: Clear neighbor list.

Switch#clear ipv6 neighbors

1.2.3 debug ip icmp

Command: debug ip icmp

no debug ip icmp

Function: The debugging for receiving and sending ICMP packets.

Parameter: None.

Default: None.

Command mode: Admin Mode

Usage Guide: None.

Example:

Switch#debug ip icmp

IP ICMP: sent, type 8, src 0.0.0.0, dst 20.1.1.1

Display	Description
IP ICMP: sent	Send ICMP packets
type 8	Type is 8 (PING request)
src 0.0.0.0	Source IPv4 address
dst 20.1.1.1	Destination IPv4 address

1.2.4 debug ip packet

Command: debug ip packet

no debug ip packet

Function: Enable the IP packet debug function: the “no debug IP packet” command disables this debug function.

Parameter: None

Default: IP packet debugging information is disabled by default.

Command mode: Admin Mode

Usage Guide: Displays statistics for IP packets received/sent, including source/destination address and bytes, etc.

Example: Enable IP packet debug.

Switch #debug ip packet

IP PACKET: sent, src 200.1.1.35, dst 224.0.0.9, size 312, proto 17, vrf 0

IP PACKET: rcvd, src 101.1.1.1, dst 224.0.0.9, size 312, proto 17, from Vlan200, vrf 0

1.2.5 debug ipv6 packet

Command: debug ipv6 packet

no debug ipv6 packet

Function: IPv6 data packets receive/send debug message.

Parameter: None

Default: None

Command Mode: Admin Mode

Usage Guide:

Example:

Switch#debug ipv6 packet

IPv6 PACKET: rcvd, src <fe80::203:fff:fe01:2786>, dst <fe80::1>, size <64>, proto <58>, from Vlan1

Displayed information	Explanation
IPv6 PACKET: rcvd	Receive IPv6 data report
Src <fe80::203:fff:fe01:2786>	Source IPv6 address
Dst <fe80::1>	Destination IPv6 address
size <64>	Size of data report
proto <58>	Protocol field in IPv6 header
from Vlan1	IPv6 data report is collected from Layer 3 port vlan1

1.2.6 debug ipv6 icmp

Command: debug ipv6 icmp

no debug ipv6 icmp

Function: ICMP data packets receive/send debug message.

Parameter: None

Default: None

Command Mode: Admin Mode

Usage Guide: None

Example:

Switch#debug ipv6 icmp

IPv6 ICMP: sent, type <129>, src <2003::1>, dst <2003::20a:ebff:fe26:8a49> from Vlan1

Displayed information	Explanation
IPv6 ICMP: sent	Send IPv6 data report
type <129>	Ping protocol No.
src <2003::1>	Source IPv6 address
dst <2003::20a:ebff:fe26:8a49>	Destination IPv6 address
from Vlan1	Layer 3 port being sent

1.2.7 debug ipv6 nd

Command: debug ipv6 nd [ns | na | rs | ra | redirect]

no debug ipv6 nd [ns | na | rs | ra | redirect]

Function: Enable the debug of receiving and sending operations for specified types of IPv6 ND messages. The ns, na, rs, ra and redirect parameters represent neighbor solicitation, neighbor advertisement, route solicitation, route advertisement and route redirect. No specification means to enable the debug for all five types of ND message. The no operation of this command will disable debug of receiving and sending operations for specified types of IPv6 ND messages, while no specification means to disable that for all five types of ND message.

Parameter: None.

Default: The debug of receiving and sending operations for all five types of IPv6 ND messages is disabled by default.

Command Mode: Admin Mode

Usage Guide: The ND protocol is an essential part of IPv6. This command can display the ND message of a specified type for troubleshooting.

Example:

Switch#debug ipv6 nd

IPv6 ND: rcvd, type <136>, src <fe80::203:fff:fe01:2786>, dst <fe80::203:fff:fe01:59ba>

Displayed information	Explanation
IPv6 ND: rcvd	Receive ND data report
type <136>	ND Type
src <fe80::203:fff:fe01:2786>	Source IPv6 address
dst <fe80::203:fff:fe01:59ba>	Destination IPv6 address

1.2.8 ip address

Command: ip address <ip-address> <mask> [secondary]

no ip address [<ip-address> <mask>] [secondary]

Function: Set IP address and net mask of switch; the “no ip address [<ip-address> <mask>] [secondary]” command deletes the IP address configuration.

Parameter: <ip-address> is IP address, dotted decimal notation; <mask> is subnet mask, dotted decimal notation; [secondary] indicates that the IP address is configured as secondary IP address.

Command Mode: VLAN interface configuration mode

Default: The system default is no IP address configuration.

Usage Guide: This command configures IP address on VLAN interface manually. If optional parameter **secondary** is not configured, then it is configured as the primary IP address of VLAN interface; if optional parameter **secondary** is configured, then that means the IP address is the secondary IP address of VLAN. One VLAN interface can only have one primary IP address and more than one secondary IP addresses. Primary IP and Secondary IP all can be used on SNMP/Web/Telnet management. Furthermore, the switch also provides BOOTP/DHCP manner to get IP address.

Example: The IP address of switch VLAN1 interface is set to 192.168.1.10/24.

```
Switch(Config-if-Vlan1)#ip address 192.168.1.10 255.255.255.0
```

1.2.9 ip default-gateway

Command: ip default-gateway <A.B.C.D>

no ip default-gateway <A.B.C.D>

Function: Configure the default gateway of the router. The no command cancels the configuration.

Parameter: <A.B.C.D> is gateway address, for example 10.1.1.10.

Command mode: Global mode.

Default: There is no default gateway.

Usage Guide: Configure the default gateway of the router to specify the default next hop address to which the packets will be sent.

Example:

Specify a default gateway:

```
Switch(config)# ip default-gateway 10.1.1.10
```

Cancel the setting of a default gateway:

```
Switch(config)# no ip default-gateway 10.1.1.10
```

1.2.10 ip route

Command: ip route {<ip-prefix> <mask> | <ip-prefix>/<prefix-length>}
{<gateway-address> | <gateway-interface>} [<distance>]

no ip route {<ip-prefix> <mask> | <ip-prefix>/<prefix-length>}
[<gateway-address> | <gateway-interface>] [<distance>]

Function: Configure the static route. The no command deletes the static route.

Parameter: <ip-prefix> and <mask> are respectively destination IP address and subnet mask, shown in dotted decimal notation; <ip-prefix> and <prefix-length> are respectively the destination IP address and the length of prefix; <gateway-address> is the next-hop IP address shown in dotted decimal notation; <gateway-interface> is the next-hop interface; < distance > is the distance value of route management, the range is 1 to 255.

Default: The default distance value of route management is 1.

Command Mode: Global Mode.

Usage Guide: When configuring the next-hop of static route, the next-hop IP address of route packets and the manner of egress or interface can be appointed.

The distance values of all kinds of the switch routes are the following:

Route Type	Distance Value
Directly Connected Routes	0
Static Routes	1
OSPF	110
RIP	120
IBGP	200
EBGP	20

At the case of no changing the distance value of all kinds of routes, the priority of directly connected routes is the highest, the static routes, EBGP, OSPF, RIP and IBGP are followed.

Example:

1. Add a static route.

```
Switch(config)#ip route 1.1.1.0 255.255.255.0 2.1.1.1
```

2. Add the default route.

```
Switch(config)#ip route 0.0.0.0 0.0.0.0 2.2.2.1
```

1.2.11 ipv6 address

Command: ipv6 address <ipv6-address/prefix-length> [eui-64]

no ipv6 address <ipv6-address/prefix-length> [eui-64]

Function: Configure aggregately global unicast address, site-local address and link-local address for the interface.

Parameter: Parameter *<ipv6-address>* is the prefix of IPv6 address, parameter *<prefix-length>* is the prefix length of IPv6 address, which is between 3-128, **eui-64** means IPv6 address is generated automatically based on eui64 interface identifier of the interface.

Command Mode: Interface Configuration Mode.

Default: None.

Usage Guide: IPv6 address prefix cannot be multicast address or any other specific IPv6 address, and different layer 3 interfaces cannot configure the same address prefix. For global unicast address, the length of the prefix must be greater than or equal to 3. For site-local address and link-local address, the length of the prefix must be greater than or equal to 10.

Example: Configure an IPv6 address on VLAN1 Layer 3 interface: the prefix is 2001:3f:ed8::99 and the length of the prefix is 64.

Switch(Config-if-Vlan1)#ipv6 address 2001:3f:ed8::99/64

1.2.12 ipv6 default-gateway

Command: `ipv6 default-gateway <X:X::X:X>`

`no ipv6 default-gateway <X:X::X:X>`

Function: Configure IPv6 default gateway of the router. The no command cancels the configuration.

Parameter: `< X:X::X:X >` is IPv6 address of the gateway, for example 2002:100::1.

Default: Do not configure IPv6 default gateway of the router.

Command mode: Global mode.

Usage Guide: Configure IPv6 default gateway of the router to specify the default next hop IPv6 address to which the packets will be sent.

Example:

Specify an IPv6 default gateway:

Switch(config)# ipv6 default-gateway 2002:100::1

Cancel the setting of IPv6 default gateway:

Switch(config)# no ipv6 default-gateway 2002:100::1

1.2.13 ipv6 route

This command is not supported by the switch.

1.2.14 ipv6 redirect

This command is not supported by the switch.

1.2.15 ipv6 nd dad attempts

Command: `ipv6 nd dad attempts <value>`

`no ipv6 nd dad attempts`

Function: Set Neighbor Solicitation Message number sent in succession by interface when setting Duplicate Address Detection.

Parameter: `<value>` is the Neighbor Solicitation Message number sent in succession by Duplicate Address Detection, and the value of `<value>` must be in 0-10, NO command restores to default value 1.

Command Mode: Interface Configuration Mode

Default: The default request message number is 1.

Usage Guide: When configuring an IPv6 address, it is required to process IPv6 Duplicate Address Detection, this command is used to configure the ND message number of Duplicate Address Detection to be sent, `value` being 0 means no Duplicate Address Detection is executed.

Example: The Neighbor Solicitation Message number sent in succession by interface when setting Duplicate Address Detection is 3.

```
Switch(Config-if-Vlan1)# ipv6 nd dad attempts 3
```

1.2.16 ipv6 nd ns-interval

Command: `ipv6 nd ns-interval <seconds>`

`no ipv6 nd ns-interval`

Function: Set the time interval of Neighbor Solicitation Message sent by the interface.

Parameter: parameter `<seconds>` is the time interval of sending Neighbor Solicitation Message, `<seconds>` value must be between 1-3600 seconds, `no` command restores the default value 1 second.

Command Mode: Interface Configuration Mode

Default: The default Request Message time interval is 1 second.

Usage Guide: The value to be set will include the situation in all routing announcement on the interface. Generally, very short time interval is not recommended.

Example: Set Vlan1 interface to send out Neighbor Solicitation Message time interval to be 8 seconds.

```
Switch(Config-if-Vlan1)#ipv6 nd ns-interval 8
```

1.2.17 ipv6 nd suppress-ra

This command is not supported by the switch.

1.2.18 ipv6 nd ra-lifetime

This command is not supported by the switch.

1.2.19 ipv6 nd min-ra-interval

This command is not supported by the switch.

1.2.20 ipv6 nd max-ra-interval

This command is not supported by the switch.

1.2.21 ipv6 nd prefix

This command is not supported by the switch.

1.2.22 ipv6 nd other-config-flag

This command is not supported by the switch.

1.2.23 ipv6 nd managed-config-flag

This command is not supported by the switch.

1.2.24 ipv6 neighbor

Command: `ipv6 neighbor <ipv6-address> <hardware-address> interface <interface-type interface-name>`
`no ipv6 neighbor <ipv6-address>`

Function: Set static neighbor table entry.

Parameters: Parameter *ipv6-address* is static neighbor IPv6 address, parameter *hardware-address* is static neighbor hardware address, *interface-type* is Ethernet type, *interface-name* is Layer 2 interface name.

Command Mode: Interface Configuration Mode

Default Situation: There is not static neighbor table entry.

Usage Guide: IPv6 address and multicast address for specific purpose and local address cannot be set as neighbor.

Example: Set static neighbor 2001:1:2::4 on port E1/1, and the hardware MAC address is

00-03-0f-89-44-bc.

```
Switch(Config-if-Vlan1)#ipv6 neighbor 2001:1:2::4 00-03-0f-89-44-bc interface Ethernet  
1/1
```

1.2.25 show ip interface

Command: show ip interface [*<ifname>* | vlan *<vlan-id>*] brief

Function: Show the brief information of the configured layer 3 interface.

Parameters: *<ifname>* Interface name; *<vlan-id>* VLAN ID.

Default: Show all brief information of the configured layer 3 interface when no parameter is specified.

Command mode: All modes.

Usage Guide: None.

Example:

```
Restarter#show ip interface vlan1 brief
```

Index	Interface	IP-Address	Protocol
3001	Vlan1	192.168.2.11	up

1.2.26 show ip traffic

Command: show ip traffic

Function: Display statistics for IP packets.

Command mode: Admin Mode

Usage Guide: Display statistics for IP, ICMP, TCP, UDP packets received/sent.

Example:

```
Switch#show ip traffic
```

IP statistics:

Rcvd: 3249810 total, 3180 local destination

0 header errors, 0 address errors

0 unknown protocol, 0 discards

Frag: 0 reassembled, 0 timeouts

0 fragment rcvd, 0 fragment dropped

0 fragmented, 0 couldn't fragment, 0 fragment sent

Sent: 0 generated, 3230439 forwarded

0 dropped, 0 no route

ICMP statistics:

Rcvd: 0 total 0 errors 0 time exceeded

0 redirects, 0 unreachable, 0 echo, 0 echo replies

0 mask requests, 0 mask replies, 0 quench

0 parameter, 0 timestamp, 0 timestamp replies
 Sent: 0 total 0 errors 0 time exceeded
 0 redirects, 0 unreachable, 0 echo, 0 echo replies
 0 mask requests, 0 mask replies, 0 quench
 0 parameter, 0 timestamp, 0 timestamp replies

TCP statistics:

TcpActiveOpens 0, TcpAttemptFails 0
 TcpCurrEstab 0, TcpEstabResets 0
 TcpInErrs 0, TcpInSegs 3180
 TcpMaxConn 0, TcpOutRsts 3
 TcpOutSegs 0, TcpPassiveOpens 8
 TcpRetransSegs 0, TcpRtoAlgorithm 0
 TcpRtoMax 0, TcpRtoMin 0

UDP statics:

UdpInDatagrams 0, UdpInErrors 0
 UdpNoPorts 0, UdpOutDatagrams 0

Displayed information	Explanation
IP statistics:	IP packet statistics.
Rcvd: 3249810 total, 3180 local destination 0 header errors, 0 address errors 0 unknown protocol, 0 discards	Statistics of total packets received, number of packets reached local destination, number of packets have header errors, number of erroneous addresses, number of packets of unknown protocols; number of packets dropped.
Frag: 0 reassembled, 0 timeouts 0 fragment rcvd, 0 fragment dropped 0 fragmented, 0 couldn't fragment, 0 fragment sent	Fragmentation statistics: number of packets reassembled, timeouts, fragments received, fragments discarded, packets that cannot be fragmented, number of fragments sent, etc.
Sent: 0 generated, 0 forwarded 0 dropped, 0 no route	Statistics for total packets sent, including number of local packets, forwarded packets, dropped packets and packets without route.
ICMP statistics:	ICMP packet statistics.
Rcvd: 0 total 0 errors 0 time exceeded 0 redirects, 0 unreachable, 0 echo, 0	Statistics of total ICMP packets received and classified information

<p>echo replies 0 mask requests, 0 mask replies, 0 quench 0 parameter, 0 timestamp, 0 timestamp replies</p>	
<p>Sent: 0 total 0 errors 0 time exceeded 0 redirects, 0 unreachable, 0 echo, 0 echo replies 0 mask requests, 0 mask replies, 0 quench 0 parameter, 0 timestamp, 0 timestamp replies</p>	<p>Statistics of total ICMP packets sent and classified information</p>
<p>TCP statistics:</p>	<p>TCP packet statistics.</p>
<p>UDP statistics:</p>	<p>UDP packet statistics.</p>

1.2.27 show ipv6 interface

Command: show ipv6 interface {brief|<interface-name>}

Function: Show interface IPv6 parameters.

Parameter: Parameter brief is the brief summarization of IPv6 status and configuration, and parameter interface-name is Layer 3 interface name.

Default: None

Command Mode: Admin and Configuration Mode

Usage Guide: If only brief is specified, then information of all L3 is displayed, and you can also specify a specific Layer 3 interface.

Example:

```
Switch#show ipv6 interface Vlan1
Vlan1 is up, line protocol is up, dev index is 2004
Device flag 0x1203(UP BROADCAST ALLMULTI MULTICAST)
IPv6 is enabled
Link-local address(es):
fe80::203:fff:fe00:10 PERMANENT
Global unicast address(es):
3001::1 subnet is 3001::1/64 PERMANENT
Joined group address(es):
ff02::1
ff02::16
```

```
ff02::2
ff02::5
ff02::6
ff02::9
ff02::d
ff02::1:ff00:10
ff02::1:ff00:1
MTU is 1500 bytes
ND DAD is enabled,    number of DAD attempts is 1
ND managed_config_flag is unset
ND other_config_flag is unset
ND NS interval is 1 second(s)
ND router advertisements is disabled
ND RA min-interval is 200 second(s)
ND RA max-interval is 600 second(s)
ND RA hoplimit is 64
ND RA lifetime is 1800 second(s)
ND RA MTU is 0
ND advertised reachable time is 0 millisecond(s)
ND advertised retransmit time is 0 millisecond(s)
```

Displayed information	Explanation
Vlan1	Layer 3 interface name
[up/up]	Layer 3 interface status
dev index	Internal index No.
fe80::203:fff:fe00:10	Automatically configured IPv6 address of Layer 3 interface
3001::1	Configured IPv6 address of Layer 3 interface

1.2.28 show ipv6 route

Command: show ipv6 route [database]

Function: Display IPv6 routing table.

Parameter: database is router database.

Default Situation: None.

Command Mode: Admin and Configuration Mode.

Usage Guide: show ipv6 route only shows IPv6 kernal routing table (routing table in

tcpip), database shows all routers except the local router.

Example:

Switch#show ipv6 route

Codes: C - connected, L - Local, S - static, R - RIP, O - OSPF,
I - IS-IS, B - BGP

```
S 2001:2::/32 via fe80::789, Vlan2 1024
S 2001:2:3:4::/64 via fe80::123, Vlan2 1024
O 2002:ca60:c801:1::/64 via ::, Vlan1 1024
C 2003:1::/64 via ::, Vlan4 256
S 2004:1:2:3::/64 via fe80:1::88, Vlan2 1024
O 2006:1::/64 via ::, Vlan1 1024
S 2008:1:2:3::/64 via fe80::250:baff:fef2:a4f4, Vlan1 1024
C 2008:2005:5:8::/64 via ::, Ethernet0 256
S 2009:1::/64 via fe80::250:baff:fef2:a4f4, Vlan1 1024
C 2022:1::/64 via ::, Ethernet0 256
O 3333:1:2:3::/64 via fe80::20c:ceff:fe13:eac1, Vlan12 1024
C 3ffe:501:ffff:1::/64 via ::, Vlan4 256
O 3ffe:501:ffff:100::/64 via ::, Vlan5 1024
O 3ffe:3240:800d:1::/64 via ::, Vlan1 1024
O 3ffe:3240:800d:2::/64 via ::, Vlan2 1024
O 3ffe:3240:800d:10::/64 via ::, Vlan12 1024
O 3ffe:3240:800d:20::/64 via fe80::20c:ceff:fe13:eac1, Vlan12 1024
C fe80::/64 via ::, Vlan1 256
C ff00::/8 via ::, Vlan1 256
```

Displayed information	Explanation
IPv6 Routing Table	IPv6 routing table status
Codes: K - kernel route, C - connected, S - static, R - RIP, O - OSPF, I - IS-IS, B - BGP > - selected route, * - FIB route, p - stale info	Abbreviation display sign of every entry
S 2009:1::/64 via fe80::250:baff:fef2:a4f4, Vlan1 1024	The static router in FIB table, of which the destination network segment is 2002::/64, via fe80::250:baff:fef2:a4f4 is the next hop, VLAN1 is the exit interface name, 1024 is router weight.

1.2.29 show ipv6 neighbors

Command: show ipv6 neighbors [{vlan|ethernet} interface-number | interface-name | address <ipv6address>]

Function: Display neighbor table entry information.

Parameter: Parameter {vlan|ethernet} interface-number|interface-name specify the lookup based on interface. Parameter ipv6-address specifies the lookup based on IPv6 address. It displays the whole neighbor table entry if without parameter.

Default Situation: None

Command Mode: Admin and Configuration Mode

Usage Guide:

Example:

```
Switch#show ipv6 neighbors
```

```
IPv6 neighbour unicast items: 14, valid: 11, matched: 11, incomplete: 0, delayed: 0,
manage items 5
```

IPv6 Address	Hardware Addr	Interface	Port
2002:ca60:c801:1:250:baff:fef2:a4f4	00-50-ba-f2-a4-f4		Vlan1
Ethernet1/2	reachable		
3ffe:3240:800d:1::100	00-03-0f-01-27-86		Vlan1
Ethernet1/3	reachable		
3ffe:3240:800d:1::8888	00-02-01-00-00-00		Vlan1
Ethernet1/1	permanent		
3ffe:3240:800d:1:250:baff:fef2:a4f4	00-50-ba-f2-a4-f4		Vlan1
Ethernet1/4	reachable		
fe80::250:baff:fef2:a4f4	00-50-ba-f2-a4-f4		Vlan1
Ethernet1/6	reachable		

IPv6 neighbour table: 11 entries

Displayed information	Explanation
IPv6 Address	Neighbor IPv6 address
Hardware Addr	Neighbor MAC address
Interface	Exit interface name
Port	Exit interface name
State	Neighbor status (reachable、statle、delay、probe、permanent、incomplete、unknow)

1.2.30 show ipv6 traffic

Command: show ipv6 traffic

Function: Display IPv6 transmission data packets statistics information.

Parameter: None

Default: None

Command Mode: Admin and Configuration Mode

Example:

Switch#show ipv6 traffic

IP statistics:

Rcvd: 90 total, 17 local destination
0 header errors, 0 address errors
0 unknown protocol, 13 discards

Frgs: 0 reassembled, 0 timeouts
0 fragment rcvd, 0 fragment dropped
0 fragmented, 0 couldn't fragment, 0 fragment sent

Sent: 110 generated, 0 forwarded
0 dropped, 0 no route

ICMP statistics:

Rcvd: 0 total 0 errors 0 time exceeded
0 redirects, 0 unreachable, 0 echo, 0 echo replies

Displayed information	Explanation
IP statistics	IPv6 data report statistics
Rcvd: 90 total, 17 local destination 0 header errors, 0 address errors 0 unknown protocol, 13 discards	IPv6 received packets statistics
Frgs: 0 reassembled, 0 timeouts 0 fragment rcvd, 0 fragment dropped 0 fragmented, 0 couldn't fragment, 0 fragment sent	IPv6 fragmenting statistics
Sent: 110 generated, 0 forwarded 0 dropped, 0 no route	IPv6 sent packets statistics

1.2.31 show ipv6 redirect

This command is not supported by the switch.

1.3 Commands for ARP Configuration

1.3.1 arp

Command: `arp <ip_address> <mac_address> {interface [ethernet] <portName>}`
`no arp <ip_address>`

Function: Configures a static ARP entry; the “`no arp <ip_address>`” command deletes a ARP entry of the specified IP address.

Parameters: `<ip_address>` is the IP address, at the same field with interface address; `<mac_address>` is the MAC address; `ethernet` stands for Ethernet port; `<portName>` for the name of layer2 port.

Default: No static ARP entry is set by default.

Command mode: VLAN Interface Mode

Usage Guide: Static ARP entries can be configured in the switch.

Example: Configuring static ARP for interface VLAN1.

```
Switch(Config-if-Vlan1)#arp 1.1.1.1 00-03-0f-f0-12-34 interface eth 1/2
```

1.3.2 clear arp-cache

Command: `clear arp-cache`

Function: Clears ARP table.

Command mode: Admin Mode

Example:

```
Switch#clear arp-cache
```

1.3.3 clear arp traffic

Command: `clear arp traffic`

Function: Clear the statistic information of ARP messages of the switch. For box switches, this command will only clear statistics of APP messages received and sent from the current boardcard.

Command mode: Admin Mode

Example:

```
Switch#clear arp traffic
```

1.3.4 debug arp

Command: debug arp {receive|send|state}

no debug arp {receive|send|state}

Function: Enables the ARP debugging function; the “no debug arp {receive|send|state}” command disables this debugging function.

Parameter: **receive** the debugging-switch of receiving ARP packets of the switch; **send** the debugging-switch of sending ARP packets of the switch; **state** the debugging-switch of APR state changing of the switch.

Default: ARP debug is disabled by default.

Command mode: Admin Mode.

Usage Guide: Display contents for ARP packets received/sent, including type, source and destination address, etc.

Example: Enable ARP debugging.

Switch#debug arp receive

```
%Jan 01 01:05:53 2006 IP ARP: rcvd, type REQUEST, src 172.16.1.251,
00-e0-4c-88-ad-bc, dst 172.16.1.110, 00-00-00-00-00-00 flag 0x0, pkt type 1, intf Vlan100.
```

```
%Jan 01 01:05:53 2006 IP ARP: rcvd, type REQUEST, src 172.16.1.251,
00-e0-4c-88-ad-bc, dst 172.16.1.110, 00-00-00-00-00-00 flag 0x0, pkt type 1, intf Vlan100.
```

```
e%Jan 01 01:05:53 2006 IP ARP: rcvd, type REQUEST, src 172.16.1.251,
00-e0-4c-88-ad-bc, dst 172.16.1.110, 00-00-00-00-00-00 flag 0x0, pkt type 1, intf Vlan100.
```

```
%Jan 01 01:05:53 2006 IP ARP: rcvd, type REQUEST, src 172.16.1.251,
00-e0-4c-88-ad-bc, dst172.16.1.110, 00-00-00-00-00-00 flag 0x0, pkt type 1, intf Vlan100.
```

1.3.5 ip proxy-arp

This command is not supported by the switch.

1.3.6 l3 hashselect

This command is not supported by the switch.

1.3.7 show arp

Command: show arp [<ipaddress>] [<vlan-id>] [<hw-addr>] [type {static | dynamic}] [count] [vrf word]

Function: Displays the ARP table.

Parameters: <ipaddress> is a specified IP address; <vlan-id> stands for the entry for the identifier of specified VLAN; <hw-addr> for entry of specified MAC address; **static** for

static ARP entry; **dynamic** for dynamic ARP entry; **count** displays number of ARP entries; **word** is the specified vrf name.

Command mode: Admin Mode

Usage Guide: Displays the content of current ARP table such as IP address, MAC address, hardware type, interface name, etc.

Example:

Switch#show arp

ARP Unicast Items: 7, Valid: 7, Matched: 7, Verifying: 0, Incomplete: 0, Failed: 0, None: 0

Address	Hardware Addr	Interface	Port	Flag
50.1.1.6	00-0a-eb-51-51-38	Vlan50	Ethernet1/1	Dynamic
50.1.1.9	00-00-00-00-00-09	Vlan50	Ethernet1/1	Static
150.1.1.2	00-00-58-fc-48-9f	Vlan150	Ethernet1/4	Dynamic

Displayed information	Explanation
Total arp items	Total number of ARP entries.
Valid	ARP entry number matching the filter conditions and attributing the legality states.
Matched	ARP entry number matching the filter conditions.
Verifying	ARP entry number at verifying again validity for ARP.
InCompleted	ARP entry number have ARP request sent without ARP reply.
Failed	ARP entry number at failed state.
None	ARP entry number at begin-found state.
Address	IP address of ARP entries.
Hardware Address	MAC address of ARP entries.
Interface	Layer 3 interface corresponding to the ARP entry.
Port	Physical (Layer2) port corresponding to the ARP entry.
Flag	Describes whether ARP entry is dynamic or static.

1.3.8 show arp traffic

Command: show arp traffic

Function: Display the statistic information of ARP messages of the switch. For box switches, this command will only show statistics of APP messages received and sent from the current boardcard.

Command mode: Admin and Config Mode

Usage Guide: Display statistics information of received and sent APP messages.

Example:

Switch#show arp traffic

ARP statistics:

Rcvd: 10 request, 5 response

Sent: 5 request, 10 response

Chapter 2 Commands for ARP Scanning Prevention

2.1 anti-arpscan enable

Command: anti-arpscan enable

no anti-arpscan enable

Function: Globally enable ARP scanning prevention function; “no anti-arpscan enable” command globally disables ARP scanning prevention function.

Parameters: None.

Default Settings: Disable ARP scanning prevention function.

Command Mode: Global configuration mode

User Guide: When remotely managing a switch with a method like telnet, users should set the uplink port as a Super Trust port before enabling anti-ARP-scan function, preventing the port from being shutdown because of receiving too many ARP messages. After the anti-ARP-scan function is disabled, this port will be reset to its default attribute, that is, Untrust port.

Example: Enable the ARP scanning prevention function of the switch.

```
Switch(config)#anti-arpscan enable
```

2.2 anti-arpscan port-based threshold

Command: anti-arpscan port-based threshold <threshold-value>

no anti-arpscan port-based threshold

Function: Set the threshold of received messages of the port-based ARP scanning prevention. If the rate of received ARP messages exceeds the threshold, the port will be closed. The unit is packet/second. The “no anti-arpscan port-based threshold” command will reset the default value, 10 packets/second.

Parameters: rate threshold, ranging from 2 to 200.

Default Settings: 10 packets /second.

Command Mode: Global Configuration Mode.

User Guide: the threshold of port-based ARP scanning prevention should be larger than the threshold of IP-based ARP scanning prevention, or, the IP-based ARP scanning prevention will fail.

Example: Set the threshold of port-based ARP scanning prevention as 10 packets

/second.

Switch(config)#anti-arp scan port-based threshold 10

2.3 anti-arp scan ip-based threshold

Command: anti-arp scan ip-based threshold <threshold-value>

no anti-arp scan ip-based threshold

Function: Set the threshold of received messages of the IP-based ARP scanning prevention. If the rate of received ARP messages exceeds the threshold, the IP messages from this IP will be blocked. The unit is packet/second. The “no anti-arp scan ip-based threshold” command will reset the default value, 3 packets/second.

Parameters: rate threshold, ranging from 1 to 200.

Default Settings: 3 packets/second.

Command Mode: Global configuration mode

User Guide: The threshold of port-based ARP scanning prevention should be larger than the threshold of IP-based ARP scanning prevention, or, the IP-based ARP scanning prevention will fail.

Example: Set the threshold of IP-based ARP scanning prevention as 6 packets/second.

Switch(config)#anti-arp scan ip-based threshold 6

2.4 anti-arp scan trust

Command: anti-arp scan trust [port | supertrust-port]

no anti-arp scan trust [port | supertrust-port]

Function: Configure a port as a trusted port or a super trusted port;” **no anti-arp scan trust <port | supertrust-port>**”command will reset the port as an untrusted port.

Parameters: None.

Default Settings: By default all the ports are non- trustful.

Command Mode: Port configuration mode

User Guide: If a port is configured as a trusted port, then the ARP scanning prevention function will not deal with this port, even if the rate of received ARP messages exceeds the set threshold, this port will not be closed, but the non- trustful IP of this port will still be checked. If a port is set as a super trusted port, then neither the port nor the IP of the port will be dealt with. If the port is already closed by ARP scanning prevention, it will be opened right after being set as a trusted port.

When remotely managing a switch with a method like telnet, users should set the uplink port as a Super Trust port before enabling anti-ARP-scan function, preventing the port

from being shutdown because of receiving too many ARP messages. After the anti-ARP-scan function is disabled, this port will be reset to its default attribute, that is, Untrust port.

Example: Set port ethernet 4/5 of the switch as a trusted port.

```
Switch(config)#in e4/5
```

```
Switch(Config-If-Ethernet4/5)# anti-arp scan trust port
```

2.5 anti-arp scan trust ip

Command: anti-arp scan trust ip *<ip-address>* [*<netmask>*]

no anti-arp scan trust ip *<ip-address>* [*<netmask>*]

Function: Configure trusted IP;" **no anti-arp scan trust ip** *<ip-address>* [*<netmask>*]"command reset the IP to non-trustful IP.

Parameters: *<ip-address>*: Configure trusted IP address; *<netmask>*: Net mask of the IP.

Default Settings: By default all the IP are non-trustful. Default mask is 255.255.255.255

Command Mode: Global configuration mode

User Guide: If a port is configured as a trusted port, then the ARP scanning prevention function will not deal with this port, even if the rate of received ARP messages exceeds the set threshold, this port will not be closed. If the port is already closed by ARP scanning prevention, its traffic will be recovered right immediately.

Example: Set 192.168.1.0/24 as trusted IP.

```
Switch(config)#anti-arp scan trust ip 192.168.1.0 255.255.255.0
```

2.6 anti-arp scan recovery enable

Command: anti-arp scan recovery enable

no anti-arp scan recovery enable

Function: Enable the automatic recovery function, "no anti-arp scan recovery enable" command will disable the function.

Parameters: None

Default Settings: Enable the automatic recovery function

Command Mode: Global configuration mode

User Guide: If the users want the normal state to be recovered after a while the port is closed or the IP is disabled, they can configure this function.

Example: Enable the automatic recovery function of the switch.

```
Switch(config)#anti-arp scan recovery enable
```

2.7 anti-arpscan recovery time

Command: anti-arpscan recovery time <seconds>

no anti-arpscan recovery time

Function: Configure automatic recovery time; “no anti-arpscan recovery time” command resets the automatic recovery time to default value.

Parameters: Automatic recovery time, in second ranging from 5 to 86400.

Default Settings: 300 seconds.

Command Mode: Global configuration mode

User Guide: Automatic recovery function should be enabled first.

Example: Set the automatic recovery time as 3600 seconds.

```
Switch(config)#anti-arpscan recovery time 3600
```

2.8 anti-arpscan log enable

Command: anti-arpscan log enable

no anti-arpscan log enable

Function: Enable ARP scanning prevention log function; “no anti-arpscan log enable” command will disable this function.

Parameters: None.

Default Settings: Enable ARP scanning prevention log function.

Command Mode: Global configuration mode

User Guide: After enabling ARP scanning prevention log function, users can check the detailed information of ports being closed or automatically recovered by ARP scanning prevention or IP being disabled and recovered by ARP scanning prevention. The level of the log is “Warning”.

Example: Enable ARP scanning prevention log function of the switch.

```
Switch(config)#anti-arpscan log enable
```

2.9 anti-arpscan trap enable

Command: anti-arpscan trap enable

no anti-arpscan trap enable

Function: Enable ARP scanning prevention SNMP Trap function; “no anti-arpscan trap enable” command disable ARP scanning prevention SNMP Trap function.

Parameters: None.

Default Settings: Disable ARP scanning prevention SNMP Trap function.

Command Mode: Global configuration mode

User Guide: After enabling ARP scanning prevention SNMP Trap function, users will receive Trap message whenever a port is closed or recovered by ARP scanning prevention, and whenever IP t is closed or recovered by ARP scanning prevention.

Example: Enable ARP scanning prevention SNMP Trap function of the switch.

```
Switch(config)#anti-arp scan trap enable
```

2.10 show anti-arp scan

Command: `show anti-arp scan [trust [ip | port | supertrust-port] [prohibited [ip | port]]`

Function: Display the operation information of ARP scanning prevention function.

Parameters: None.

Default Settings: Display every port to tell whether it is a trusted port and whether it is closed. If the port is closed, then display how long it has been closed. Display all the trusted IP and disabled IP.

Command Mode: Admin Mode

User Guide: Use “`show anti-arp scan trust port`” if users only want to check trusted ports. The reset follow the same rule.

Example: Check the operating state of ARP scanning prevention function after enabling it.

```
Switch(config)#show anti-arp scan
```

Total port: 28

Name	Port-property	beShut	shutTime(seconds)
Ethernet1/1	untrust	N	0
Ethernet1/2	untrust	N	0
Ethernet1/3	untrust	N	0
Ethernet1/4	untrust	N	0
Ethernet1/5	untrust	N	0
Ethernet1/6	untrust	N	0
Ethernet1/7	untrust	N	0
Ethernet1/8	untrust	N	0
Ethernet1/9	untrust	N	0
Ethernet1/10	untrust	N	0
Ethernet1/11	untrust	N	0
Ethernet1/12	untrust	N	0

Prohibited IP:

IP	shutTime(seconds)
1.1.1.2	132

Trust IP:

192.168.99.5	255.255.255.255
192.168.99.6	255.255.255.255

2.11 debug anti-arpscan

Command: debug anti-arpscan [port | ip]

no debug anti-arpscan [port | ip]

Function: Enable the debug switch of ARP scanning prevention; "**no debug anti-arpscan [port | ip]**" command disables the switch.

Parameters: None.

Default Settings: Disable the debug switch of ARP scanning prevention

Command Mode: Admin Mode

User Guide: After enabling debug switch of ARP scanning prevention users can check corresponding debug information or enable the port-based or IP-based debug switch separately whenever a port is closed by ARP scanning prevention or recovered automatically, and whenever IP t is closed or recovered .

Example: Enable the debug function for ARP scanning prevention of the switch.

```
Switch(config)#debug anti-arpscan
```

Chapter 3 Commands for Preventing ARP Spoofing

3.1 ip arp-security updateprotect

Command: ip arp-security updateprotect

no ip arp-security updateprotect

Function: Forbid ARP table automatic update. The "no ip arp-security updateprotect" command re-enables ARP table automatic update.

Parameter: None.

Default: ARP table automatic update.

Command Mode: Global Mode/ Interface configuration.

User Guide: Forbid ARP table automatic update, the ARP packets conflicting with current ARP item (e.g. with same IP but different MAC or port) will be dropped, the others will be received to update aging timer or create a new item; so, the current ARP item keep unchanged and the new item can still be learned.

Example:

```
Switch(Config-if-Vlan1)#ip arp-security updateprotect.
```

```
Switch(config)#ip arp-security updateprotect
```

3.2 ipv6 nd-security updateprotect

This command is not supported by the switch.

3.3 ip arp-security learnprotect

Command: ip arp-security learnprotect

no ip arp-security learnprotect

Function: Forbid ARP learning function of IPv4 Version, the "no ip arp-security learnprotect" command re-enables ARP learning function.

Parameter: None.

Default: ARP learning enabled.

Command Mode: Global Mode/ Interface Configuration.

Usage Guide: This command is for preventing the automatic learning and updating of ARP. Unlike ip arp-security updateprotect, once this command implemented, there will still

be timeout even if the switch keeps sending Request/Reply messages.

Example:

```
Switch(Config-if-Vlan1)# ip arp-security learnprotect  
Switch(config)# ip arp-security learnprotect
```

3.4 ipv6 nd-security learnprotect

This command is not supported by the switch.

3.5 ip arp-security convert

Command: ip arp-security convert

Function: Change all of dynamic ARP to static ARP.

Parameter: None

Command Mode: Global Mode/ Interface configuration

Usage Guide: This command will convert the dynamic ARP entries to static ones, which, in combination with disabling automatic learning, can prevent ARP binding. Once implemented, this command will lose its effect.

Example:

```
Switch(Config-if-Vlan1)#ip arp -security convert  
Switch(config)#ip arp -security convert
```

3.6 ipv6 nd-security convert

This command is not supported by the switch.

3.7 clear ip arp dynamic

Command: clear ip arp dynamic

Function: Clear all of dynamic ARP on interface.

Parameter: None

Command Mode: Interface Configuration

Usage Guide: This command will clear dynamic entries before binding ARP. Once implemented, this command will lose its effect.

Example:

```
Switch(Config-if-Vlan1)#clear ip arp dynamic
```

3.8 clear ipv6 nd dynamic

This command is not supported by the switch.

Chapter 4 Command for ARP GUARD

4.1 arp-guard ip

Command: arp-guard ip <addr>

no arp-guard ip <addr>

Function: Add an ARP GUARD address, the no command deletes ARP GUARD address.

Parameters: <addr> is the protected IP address, in dotted decimal notation.

Default: There is no ARP GUARD address by default.

Command Mode: Port configuration mode

Usage Guide: After configuring the ARP GUARD address, the ARP messages received from the ports configured ARP GUARD will be filtered. If the source IP addresses of the ARP message match the ARP GUARD address configured on this port, these messages will be judged as ARP cheating messages, which will be directly dropped instead of sending to the CPU of the switch or forwarding. 16 ARP GUARD addresses can be configured on each port.

Example:

Configure the ARP GUARD address on port ethernet1/1 as 100.1.1.1.

```
switch(config)#interface ethernet1/1
```

```
switch(Config-If-Ethernet 1/1)#arp-guard ip 100.1.1.1
```

Delete the ARP GUARD address on port ethernet1/1 as 100.1.1.1.

```
switch(config)#interface ethernet1/1
```

```
switch(Config-If-Ethernet 1/1)#no arp-guard ip 100.1.1.1
```

Chapter 5 Commands for Gratuitous ARP Configuration

5.1 ip gratuitous-arp

Command: ip gratuitous-arp [*<interval-time>*]

no ip gratuitous-arp

Function: To enable gratuitous ARP, and specify update interval for gratuitous ARP. The no form of this command will disable the gratuitous ARP configuration.

Parameters: *<interval-time>* is the update interval for gratuitous ARP with its value limited between 5 and 1200 seconds and with default value as 300 seconds.

Command Mode: Global Configuration Mode and Interface Configuration Mode.

Default: Gratuitous ARP is disabled by default.

Usage Guide: When configuring gratuitous ARP in global configuration mode, all the Layer 3 interfaces in the switch will be enabled to send gratuitous ARP request. If gratuitous ARP is configured in interface configuration mode, then only the specified interface is able to send gratuitous ARP requests. When configuring the gratuitous ARP, the update interval configuration from interface configuration mode has higher preference than that from the global configuration mode.

Example:

1) To enable gratuitous ARP in global configuration mode, and set the update interval to be 400 seconds.

```
Switch>enable
```

```
Switch#config
```

```
Switch(config)#ip gratuitous-arp 400
```

2) To enable gratuitous ARP for interface VLAN 10 and set the update interval to be 350 seconds.

```
Switch(config)#interface vlan 10
```

```
Switch(Config-if-Vlan10)#ip gratuitous-arp 350
```

5.2 show ip gratuitous-arp

Command: show ip gratuitous-arp [interface vlan *<vlan-id>*]

Function: To display configuration information about gratuitous ARP.

Parameters: *<vlan-id>* is the VLAN ID. The valid range for *<vlan-id>* is between 1 and

4094.

Command Mode: All the Configuration Modes.

Usage Guide: In all the configuration modes, the command **show ip gratuitous arp** will display information about the gratuitous ARP configuration in global and interface configuration mode. The command **show ip gratuitous-arp interface vlan <vlan-id>** will display information about the gratuitous ARP configuration about the specified VLAN interface.

Example:

- 1) To display information about gratuitous ARP configuration in both global and interface configuration modes.

```
Switch#show ip gratuitous-arp
```

```
Gratuitous ARP send is Global enabled, Interval-Time is 300(s)
```

```
Gratuitous ARP send enabled interface vlan information:
```

Name	Interval-Time(seconds)
Vlan1	400
Vlan10	350

- 2) To display gratuitous ARP configuration information about interface VLAN 10.

```
Switch#show ip gratuitous-arp interface vlan 10
```

```
Gratuitous ARP send interface Vlan10 information:
```

Name	Interval-Time(seconds)
Vlan10	350