

## Content

<b>CHAPTER 1 COMMANDS FOR SUPREME-RING.....</b>	<b>1-1</b>
1.1 CONTROL-VLAN .....	1-1
1.2 CLEAR SUPREME-RING STATISTICS .....	1-1
1.3 DEBUG SUPREME-RING .....	1-2
1.4 DEBUG SUPREME-RING PACKET RING .....	1-2
1.5 ENABLE .....	1-2
1.6 FAIL-TIMER.....	1-3
1.7 HELLO-TIMER .....	1-3
1.8 SUPREME-RING COMPATIBLE .....	1-4
1.9 SUPREME-RING ENABLE .....	1-4
1.10 SUPREME-RING POLL-TIME .....	1-5
1.11 SUPREME-RING RING.....	1-5
1.12 SUPREME-RING RING PRIMARY-PORT .....	1-5
1.13 SUPREME-RING RING SECONDARY-PORT .....	1-6
1.14 NODE-MODE .....	1-6
1.15 SHOW DEBUGGING SUPREME-RING.....	1-7
1.16 SHOW SUPREME-RING .....	1-7
1.17 SHOW SUPREME-RING STATISTICS .....	1-7
<b>CHAPTER 2 COMMANDS FOR ULPP.....</b>	<b>2-1</b>
2.1 CLEAR ULPP FLUSH COUNTER INTERFACE .....	2-1
2.2 CONTROL VLAN .....	2-1
2.3 DEBUG ULPP ERROR .....	2-1
2.4 DEBUG ULPP EVENT .....	2-2
2.5 DEBUG ULPP FLUSH CONTENT INTERFACE.....	2-2
2.6 DEBUG ULPP FLUSH {SEND   RECEIVE} INTERFACE .....	2-3
2.7 DESCRIPTION .....	2-3
2.8 FLUSH DISABLE ARP .....	2-4
2.9 FLUSH DISABLE MAC .....	2-4
2.10 FLUSH DISABLE MAC-VLAN .....	2-4
2.11 FLUSH ENABLE ARP .....	2-5
2.12 FLUSH ENABLE MAC.....	2-5
2.13 FLUSH ENABLE MAC-VLAN.....	2-6
2.14 PREEMPTION DELAY .....	2-6

---

2.15 PREEMPTION MODE .....	2-6
2.16 PROTECT VLAN-REFERENCE-INSTANCE .....	2-7
2.17 SHOW ULPP FLUSH COUNTER INTERFACE .....	2-7
2.18 SHOW ULPP FLUSH-RECEIVE-PORT .....	2-8
2.19 SHOW ULPP GROUP .....	2-8
2.20 ULPP CONTROL VLAN .....	2-9
2.21 ULPP FLUSH DISABLE ARP .....	2-9
2.22 ULPP FLUSH DISABLE MAC .....	2-10
2.23 ULPP FLUSH DISABLE MAC-VLAN .....	2-10
2.24 ULPP FLUSH ENABLE ARP .....	2-10
2.25 ULPP FLUSH ENABLE MAC .....	2-11
2.26 ULPP FLUSH ENABLE MAC-VLAN .....	2-11
2.27 ULPP GROUP .....	2-11
2.28 ULPP GROUP MASTER .....	2-12
2.29 ULPP GROUP SLAVE .....	2-12
<b>CHAPTER 3 COMMANDS FOR ULSM .....</b>	<b>3-1</b>
3.1 DEBUG ULSM EVENT .....	3-1
3.2 SHOW ULSM GROUP .....	3-1
3.3 ULSM GROUP .....	3-2
3.4 ULSM GROUP {UPLINK   DOWNLINK} .....	3-2

# Chapter 1 Commands for Supreme-ring

## 1.1 control-vlan

**Command:** control-vlan <vid>

no control-vlan

**Function:** Configure control VLAN ID of supreme-ring ring; the “no control-vlan” command deletes control VLAN ID.

**Parameter:** <vid> expresses control VLAN ID, the valid range is from 1 to 4094.

**Command Mode:** supreme-ring ring mode

**Default:** None

**Usage Guide:** One supreme-ring ring can own only one control vlan, one control vlan is only belongs to one supreme-ring ring. The control vlan of supreme-ring3.0 and the ring are also biunique. When two protocols are running, the control vlan of them must be the same. Under compatible, supreme-ring3.0 adopts control vlan to transmit packets, so the primary port and secondary port of the supreme-ring node should be joined the control vlan, otherwise the packets cannot be sent or received.

The supreme-ring enable command must be start before the control-vlan command be used. If primary port, secondary port, node-mode and enable commands all be configured after control-vlan, the supreme-ring ring function is enabled.

**Example:** Configure control VLAN of supreme-ring ring 100 is 100.

```
Switch(config)# supreme-ring ring 100
```

```
Switch(supreme-ring-ring-4000)#control-vlan 100
```

## 1.2 clear supreme-ring statistics

**Command:** clear supreme-ring statistics [<ring-id>]

**Function:** Clear statistic information of supreme-ring data packet of supreme-ring ring receiving and transferring.

**Parameter:** <ring-id> is supreme-ring ring ID, the valid range is from 1 to 4096, if not specified ID, it clears all of supreme-ring ring statistic information.

**Command Mode:** Admin Mode.

**Default:** None.

**Usage Guide:** None.

**Example:** Clear statistic information of supreme-ring ring 4000 of switch.

```
Switch#clear supreme-ring statistics 4000
```

## 1.3 debug supreme-ring

**Command:** debug supreme-ring

**no debug supreme-ring**

**Function:** Open supreme-ring debug information; “no description” command disables supreme-ring debug information.

**Command Mode:** Admin Mode

**Parameter:** None.

**Usage Guide:** Enable supreme-ring debug information, and check message process of supreme-ring protocol and receive data packet process, it is helpful to monitor debug.

**Example:** Enable debug information of supreme-ring protocol.

```
Switch#debug supreme-ring
```

## 1.4 debug supreme-ring packet ring

**Command:** debug supreme-ring packet ring [ringID]

**Function:** Enable the debug of supreme-ring ring and follow the protocol packet of each ring.

**Parameters:** ringID: the range is from 1 to 4096, it is the supreme-ring ring id.

**Command Mode:** Admin Mode

**Default:** Disable.

**Usage Guide:** Enable the debug information of supreme-ring ring to view the information of the supreme-ring protocol. It can monitor the fault.

**Example:** Enable the debug information of supreme-ring ring.

```
Switch#debug supreme-ring packet ring 100
```

## 1.5 enable

**Command:** enable

**no enable**

**Function:** Enable configured supreme-ring ring, the “no enable” command disables this enabled supreme-ring ring.

**Parameter:**

**Command Mode:** supreme-ring ring mode

**Default:** Default disable supreme-ring ring.

**Usage Guide:** Executing this command, it must enable supreme-ring protocol, and if other commands have configured, the supreme-ring ring is enabled.

**Example:** Configure supreme-ring ring 4000 of switch to primary node, and enable the supreme-ring ring.

```
Switch(config)#supreme-ring enable
Switch(config)#supreme-ring ring 4000
Switch(supreme-ring-ring-4000)#control-vlan 4000
Switch(supreme-ring-ring-4000)# node-mode master
Switch(supreme-ring-ring-4000)#fail-timer 18
Switch(supreme-ring-ring-4000)#hello-timer 6
Switch(supreme-ring-ring-4000)#enable
Switch(supreme-ring-ring-4000)#exit
Switch(config)#in ethernet 1/1
Switch(config-If-Ethernet1/1)#supreme-ring ring 4000 primary-port
Switch(config)#in ethernet 1/3
Switch(config-If-Ethernet1/3)#supreme-ring ring 4000 secondary-port
```

## 1.6 fail-timer

**Command:** `fail-timer <timer>`

`no fail-timer`

**Function:** Configure if the primary node of supreme-ring ring receive Timer interval of Hello packet or not, the “**no fail-timer**” command restores default timer interval.

**Parameter:** `<timer>` valid range is from 1 to 300s.

**Command Mode:** supreme-ring ring mode

**Default:** Default configure timer interval 3s.

**Usage Guide:** If primary node of supreme-ring ring doesn't receives Hello packet from primary port of primary node on configured fail timer, the whole loop is fail. Transfer node of supreme-ring doesn't need this timer and configure. To avoid time delay by transfer node forwards Hello packet, the value of fail timer must be more than or equal to 3 times of Hello timer. On time delay loop, it needs to modify the default and increase the value to avoid primary node doesn't receive Hello packet on fail timer due to time delay.

**Example:** Configure fail timer of supreme-ring ring 4000 to 10s.

```
Switch(config)# supreme-ring ring 4000
Switch(supreme-ring-ring-4000)#fail-timer 10
```

## 1.7 hello-timer

**Command:** `hello-timer <timer>`

**no hello-timer**

**Function:** Configure timer interval of Hello packet from primary node of supreme-ring ring, the “no hello-timer” command restores timer interval of default.

**Parameter:** <timer> valid range is from 1 to 100s.

**Command Mode:** supreme-ring ring mode

**Default:** Default configuration timer interval is 1s.

**Usage Guide:** The primary node of supreme-ring ring continuously sends Hello packet on configured Hello timer interval, if secondary port of primary node can receive this packet in configured period; the whole loop is normal, otherwise fail. Transfer node of supreme-ring ring doesn't need this timer and configure.

**Example:** Configure hello-timer of supreme-ring ring 4000 to 3 seconds.

```
Switch(config)# supreme-ring ring 4000
```

```
Switch(supreme-ring-ring-4000)#hello-timer 3
```

## 1.8 supreme-ring compatible

**Command:** supreme-ring compatible

**no supreme-ring compatible**

**function:** Configure the supreme-ring compatible to supreme-ring3.0 protocol.

**Parameters:** None.

**Command Mode:** Global Mode.

**Default:** It is not compatible.

**Usage Guide:** This command can be used only after enabling the supreme-ring protocol under the global mode.

**Example:**

```
Switch(config)#supreme-ring compatible
```

## 1.9 supreme-ring enable

**Command:** supreme-ring enable

**no supreme-ring enable**

**Function:** Enable supreme-ring protocol module, the “no supreme-ring enable” command disables supreme-ring protocol.

**Parameter:** None.

**Command Mode:** Global Mode.

**Default:** The system doesn't enable supreme-ring protocol module.

**Usage Guide:** If it needs to configure supreme-ring ring, it enables supreme-ring protocol.

Executing “**no supreme-ring enable**” command, it ensures to disable the switch enabled supreme-ring ring.

**Example:** Globally enable supreme-ring.

```
Switch(config)#supreme-ring enable
```

## 1.10 supreme-ring poll-time

**Command:** `supreme-ring poll-time <20-2000>`

**Function:** Configure the query interval of supreme-ring.

**Command mode:** Global mode.

**Usage Guide:** Configure the query time to adjust the query interval of supreme-ring, the default interval is 100ms.

**Example:** Set the query time as 200ms.

```
Switch(Config)# supreme-ring poll-time 200
```

## 1.11 supreme-ring ring

**Command:** `supreme-ring ring <ring-id>`

`no supreme-ring ring <ring-id>`

**Function:** Create supreme-ring ring, and access supreme-ring ring mode, the “**no supreme-ring ring<ring-id>**” command deletes configured supreme-ring ring.

**Parameter:** `<ring-id>` is supreme-ring ring ID, the valid range is from 1 to 4096.

**Command Mode:** Global Mode

**Usage Guide:** If this supreme-ring ring doesn't exist it create new supreme-ring ring when executing the command, and then it enter supreme-ring ring mode. It needs to ensure disable this supreme-ring ring when executing the “**no supreme-ring ring**” command.

**Example:**

```
Switch(config)#supreme-ring ring 100
```

## 1.12 supreme-ring ring primary-port

**Command:** `supreme-ring ring <ring-id> primary-port`

`no supreme-ring ring <ring-id> primary-port`

**Function:** Specify supreme-ring ring primary-port.

**Parameter:** `<ring-id>` is the ID of supreme-ring ring; range is `<1-4096>`.

**Command Mode:** Port mode

**Default:** None.

**Usage Guide:** The command specifies supreme-ring ring primary port. Primary node uses primary port to send Hello packet, secondary port is used to receive Hello packet from primary node. There are no difference on function between primary port and secondary of secondary node.

The supreme-ring enable command must be enabled before the control-vlan command be used. If primary port, secondary port, node-mode and enable commands all be configured after control-vlan, then the supreme-ring-ring function is enabled.

**Example:** Configure the primary of supreme-ring ring 4000 to Ethernet 1/1.

```
Switch(Config)#interface ethernet 1/1
```

```
Switch(config-If-Ethernet1/1)#supreme-ring ring 4000 primary-port
```

## 1.13 supreme-ring ring secondary-port

**Command:** `supreme-ring ring < ring-id > secondary-port`

`no supreme-ring ring < ring-id > secondary-port`

**Function:** Specify secondary of supreme-ring ring.

**Parameter:** `<ring-id>` is the ID of supreme-ring ring; range is `<1-4096>`.

**Command Mode:** Port mode

**Default:** None.

**Usage Guide:** The command specifies secondary port of supreme-ring ring. The primary node uses secondary port to receive Hello packet from primary node. There are no difference on function between primary port and secondary of secondary node.

The supreme-ring enable command must be enabled before the control-vlan command be used. If primary port, secondary port, node-mode and enable commands all be configured after control-vlan, then the supreme-ring-ring function is enabled.

**Example:** Configure secondary port of supreme-ring ring to 1/3.

```
Switch(config)#interface ethernet1/3
```

```
Switch(Config-If-Ethernet1/3)#supreme-ring ring 4000 secondary-port
```

## 1.14 node-mode

**Command:** `node-mode {maser | transit}`

**Function:** Configure the type of the node to primary node or secondary node.

**Parameter:** None.

**Command Mode:** supreme-ring ring mode.

**Default:** Default the node mode is secondary node.

**Usage Guide:** None.



**Example:** Configure the switch to primary node. supreme-ring ring 4000.

```
Switch(config)# supreme-ring ring 4000
```

```
Switch(supreme-ring-ring-4000)#node-mode master
```

## 1.15 show debugging supreme-ring

**Command:** show debugging supreme-ring

**Function:** Show the status of the debug on-off of supreme-ring.

**Parameter:** None.

**Command Mode:** Admin mode.

**Default:** None.

**Usage Guide:** None.

**Example:** Show the status of the debug on-off of supreme-ring.

```
Switch# show debugging supreme-ring
```

## 1.16 show supreme-ring

**Command:** show supreme-ring [*<ring-id>*]

**Function:** Display supreme-ring ring configuration.

**Parameter:** *<ring-id>* is supreme-ring ring ID, the valid range is from 1 to 4096, if not specified ID, it display all of supreme-ring ring configuration.

**Command Mode:** Admin and Configuration Mode.

**Default:** None

**Usage Guide:** None

**Example:** Display configuration of supreme-ring ring 4000 of switch

```
Switch# show supreme-ring 4000
```

## 1.17 show supreme-ring statistics

**Command:** show supreme-ring statistics [*<ring-id>*]

**Function:** Display statistic information of data packet of supreme-ring ring receiving and transferring.

**Parameter:** *<ring-id>* is supreme-ring ring ID, the valid range is from 1 to 4096, if not specified ID, it displays all of supreme-ring ring statistic information.

**Command Mode:** Admin and Configuration Mode.

**Default:** None

**Usage Guide:** None

**Example:** Display statistic information of supreme-ring ring 4000 of switch.

Switch# show supreme-ring statistic 4000

## Chapter 2 Commands for ULPP

### 2.1 clear ulpp flush counter interface

**Command:** clear ulpp flush counter interface *<name>*

**Function:** Clear the statistic information of the flush packets.

**Parameter:** *<name>* is the name of the port.

**Default:** None.

**Command mode:** Admin mode.

**Usage Guide:** None.

**Example:** Clear the statistic information of the flush packets for the port1/1.

```
Switch#clear ulpp flush counter interface e1/1
```

ULPP flush counter has been reset.

### 2.2 control vlan

**Command:** control vlan *<integer>*

no control vlan

**Function:** Configure the control VLAN of ULPP group; the no command restores the default value.

**Parameter:** *<integer>* is the control VLAN ID that sends the flush packets, range from 1 to 4094.

**Default:** The default is VLAN 1.

**Command mode:** ULPP group configuration mode.

**Usage Guide:** Configure the control VLAN of ULPP group. This VLAN must correspond the existent VLAN, after it is configured, this VLAN can't be deleted. It must belong to the VLAN protected by ULPP group to avoid flush packets loopback.

**Example:** Configure the sending control VLAN of ULPP group as 10.

```
Switch(config)# ulpp group 20
```

```
Switch(ulpp-group-20)# control vlan 10
```

### 2.3 debug ulpp error

**Command:** debug ulpp error

**no debug ulpp error**

**Function:** Show the error information of ULPP. The no operation disables showing the error information of ULPP.

**Parameter:** None.

**Default:** Do not display.

**Command mode:** Admin mode.

**Usage Guide:** None.

**Example:** Show the error information of ULPP.

```
Switch# debug ulpp error
```

```
Unrecognized Flush packet received.
```

## 2.4 debug ulpp event

**Command:** debug ulpp event

**no debug ulpp event**

**Function:** Show the event information of ULPP. The no operation disables showing the event information of ULPP.

**Parameter:** None.

**Default:** Do not display.

**Command mode:** Admin mode.

**Usage Guide:** None.

**Example:** Show the event information of ULPP.

```
Switch# debug ulpp event
```

```
ULPP group 1 state changes:
```

```
Master port ethernet 1/1 in ULPP group 1 changed state to Forwarding.
```

```
Slave port ethernet 1/2 in ULPP group 1 changed state to Standby.
```

## 2.5 debug ulpp flush content interface

**Command:** debug ulpp flush content interface *<name>*

**no debug ulpp flush content interface *<name>***

**Function:** Show the contents of the receiving flush packets. The no operation disables the shown contents.

**Parameter:** *<name>* is the name of the port.

**Default:** Do not display.

**Command mode:** Admin mode.

**Usage Guide:** None.

**Example:** Show the contents of the receiving flush packets for the port1/1.

```
Switch# debug ulpp flush content interface e1/1
```

Flush packet content:

Destination MAC: 01-03-0f-cc-cc-cc

Source MAC: 00-a0-cc-d7-5c-ea

Type: 8100

Vlan ID: 1

Length: 518

Control Type: 2

Control Vlan: 10

MAC number:0

Vlan Bitmap:

## 2.6 debug ulpp flush {send | receive} interface

**Command:** debug ulpp flush {send | receive} interface <name>

no debug ulpp flush {send | receive} interface <name>

**Function:** Show the information of the receiving/sending flush packets, it only shows the receiving packets, but do not show the detailed contents of the packets. The no operation disables the shown information.

**Parameter:** <name> is the name of the port.

**Default:** Do not display.

**Command mode:** Admin mode.

**Usage Guide:** None.

**Example:** Show the information that send the flush packets for the port1/1.

```
Switch# debug ulpp flush send interface e1/1
```

Flush packet send on port Ethernet 1/1.

## 2.7 description

**Command:** description <string>

no description

**Function:** Configure the description character string of ULPP group. The no command deletes the description.

**Parameter:** <string> is the name of ULPP group, the max number of the characters is 128.

**Default:** Do not configure ULPP name by default.

**Command mode:** ULPP group configuration mode.

**Usage Guide:** None.

**Example:** Configure the description of ULPP group as switch.

```
Switch(config)# ulpp group 20
```

```
Switch(ulpp-group-20)# description switch
```

## 2.8 flush disable arp

**Command:** flush disable arp

**Function:** Disable sending the flush packets of deleting ARP.

**Parameter:** None.

**Default:** By default, enable the sending function of the flush packets which are deleted by ARP.

**Command mode:** ULPP group configuration mode.

**Usage Guide:** If configure this command, when the link is switched, it will not actively send the flush packets to notify the upstream device to delete the entries of ARP.

**Example:** Disable sending the flush packets of deleting ARP.

```
Switch(config)# ulpp group 20
```

```
Switch(ulpp-group-20)# flush disable arp
```

## 2.9 flush disable mac

**Command:** flush disable mac

**Function:** Disable sending the flush packets of updating MAC address.

**Parameter:** None.

**Default:** By default, enable sending the flush packets of updating MAC address.

**Command mode:** ULPP group configuration mode.

**Usage Guide:** If configure this command, when the link is switched, it will not actively send the flush packets to notify the upstream device to update the MAC address table.

**Example:** Disable sending the flush packets of updating MAC address.

```
Switch(config)# ulpp group 20
```

```
Switch(ulpp-group-20)# flush disable mac
```

## 2.10 flush disable mac-vlan

**Command:** flush disable mac-vlan

**Function:** Disable sending the flush packets of deleting the dynamic unicast mac

according to vlan.

**Parameter:** None.

**Default:** Disable.

**Command mode:** ULPP group configuration mode.

**Usage Guide:** If configure this command, when the link is switched, it will not actively send the flush packets to notify the upstream device to delete the dynamic unicast mac according to vlan.

**Example:** Disable sending the flush packets deleted by mac-vlan.

```
Switch(config)#ulpp group 1
```

```
Switch(ulpp-group-1)#flush disable mac-vlan
```

## 2.11 flush enable arp

**Command:** flush enable arp

**Function:** Enable sending the flush packets of deleting ARP.

**Parameter:** None.

**Default:** By default, enable sending the flush packets of deleting ARP.

**Command mode:** ULPP group configuration mode.

**Usage Guide:** If enable this function, when the link is switched, it will actively send the flush packets to notify the upstream device, so as to delete the list entries of ARP.

**Example:** Enable sending the flush packets of deleting ARP.

```
Switch(config)# ulpp group 20
```

```
Switch(ulpp-group-20)# flush enable arp
```

## 2.12 flush enable mac

**Command:** flush enable mac

**Function:** Enable sending the flush packets of updating MAC address.

**Parameter:** None.

**Default:** By default, enable sending the flush packets of updating MAC address.

**Command mode:** ULPP group configuration mode.

**Usage Guide:** If enable this function, when the link is switched, it will actively send the flush packets to notify the upstream device, so as to update the MAC address table.

**Example:** Enable sending the flush packets of updating MAC address.

```
Switch(config)# ulpp group 20
```

```
Switch(ulpp-group-20)# flush enable mac
```

## 2.13 flush enable mac-vlan

**Command:** flush enable mac-vlan

**Function:** Enable sending the flush packets of deleting the dynamic unicast mac according to vlan.

**Parameter:** None.

**Default:** Disable.

**Command mode:** ULPP group configuration mode.

**Usage Guide:** If configure this command, when the link is switched, it will actively send the flush packets to notify the upstream device to delete the dynamic unicast mac according to vlan.

**Example:** Enable sending the flush packets deleted by mac-vlan.

```
Switch(config)#ulpp group 1
```

```
Switch(ulpp-group-1)#flush enable mac-vlan
```

## 2.14 preemption delay

**Command:** preemption delay *<integer>*

no preemption delay

**Function:** Configure the preemption delay, the no command configures the preemption delay as the default value.

**Parameter:** *<integer>*: the preemption delay, range from 1 to 600, in second.

**Default:** The default preemption delay is 30.

**Command mode:** ULPP group configuration mode.

**Usage Guide:** The preemption delay is the delay time before the master port is preempted as the forwarding state, for avoiding the link oscillation in a short time. After the preemption mode is enabled, the preemption delay takes effect.

**Example:** Configure the preemption delay as 50s for ULPP group.

```
Switch(config)# ulpp group 20
```

```
Switch(ulpp-group-20)# preemption delay 50
```

## 2.15 preemption mode

**Command:** preemption mode

no preemption mode

**Function:** Enable/disable the preemption mode of ULPP group.

**Parameter:** None.



**Default:** Do not preempt.

**Command mode:** ULPP group configuration mode.

**Usage Guide:** If the preemption mode configured by ULPP group, and the slave port is in forwarding state, and the master port is in the standby state, the master port will turn into the forwarding state and the slave port turn into the standby state after the preemption delay.

**Example:** Configure the preemption mode of ULPP group.

```
Switch(config)# ulpp group 20
```

```
Switch(ulpp-group-20)# preemption mode
```

## 2.16 protect vlan-reference-instance

**Command:** protect vlan-reference-instance *<instance-list>*

no protect vlan-reference-instance *<instance-list>*

**Function:** Configure the protective VLANs of ULPP group, the no command cancels the protective VLANs.

**Parameter:** *<instance-list>* is MSTP instance list, such as: i; j-k. The number of the instances is not limited in the list.

**Default:** Do not protect any VLANs by default that means any instances are not quoted.

**Command mode:** ULPP group configuration mode.

**Usage Guide:** Quote the instances of MSTP to protect the VLANs. The VLAN corresponds to this instance is at the forwarding state on one port of this group, and at the blocked state on another port of this group. Each ULPP group can quotes all instances of MSTP. And it can quotes the inexistent MSTP instances that means any VLANs are not protected, the different ULPP groups can't quote the same instance.

**Example:** Configure the protective VLAN quoted from instance 1 for ULPP group.

```
Switch(config)# ulpp group 20
```

```
Switch(ulpp-group-20)# protect vlan-reference-instance 1
```

## 2.17 show ulpp flush counter interface

**Command:** show ulpp flush counter interface {ethernet <IFNAME> | <IFNAME>}

**Function:** Show the statistic information of the flush packets.

**Parameter:** <IFNAME> is the name of the ports.

**Default:** None.

**Command mode:** Admin mode.

**Usage Guide:** Show the statistic information of the flush packets, such as: the information

of the flush packets number which has been received, the time information that receive the flush packets finally.

**Example:** Show the statistic information of the flush packets for ULPP group1.

```
Switch# show ulpp flush counter interface e1/1
Received flush packets: 10
```

## 2.18 show ulpp flush-receive-port

**Command:** show ulpp flush-receive-port

**Function:** Show the port which receive flush packet, flush type and control VLAN.

**Parameter:** None.

**Default:** None.

**Command mode:** Admin mode.

**Usage Guide:** None.

**Example:** Show the information that the port receives flush packets.

```
Switch# show ulpp flush-receive-port
ULPP flush-receive portlist:
Portname          Type  Control Vlan
-----
Ethernet1/1       ARP   1
Ethernet1/3       MAC   1;3;5-10
```

## 2.19 show ulpp group

**Command:** show ulpp group [group-id]

**Function:** Show the configuration information of the ULPP groups which have been configured.

**Parameter:** [group-id]: Show the information of the specific ULPP group.

**Default:** By default, show the information of all ULPP groups which have been configured.

**Command mode:** Admin mode.

**Usage Guide:** Show the configuration information of ULPP groups which have been configured, such as: the state of the master port and the slave port, the preemption mode, the preemption delay, etc.

**Example:** Show the configuration information of ULPP group1.

```
Switch# show ulpp group 1
ULPP group 1 information:
```

Description: abc

Preemption mode: on

Preemption delay: 30s

Control VLAN:1

Protected VLAN: Reference Instance 1

Member	Role	State
-----		
Ethernet1/1	MASTER	FORWARDING
Ethernet1/2	SLAVE	STANDBY

## 2.20 ulpp control vlan

**Command:** `ulpp control vlan <vlan-list>`  
**no ulpp control vlan <vlan-list>**

**Function:** Configure the receiving control VLANs of the port, the no command restores the default value.

**Parameter:** `<vlan-list>` specify the control VLAN list that receives the flush packets, such as: i; j-k. The number of VLANs in Each character string cannot exceed 100. The receiving control VLAN of the port can be added.

**Default:** The default is VLAN 1.

**Command mode:** Port mode.

**Usage Guide:** Configure the receiving control VLAN for the port. This VLAN must correspond the existent VLAN, after it is configured, this VLAN can't be deleted.

**Example:** Configure the receiving control VLAN as 10.

```
Switch(config)# interface ethernet 1/1
Switch(config-If-Ethernet1/1)# ulpp control vlan 10
```

## 2.21 ulpp flush disable arp

**Command:** `ulpp flush disable arp`

**Function:** Disable receiving the flush packets of deleting ARP.

**Parameter:** None.

**Default:** By default, disable receiving the flush packets of deleting ARP.

**Command mode:** Port mode.

**Usage Guide:** If this command is configured, then it will not receive the flush packets of deleting ARP.

**Example:** Disable receiving the flush packets of deleting ARP.

```
Switch(config)# interface ethernet 1/1
Switch(config-If-Ethernet1/1)# ulpp flush disable arp
```

## 2.22 ulpp flush disable mac

**Command:** `ulpp flush disable mac`

**Function:** Disable receiving the flush packets of updating MAC address.

**Parameter:** None.

**Default:** By default, disable receiving the flush packets of updating MAC address.

**Command mode:** Port mode.

**Usage Guide:** If this command is configured, then it will not receive the flush packets of updating MAC address.

**Example:** Disable receiving the flush packets of updating MAC address.

```
Switch(config)# interface ethernet 1/1
Switch(config-If-Ethernet1/1)# ulpp flush disable mac
```

## 2.23 ulpp flush disable mac-vlan

**Command:** `ulpp flush disable mac-vlan`

**Function:** Disable receiving the flush packets of mac-vlan type.

**Parameter:** None.

**Default:** Disable.

**Command mode:** Port mode.

**Usage Guide:** If enabling this function, forward the hardware of the flush packets with mac-vlan type received in port. It will not be analyzed.

**Example:** Disable receiving the flush packets deleted by mac-vlan of port.

```
Switch(config)#interface e1/2
Switch(config-if-ethernet1/2)#ulpp flush disable mac-vlan
```

## 2.24 ulpp flush enable arp

**Command:** `ulpp flush enable arp`

**Function:** Enable receiving the flush packets of deleting ARP.

**Parameter:** None.

**Default:** By default, disable receiving the flush packets of deleting ARP.

**Command mode:** Port mode.

**Usage Guide:** Enable this function to receive the flush packets which delete ARP.

**Example:** Enable receiving of the flush packets of deleting ARP.

```
Switch(config)# interface ethernet 1/1  
Switch(config-If-Ethernet1/1)# ulpp flush enable arp
```

## 2.25 ulpp flush enable mac

**Command:** `ulpp flush enable mac`

**Function:** Enable receiving the flush packets of updating MAC address.

**Parameter:** None.

**Default:** By default, disable receiving the flush packets of updating MAC address.

**Command mode:** Port mode.

**Usage Guide:** Enable receiving the flush packets of updating MAC address table.

**Example:** Enable receiving the flush packets of updating the MAC address.

```
Switch(config)# interface ethernet 1/1  
Switch(config-If-Ethernet1/1)# ulpp flush enable mac
```

## 2.26 ulpp flush enable mac-vlan

**Command:** `ulpp flush enable mac-vlan`

**Function:** Enable receiving the flush packets of mac-vlan type.

**Parameter:** None.

**Default:** Disable.

**Command mode:** Port mode.

**Usage Guide:** If enabling this function, configure the interface to receive the flush packets handled mac-vlan type and delete the dynamic unicast mac according to vlan information in the packets.

**Example:** Enable receiving the flush packets deleted by mac-vlan of port.

```
Switch(config)#interface e1/2  
Switch(config-if-ethernet1/2)#ulpp flush enable mac-vlan
```

## 2.27 ulpp group

**Command:** `ulpp group <integer>`

`no ulpp group <integer>`

**Function:** Create a ULPP group. If this group exists, then enter the configuration mode of ULPP group. The no command deletes a ULPP group.

**Parameter:** `<integer>` is the ID of ULPP group, range from 1 to 48.

**Command mode:** Global Mode.

**Default:** Any ULPP groups are not configured.

**Usage Guide:** None.

**Example:** Configure ulpp group 20 or enter the mode of ulpp group 20.

```
Switch(config)# ulpp group 20
```

```
Switch(ulpp-group-20)#
```

## 2.28 ulpp group master

**Command:** `ulpp group <integer> master`

`no ulpp group <integer> master`

**Function:** Configure the master port of ULPP group, the no command deletes the master port.

**Parameter:** `<integer>` is the ID of ULPP group, range from 1 to 48.

**Default:** There is no master port configured by default.

**Command mode:** Port mode.

**Usage Guide:** There is no sequence requirement for the master and slave port configuration in a group, but the protective VLANs must be configured before the member ports. Each group has only one master port, if the master port exists, then the configuration fail.

**Example:** Configure the master port of ULPP group.

```
Switch(config)# interface ethernet 1/1
```

```
Switch(config-If-Ethernet1/1)# ulpp group 20 master
```

## 2.29 ulpp group slave

**Command:** `ulpp group <integer> slave`

`no ulpp group <integer> slave`

**Function:** Configure the slave port of ULPP group, the no command deletes the slave port.

**Parameter:** `<integer>` is the ID of ULPP group, the range from 1 to 48.

**Default:** There is no slave port configured by default.

**Command mode:** Port mode.

**Usage Guide:** There is no sequence requirement for the master and slave port configuration in a group, but the protective VLANs must be configured before the member ports. Each group has only one slave port, if the slave port exists, then the configuration is fail.

**Example:** Configure the slave port of ULPP group.

```
Switch(config)# interface ethernet 1/2
```

```
Switch(config-If-Ethernet1/2)# ulpp group 20 slave
```

# Chapter 3 Commands for ULSM

## 3.1 debug ulsm event

**Command:** debug ulsm event  
no debug ulsm event

**Function:** Show the event information of ULSM. The no operation disables showing ULSM events.

**Parameter:** None.

**Default:** None.

**Command mode:** Admin Mode.

**Usage Guide:** None.

**Example:** Show the event information of ULSM.

```
Switch# debug ulsm event
```

Downlink synchronized with ULSM group, change state to Down.

## 3.2 show ulsm group

**Command:** show ulsm group [group-id]

**Function:** Show the configuration information of ULSM group.

**Parameter:** [group-id]: the ID of ULSM group.

**Default:** By default, show the information of all ULSM groups which have been configured.

**Command mode:** Admin Mode.

**Usage Guide:** None.

**Example:** Show the configuration information of ULSM group1.

```
Switch# show ulsm group 1
```

ULSM group 1 information:

ULSM group state: Down

Member	Role	State	Down by ULSM
ethernet1/1	UpLINK	Down	
ethernet1/2	DownLINK	Down	Yes



### 3.3 ulsm group

**Command:** `ulsm group <group-id>`

`no ulsm group <group-id>`

**Function:** Create a ULSM group. The no command deletes the ULSM group.

**Parameter:** `<group-id>` is the ID of ULSM group, range from 1 to 32.

**Default:** There is no ULSM group configured by default.

**Command mode:** Global Mode.

**Usage Guide:** None.

**Example:** Create ULSM group 10.

```
Switch(config)# ulsm group 10
```

### 3.4 ulsm group {uplink | downlink}

**Command:** `ulsm group <group-id> {uplink | downlink}`

`no ulsm group <group-id>`

**Function:** Configure the uplink/downlink ports of ULSM group. The no command deletes the uplink/downlink ports.

**Parameter:** `<group-id>`: The ID of ULSM group, the range from 1 to 32.

**uplink:** Configure the port as the uplink port.

**downlink:** Configure the port as the downlink port.

**Default:** The port does not belong to any ULSM group.

**Command mode:** Port Mode.

**Usage Guide:** Configure the uplink/downlink ports of ULSM group. Each ULSM group can configure 8 uplink ports and 16 downlink ports at most.

**Example:** Configure port1/3 as the uplink port of ULSM group10.

```
Switch(config)# interface ethernet 1/3
```

```
Switch(config-If-Ethernet1/3)# ulsm group 10 uplink
```