

Contents

<i>SNR-VP-51 IP Phone Auto Provisioning Parameter List.....</i>	3
Autoprovision Configuration.....	3
Network Configuration.....	4
TR069 Configuration.....	6
Account Configuration.....	8
Call Forward Configuration.....	14
BroadSoft Configuration.....	16
Remote Phone Book Configuration.....	16
LDAP Configuration.....	17
AreaCode Configuration.....	17
Feature Configuration.....	17
Setting Configuration.....	20
CallLog Configuration.....	24
Programmable Key Configuration.....	25
Voice Configuration.....	32
Tone Configuration.....	33
XML Browser Configuration.....	33
Download Configuration.....	34

SNR-VP-5x IP Phone Auto Provisioning

Parameter List

Parameter Name	Description
Autoprovision Configuration	
Config.Autoprovision.General.Url	Configure the url of the auto provisioning server. The range of the value length is 1~127 characters.
Config.Autoprovision.General.Username	Configure the username and password for the phone to be authenticated by the auto provision server.
Config.Autoprovision.General.Pwd	The range of the value length is 1~63 characters.
Config.Autoprovision.GENERAL.Priority	Configure the auto provision priority
Config.Autoprovision.Mode.Mode	Configure the auto provision mode. 0:Disabled; 1:Power On(default); 2:Repeatedly; 3:Power On + Repeatedly.
Config.Autoprovision.Schedule.DayOfWeek	Configure the schedule time for auto provision when the auto provision mode is Repeatedly or Power On + Repeatedly. DayOfWeek: The range is 0~7, 0 is for everyday, 1~7 is for Monday~Sunday. HourOfDay: The range is 0~23.
Config.Autoprovision.AES.Key16	Configure Aes key (16 bytes) for decrypting the common config file.
Config.Autoprovision.AES.Key16Mac	Configure Aes key (16 bytes) for decrypting the Mac-Oriented config file.
Config.Autoprovision.PNP.Enable	Enable or Disable the PnP feature. 0:Disabled. 1:Enabled(default).
Config.Autoprovision.PNP.Url	Configure the url of the PNP server. The range of the value length is 1~127

	characters.
Config.Autoprovision.MD5.GenConfMd5	Configure MD5 for the common config file.
Config.Autoprovision.MD5.UrlConfMd5	Configure MD5 for the Mac-Oriented config file.
Config.Autoprovision.DHCP_OPTION.Enable	Enable or Disable the DHCP option mode. 0:Disabled. 1:Enabled(default).
Config.Autoprovision.DHCP_OPTION.CustomId	Configure the DHCP custom option. The range of the value is 128~254.
Config.Autoprovision.DHCP_OPTION.CustomValue	Configure DHCP CustomValue
Config.Autoprovision.RETRY_TIMES.Times	Configure Autop retry times
Config.Autoprovision.REDIRECT.Url	Configure redirect url
Config.Autoprovision.REDIRECT.Enable	Enable or disable the redirect 0:Disabled; 1:Enabled.
Config.Autoprovision.REDIRECT.TransMac	Enable or disable transport MAC 0:Disabled; 1:Enabled.
Config.Autoprovision.X.Name	Configure the Name of the auto provisioning (X ranges from 01 to 50)
Config.Autoprovision.X.Code	Configure the Provider Code Format must be #***#, * * * to could be letters, characters, digital.
Config.Autoprovision.X.Url	Configure the url of the auto provisioning server. The range of the value length is 1~127 characters.
Config.Autoprovision.X.User Config.Autoprovision.X.Password	Configure the username and password for the phone to be authenticated by the auto provision server. The range of the value length is 1~63 characters.
Config.Autoprovision.X.ComAES	Configure AES key (16 bytes) for decrypting the common config file.
Config.Autoprovision.X.MacAES	Configure AES key (16 bytes) for decrypting the Mac-Oriented config file.

Network Configuration

Config.Network.LAN.Type	Configure the LAN port type. 0:DHCP(default). 1:PPPOE. 2:Static IP.
Config.Network.LAN.StaticIP	Configure the Static IP address for the

	phone.
Config.Network.LAN.SubnetMask	Configure the mask for the phone.
Config.Network.LAN.DefaultGateway	Configure the gateway for the phone.
Config.Network.LAN.PrimaryDNS	Configure the Primary DNS server for the phone.
Config.Network.LAN.SecondaryDNS	Configure the Secondary DNS server for the phone.
Config.Network.PPPOE.User	Configure the username and password for PPPOE connection. The range of the value length is 1~63 characters.
Config.Network.PC.Type	Configure the PC port type. 0: Router. 1: Bridge.
Config.Network.PC.RouterIP	Configure the router IP when the PC port type is Router.
Config.Network.PC.SubnetMask	Configure the router subnet mask when the PC port type is Router.
Config.Network.PC.EnableDHCP	Enable or disable the DHCP when the PC port type is Router. 0:Disabled. 1:Enabled(default).
Config.Network.PC.StartIP	Configure the start IP when the PC port type is Router.
Config.Network.PC.EndIP	Configure the end IP when the PC port type is Router.
Config.Network.8021X.ModeOf8021X	Configure the Mode of 8021X.
Config.Network.8021X.Identity	Configure the Identity of 8021X.
Config.Network.8021X.PwdMd5	Configure the PwdMd5 of 8021X.
Config.Network.RTPPORT.Max	Configure the max and min RTP port. The range of the value is 1024~65535.
Config.Network.RTPPORT.Min	
Config.Network.QOS.SignalTos	Configure the signaltos value of the QoS. The range of the value is 0~63.
Config.Network.QOS.RtpTos	Configure the rtptos value of the QoS. The range of the value is 0~63.
Config.Network.LLDP.LLDPEnable	Enable or disable the LLDP feature. 0:Disabled(default). 1:Enabled.
Config.Network.LLDP.Interval	Configure the LLDP interval time. The range of the value is 10~3600(in seconds).
Config.Network.VLAN.LanVlanEnable	Enable or Disable the LAN port VLAN.

	0:Disabled(default). 1:Enabled.
Config.Network.VLAN.LanVid	Configure the LAN port VLAN ID. The range of the value is 0~4094. (0 by default).
Config.Network.VLAN.LanPriority	Configure the LAN port VLAN priority. The range of the value is 0~7.(0 by default).
Config.Network.VLAN.PcVlanEnable	Enable or Disable the PC port VLAN. 0:Disabled(default). 1:Enabled.
Config.Network.VLAN.PcVid	Configure the PC port VLAN ID. The range of the value is 0~4094. (0 by default).
Config.Network.VLAN.PcPriority	Configure the PC port VLAN priority. The range of the value is 0~7.(0 by default).
Config.Network.SNMP.Enable	Enable or disable the SNMP feature. 0:Disabled(default). 1:Enabled.
Config.Network.SNMP.Port	Configure the SNMP port. The range of the value is 0~65535.
Config.Network.SNMP.TrustedIP	Configure the IP address of the SNMP server.
Config.Network.VPN.Enable	Enable or disable the VPN feature. 0:Disabled(default). 1:Enabled.

TR069 Configuration

Config.TR069.General.Enable	Enable or disable the TR069 feature. 0:Disabled (default). 1:Enabled.
Config.TR069.General.Verison	Configure the verison of TR069
Config.TR069.General.ResetFactory	Enable or disable TR069 ResetFactory. 0:Disabled. 1:Enabled (default).
Config.TR069.DeviceInfo.ProvisioningCode	Configure the ProvisioningCode of DeviceInfo for TR069
Config.TR069.DeviceInfo.DeviceName	Configure the DeviceName of DeviceInfo for TR069
Config.TR069.DeviceInfo.Password	Configure the Password of DeviceInfo for TR069
Config.TR069.DeviceInfo.ErrorNumber	Configure the ErrorNumber of DeviceInfo for TR069
Config.TR069.DeviceInfo.LongConnection	Configure the LongConnection of DeviceInfo for TR069

Config.TR069.DeviceInfo.Description	Configure the Description of DeviceInfo for TR069
Config.TR069.DeviceInfo.LongConnectionAddr	Configure the LongConnection Address of DeviceInfo for TR069
Config.TR069.ManagementServer.URL	Configure the access URL of the ACS. The range of the value length is 1~63 characters.
Config.TR069.ManagementServer.Username	Configure the username and password for the phone to authenticate with the ACS.
Config.TR069.ManagementServer.Password	The range of the value length is 1~63 characters.
Config.TR069.ManagementServer.PeriodicInformEnable	Enable or disable the phone to report its configuration information to the ACS. 0:Disabled (default). 1:Enabled.
Config.TR069.ManagementServer.PeriodicInformInterval	Configure the interval for the phone to report its configuration information to the ACS. The range of the value is 3~3600(in seconds).
Config.TR069.ManagementServer.PeriodicInformTime	Configure the Periodic Inform Time of ManagementServer for TR069
Config.TR069.ManagementServer.ParameterKey	Configure the ParameterKey of ManagementServer for TR069
Config.TR069.ManagementServer.ConnectionRequestURL	Configure the URL connection requests.
Config.TR069.ManagementServer.ConnectionRequestUsername	Configure the username and password for the phone to authenticate the connection requests. The range of the value length is 1~63 characters.
Config.TR069.ManagementServer.ConnectionRequestPassword	
Config.TR069.ManagementServer.STUNEnable	Enable or Disable Stun. 0:Disabled(default). 1:Enabled.
Config.TR069.ManagementServer.STUNServerAddress	Configure the stun server address. The range of the value length is 1~63 characters.
Config.TR069.ManagementServer.STUNServerPort	Configure the stun server port. The range of the value is 1~65535.
Config.TR069.ManagementServer.STUNUsername	Configure the stun username
Config.TR069.ManagementServer.STUNPassword	Configure the stun password
Config.TR069.ManagementServer.STUNMaximumKeepAlivePeriod	Configure the stun KeepAlive Period
Config.TR069.ManagementServer.STUNMinimumKe	

epAlivePeriod	
Config.TR069.ManagementServer.NATDetected	Configure the stun NAT Detected
Config.TR069.ManagementServer.UDPConnectionRequestAddress	Configure the UDP Connection Request Address
Config.TR069.ManagementServer.UDPConnectionRequestAddressNotificationLimit	Configure the UDP Connection Request Address Notification Limit
Config.TR069.ManagementServer.UpgradesManaged	Configure the Upgrades Managed
Config.TR069.Reboot.CmdKey	Configure the reboot CmdKey
Config.TR069.Download.Enable	Enable or disable download. 0:Disabled. 1:Enabled.
Config.TR069.Download.CmdKey	Configure the download CmdKey
Config.TR069.Download.StartTime	Configure the download StartTime
Config.TR069.Download.Url	Configure the download Url
Config.TR069.UserInfo.SubID	Configure the SubID
Config.TR069.UserInfo.AuthenticationType	Configure the AuthenticationType

Account Configuration

Config.AccountX.GENERAL.Enable	Enable or disable the account X(X ranges from 1 to 6). 0:Disabled(default). 1:Enabled.
Config.AccountX.GENERAL.Label	Configure the account X(X ranges from 1 to 6) label which will display on the LCD screen. The range of the value length is 1~63 characters.
Config.AccountX.GENERAL.DisplayName	Configure the display name of account X(X ranges from 1 to 6). The range of the value length is 1~63 characters.
Config.AccountX.GENERAL.Username	Configure the register user name of account X(X ranges from 1 to 6). The range of the value length is 1~63 characters.
Config.AccountX.GENERAL.AuthName	Configure the user and password for register authentication.
Config.AccountX.GENERAL.Pwd	The range of the value length is 1~63 characters.
Config.AccountX.GENERAL.UserAgent	Configure the UserAgent
Config.AccountX.GENERAL.ProxyRequire	Configure the ProxyRequire
Config.AccountX.SIP.Server	Configure the SIP server address of account X(X ranges from 1 to 6).

	The range of the value length is 1~63 characters.
Config.AccountX.SIP.Server2	Configure the backup SIP server address of account X(X ranges from 1 to 6). The range of the value length is 1~63 characters.
Config.AccountX.SIP.Port	Configure the SIP server port of account X(X ranges from 1 to 6). The range of the value is 1~65535.
Config.AccountX.SIP.Port2	Configure the backup SIP server port of account X(X ranges from 1 to 6). The range of the value is 1~65535.
Config.AccountX.SIP.ListenPort	Configure the listen port of account X(X ranges from 1 to 6). The range of the value is 1~65535.
Config.AccountX.SIP.TransType	Configure the transport type. 0:UDP(Default). 1:TCP. 2:TLS. 3:DNS-SRV
Config.AccountX.SIP.ListenPortMin	Configure the range of ListenPort
Config.AccountX.SIP.ListenPortMax	
Config.AccountX.OUTPROXY.Enable	Enable or Disable the outbound proxy server. 0:Disabled(default). 1:Enabled.
Config.AccountX.OUTPROXY.Server	Configure the IP address/domain of the outbound proxy server. The range of the value length is 1~63 characters.
Config.AccountX.OUTPROXY.Port	Configure the IP address/domain of the outbound proxy server port. The range of the value is 1~65535.
Config.AccountX.OUTPROXY.BakServer	Configure the backup outbound proxy server address. The range of the value length is 1~63 characters.
Config.AccountX.OUTPROXY.BakPort	Configure the backup outbound proxy server port. The range of the value is 1~65535.
Config.AccountX.STUN.Enable	Enable or Disable Stun. 0:Disabled(default). 1:Enabled.
Config.AccountX.STUN.Server	Configure the stun server address.

	The range of the value length is 1~63 characters.
Config.AccountX.STUN.Port	Configure the stun server port. The range of the value is 1~65535.
Config.AccountX.ENCRYPTION.SRTPEncryption	Enable or Disable SRTP Encryption. 0:Disabled(Default). 1:Enabled.
Config.AccountX.ENCRYPTION.SRTPEncryptionAlg	Configure the SRTP Encryption
Config.AccountX.DTMF.Type	Configure the DTMF type. 0:Inband; 1:RFC2833(Default); 2:Info; 3:Info + Inband; 4:Info + RFC2833.
Config.AccountX.DTMF.Payload	Configure the RFC2833 payload, ranges from 96 to 127(101 by default).
Config.AccountX.DTMF.InfoType	Configure DTMF info type when using Info. 0:Disabled(default); 1:DTMF; 2:DTMF-Relay; 3:Telephone-Event.
Config.AccountX.DTMF.Duration	Configure the DTMF duration time.
Config.AccountX.DTMF.Power	Configure the DTMF power.
Config.AccountX.NAT.NatTraversal	Configure the NAT Traversal.
Config.AccountX.NAT.StunServer	Configure the NAT stun server address. The range of the value length is 1~63 characters.
Config.AccountX.NAT.StunPort	Configure the NAT stun server port. The range of the value is 1~65535.
Config.AccountX.NAT.UdpKeepEnable	Enable or Disable NAT keep-alive. 0:Disabled(Default). 1:Enabled.
Config.AccountX.NAT.UdpKeepInterval	Configure the NAT keep-alive interval. The range of the value is 5~60s (in seconds). Default is 30.
Config.AccountX.NAT.Rport	Configure the rport. The range of the value is 1~65535.
Config.AccountX.BLF.SubscribePeriod	Configure the BLF subscribe period (1800 seconds by default). The range of the value is 1800~65535(in seconds).Default is 1800.
Config.AccountX.BLF.BlfListUri	Configure the Blf List Uri. The range of the value length is 1~63 characters.

Config.AccountX.BLF.BlfNotifyParseType	Configure the BLF List Notify parse type
Config.AccountX.BLF.BlfListCode	Configure the BLF List code
Config.AccountX.BLF.BlfListBargeInCode	Configure the BLF List barge incode
Config.AccountX.VOICEMSG.Number	Configure the voice message number. The range of the value length is 1~63 characters.
Config.AccountX.MUSIC_SERVER.Enable	Enable or Disable Music Server; 0:Disabled(Default); 1:Enabled.
Config.AccountX.MUSIC_SERVER.Uri	Configure Music Server Uri. The range of the value length is 1~63 characters.
Config.AccountX.Anonymous_Call.Enable	Enable or Disable Anonymous Call; 0:Disabled(Default); 1:Enabled.
Config.AccountX.Anonymous_Call.OnCode	Configure On Code for Anonymous Call. The range of the value length is 1~63 characters.
Config.AccountX.Anonymous_Call.OffCode	Configure Off Code for Anonymous Call. The range of the value length is 1~63 characters.
Config.AccountX.REJECT_ANONYMOUSCALL.Enable	Enable or Disable Reject Anonymous Call; 0:Disabled(Default); 1:Enabled.
Config.AccountX.REJECT_ANONYMOUSCALL.OnCode	Configure On Code for Reject Anonymous Call. The range of the value length is 1~63 characters.
Config.AccountX.REJECT_ANONYMOUSCALL.OffCode	Configure Off Code for Reject Anonymous Call. The range of the value length is 1~63 characters.
Config.AccountX.REG.Timeout	Configure the register expire time (in seconds), the range is 1800~65535, default is 1800.
Config.AccountX.REG.Timeout2	Configure the second register expire time (in seconds), the range is 1800~65535, default is 1800.
Config.AccountX.CONFERENCE.Type	Configure the type of conference 0: local 1: network
Config.AccountX.CONFERENCE.Uri	Configure the conference Uri. The range of the value length is 1~63 characters.

Config.AccountX.AUTO_ANSWER.Enable	Enable or Disable auto answer when receiving a incoming call for account X(X ranges from 1 to 6). 0:Disabled(Default). 1:Enabled.
Config.AccountX.SESSION.EnableTimer	Enable or Disable Session timer; 0:Disabled(Default); 1:Enabled.
Config.AccountX.SESSION.Interval	Configure the session interval time(in seconds), the range is 90~7200, default is 1800.
Config.AccountX.SESSION.Refresh	Configure the session refresh time 0:UAC(Default); 1:UAS
Config.AccountX.SUBSCRIBE.SubscribeRegister	Enable or Disable subscribe the register status. 0:Disabled(Default). 1:Enabled.
Config.AccountX.SUBSCRIBE.SubscribePeriod	Configure the subscribe period of the register (in seconds), the range is 1800~65535, default is 1800.
Config.AccountX.SUBSCRIBE.SubscribeACDExpire	Configure the subscribe period of the ACD (in seconds), the range is 1800~65535, default is 1800.
Config.AccountX.SUBSCRIBE.SubscribeMWI	Enable or Disable subscribe the MWI status; 0:Disabled(Default); 1:Enabled
Config.AccountX.SUBSCRIBE.SubscribeMWIExpire	Configure the subscribe period of the MWI (in seconds), the range is 1800~65535, default is 1800.
Config.AccountX.CALL.Enable100Rel	Enable or Disable 100 reliable retransmission; 0:Disabled (Default); 1:Enabled.
Config.AccountX.CALL.CIDSource	Configure the CIDSource
Config.AccountX.CALL.Ptime	Configure the RTP packet time. 0(Disabled), 10, 20, 30, 40, 50, 60.
Config.AccountX.CALL.UserPhone	Enable or disable UserPhone. 0:Disabled; 1:Enabled.
Config.AccountX.CALL.RdrInfoDetection	Enable or disable RdrInfoDetection. 0:Disabled; 1:Enabled.
Config.AccountX.CALL.PreventSIPHacking	Enable or disable PreventSIPHacking 0:Disabled 1:Enabled.

Config.AccountX.FEATURE_DND.Enable	Enable or disable the DND feature; 0:Disabled(default); 1:Enabled.
Config.AccountX.FEATURE_DND.OnCode	Configure On Code for DND. The range of the value length is 1~63 characters.
Config.AccountX.FEATURE_DND.OffCode	Configure Off Code for DND. The range of the value length is 1~63 characters.
Config.AccountX.FEATURE_DND.ReturnCode	Configure return code for DND; the valid value is: 404(Not Found); 480(Temporarily Unavailable); 486(Busy Here) ; 603(Decline).
Config.AccountX.FEATURE_FORWARD_ALWAYS.Enable	Enable or Disable Always Forward; 0:Disabled(Default); 1:Enabled.
Config.AccountX.FEATURE_FORWARD_ALWAYS.Target	Configure target phone number that the phone will Always Forward to. The range of the value length is 1~63 characters.
Config.AccountX.FEATURE_FORWARD_ALWAYS.OnCode	Configure On Code for Always Forward. The range of the value length is 1~63 characters.
Config.AccountX.FEATURE_FORWARD_ALWAYS.OffCode	Configure Off Code for Always Forward. The range of the value length is 1~63 characters.
Config.AccountX.FEATURE_FORWARD_BUSY.Enable	Enable or Disable Busy Forward; 0:Disabled(Default); 1:Enabled.
Config.AccountX.FEATURE_FORWARD_BUSY.Target	Configure target phone number that the phone will Busy Forward to. The range of the value length is 1~63 characters.
Config.AccountX.FEATURE_FORWARD_BUSY.OnCode	Configure On Code for Busy Forward. The range of the value length is 1~63 characters.
Config.AccountX.FEATURE_FORWARD_BUSY.OffCode	Configure Off Code for Busy Forward. The range of the value length is 1~63 characters.
Config.AccountX.FEATURE_FORWARD_TIMEOUT.Enable	Enable or Disable No Answer Forward; 0:Disabled(Default); 1:Enabled.
Config.AccountX.FEATURE_FORWARD_TIMEOUT.Target	Configure target phone number that the

get	phone will No Answer Forward to. The range of the value length is 1~63 characters.
Config.AccountX.FEATURE_FORWARD_TIMEOUT.OnCode	Configure On Code for No Answer Forward. The range of the value length is 1~63 characters.
Config.AccountX.FEATURE_FORWARD_TIMEOUT.OfCode	Configure Off Code for No Answer Forward. The range of the value length is 1~63 characters.
Config.AccountX.FEATURE_FORWARD_TIMEOUT.TimeOut	Configure No answer timeout the time after which the call will be forwarded when using No Answer Forward, the range is 0~120(in seconds).
Config.AccountX.AudioY.Enable	Enable or Disable Audio codecs Y(Y ranges from 0 to 12) for account X (X ranges from 1 to 6).
Config.AccountX.AudioY.Name	Configure the Audio name
Config.AccountX.AudioY.Priority	Configure the Audio Priority
Config.AccountX.AudioY.Payload	Configure the Audio Payload
Config.AccountX.AOC.AocEnable	Enable or Disable AOC; 0:Disabled(Default); 1:Enabled.
Config.AccountX.RINGTONE.Type	Configure the ring tone type, string (Ring1.wav by default).
Config.AccountX.ESCAPE_CHARACTER.Enable	Enable or Disable ESCAPE characters; 0:Disabled; 1:Enabled.
Config.AccountXADVANCED>ShowMissedCall	Enable or Disable Show MissedCall; 0:Disabled; 1:Enabled.
Config.AccountX.HOTELING.Enable	Enable or Disable HOTELING; 0:Disabled; 1:Enabled.
Config.AccountX.HOTELING.User	Configure the username for HOTELING
Config.AccountX.HOTELING.Password	Configure the Password for HOTELING
Config.AccountX.HOTELING.AutoLogin	0:Do not remember the username and password; 1: remember the username; 2: remember the username and password.

Call Forward Configuration

Config.Forward.Always.Enable	Enable or Disable Always Forward; 0:Disabled(Default); 1:Enabled.
------------------------------	---

Config.Forward.Always.Target	Configure target phone number that the phone will Always Forward to. The range of the value length is 1~63 characters.
Config.Forward.Always.OnCode	Configure On Code for Always Forward. The range of the value length is 1~63 characters.
Config.Forward.Always.OffCode	Configure Off Code for Always Forward. The range of the value length is 1~63 characters.
Config.Forward.Busy.Enable	Enable or Disable Busy Forward; 0:Disabled(Default); 1:Enabled.
Config.Forward.Busy.Target	Configure target phone number that the phone will Busy Forward to. The range of the value length is 1~63 characters.
Config.Forward.Busy.OnCode	Configure On Code for Busy Forward. The range of the value length is 1~63 characters.
Config.Forward.Busy.OffCode	Configure Off Code for Busy Forward. The range of the value length is 1~63 characters.
Config.Forward.Timeout.Enable	Enable or Disable No Answer Forward; 0:Disabled(Default); 1:Enabled.
Config.Forward.Timeout.Target	Configure target phone number that the phone will No Answer Forward to. The range of the value length is 1~63 characters.
Config.Forward.Timeout.Timeout	Configure No answer timeout the time after which the call will be forwarded when using No Answer Forward, the range is 0~120(in seconds).
Config.Forward.Timeout.OnCode	Configure On Code for No Answer Forward. The range of the value length is 1~63 characters.
Config.Forward.Timeout.OffCode	Configure Off Code for No Answer Forward. The range of the value length is 1~63 characters.
Config.Forward.CallPark.Enable	Enable or Disable Call Park. 0:Disabled(Default); 1:Enabled.
Config.Forward.CallPark.Target	Configure target phone number that the

	phone will Call Park to. The range of the value length is 1~63 characters.
Config.Forward.CallPark.Line	Configure line that the phone will Call Park to. The value is 0(Default), 1, 2,3.
Config.Forward.FORWARDMODE.Mode	Configure call forward mode
Config.Forward.FORWARDMODE.FeatureSync	Configure call forward Feature Synchronous
Config.ForwardADVANCED.UseFwdAsTransfer	Configure call forward Feature as transfer

BroadSoft Configuration

Config.BroadSoft.BroadSoftX.DisplayName	Configure the display name of BroadSoft phonebook X ("X" ranges from 0-5). The range of the value length is 1~63 characters.
Config.BroadSoft.BroadSoftX.Server	Configure the url of BroadSoft phonebook X ("X" ranges from 0-5). The range of the value length is 1~255 characters.
Config.BroadSoft.BroadSoftX.Port	Configure the port of BroadSoft phonebook X ("X" ranges from 0-5). The range of the value is 1~65535.
Config.BroadSoft.BroadSoftX.User	Configure the username of BroadSoft phonebook X ("X" ranges from 0-5). The range of the value length is 1~63 characters.
Config.BroadSoft.BroadSoftX.Pwd	Configure the password of BroadSoft phonebook X ("X" ranges from 0-5). The range of the value length is 1~63 characters.

Remote Phone Book Configuration

Config.RemotePhoneBook.REMOTE_PHONE_BOOK X.DisplayName	Configure the display name of Remote phonebook X ("X" ranges from 0-4). The range of the value length is 1~63 characters.
Config.RemotePhoneBook.REMOTE_PHONE_BOOK X.Url	Configure the url of Remote phonebook X ("X" ranges from 0-4). The range of the value length is 1~255 characters.
Config.RemotePhoneBook.GENERAL.Search	Enable or Disable Search Remote Phonebook Name Feature 0:Disabled; 1:Enabled.

Config.RemotePhoneBook.GENERAL.FlashInterval	Configure the FlashInterval of Remote phonebook
LDAP Configuration	
Config.Ldap.LDAP.NameFilter	Configure the search criteria for name and number lookups.
Config.Ldap.LDAP.NumberFilter	The range of the value length is 1~63 characters.
Config.Ldap.LDAP.Server	Configure the LDAP server. The range of the value length is 1~63 characters.
Config.Ldap.LDAP.Port	Configure the LDAP server port. The range of the value is 1~65535.
Config.Ldap.LDAP.Root	Configure the LDAP root path. The range of the value length is 1~63 characters.
Config.Ldap.LDAP.User	Configure the LDAP username and password.
Config.Ldap.LDAP.Pwd	The range of the value length is 1~63 characters.
Config.Ldap.LDAP.MaxHits	Configure the maximum displayed search results, ranges from 1 to 500(50 by default),the valid value is Integer.
Config.Ldap.LDAP.NameAttr	Configure the search attribute for name and number lookups.
Config.Ldap.LDAP.NumberAttr	
Config.Ldap.LDAP.DisplayName	The range of the value length is 1~63 characters.
Config.Ldap.LDAP.Version	Configure the Version
Config.Ldap.LDAP.SearchDelay	Configure the search delay time,ranges from 200 to 3000, (in milliseconds, 1000 by default).
AreaCode Configuration	
Config.AreaCode.GENERAL.Code	Configure the area code. The range of the value length is 1~63 characters.
Config.AreaCode.GENERAL.MaxLen	Configure the max length of the area code. The range of the value is 1~15.
Config.AreaCode.GENERAL.MinLen	Configure the min length of the area code. The range of the value is 1~15.
Config.AreaCode.GENERAL.Account	Configure the line of area code; the valid value is: 0(default), 1, 2, 3; 0 is for auto.
Feature Configuration	

Config.Features.CALL_WAITING.Enable	Enable or disable the call waiting feature; 0:Disabled; 1:Enabled(default).
Config.Features.CALL_WAITING.PlayTone	Configure the phone to play warning tone when receiving an incoming call during an active call; 0:Disabled; 1:Enabled(default).
Config.Features.HOTLINE.Enable	Enable or disable the hotline feature; 0:Disabled(default); 1:Enabled
Config.Features.HOTLINE.Number	Configure the hotline number. The range of the value length is 1~63 characters.
Config.Features.HOTLINE.Delay	Configure the hotline delay time (in seconds). The range of the value is 0~5.
Config.Features.AUTO_REDIAL.Enable	Enable or disable the auto redial feature; 0:Disabled(default); 1:Enabled
Config.Features.AUTO_REDIAL.Interval	Configure the interval.
Config.Features.AUTO_REDIAL.Times	Configure the auto redial times.
Config.Features.DND.Enable	Enable or disable the DND feature; 0:Disabled(default); 1:Enabled.
Config.Features.DND.Status	Configure the DND Status
Config.Features.DND.ReturnCode	Configure return code for DND; the valid value is: 404(Not Found); 480(Temporarily Unavailable); 486(Busy Here) ; 603(Decline).
Config.Features.DND.OnCode	Configure On Code for DND. The range of the value length is 1~63 characters.
Config.Features.DND.OffCode	Configure Off Code for DND. The range of the value length is 1~63 characters.
Config.Features.REJECT.ReturnCode	Configure return code for Reject; the valid value is: 404(Not Found); 480(Temporarily Unavailable); 486(Busy Here) ; 603(Decline).
Config.Features.INTERCOM.Enable	Enable or disable the intercom feature; 0-Disabled; 1-Enabled(default).

Config.Features.INTERCOM.Mute	Enable or disable the phone to mute the speaker when automatically answer an intercom call, 0-Disabled(default); 1-Enabled.
Config.Features.CALL_PICKUP.VisualAlert	Configure pickup visual alert.
Config.Features.SpeedDial.LabelX	Configuration of Speed Dial X ("X" ranges from 01-12). The range of the value length is 1~63 characters.
Config.Features.SpeedDial.NumX	Configuration of Speed Dial X ("X" ranges from 01-12). The range of the value length is 1~63 characters.
Config.Features.SpeedDial.LineX	Configuration of Speed Dial X ("X" ranges from 01-12); the valid value is: 0(default), 1, 2, 3; 0 is for auto.
Config.Features.DIALNOW.Delay	Configure the delay time of the dial now feature 0~15(in seconds). The range of the value is 0~5.
Config.Features.AUTOANSWER.Delay	Configure the delay time of the auto answer feature (in seconds). The range of the value is 0~5.
Config.Features.Others.EarlyDTMF	Enable or disable the EarlyDTMF feature; 0-Disabled(default); 1-Enabled.
Config.Features.ACD.ACDAutoAvailable	Enable or disable the ACD Auto Available feature; 0-Disabled(default); 1-Enabled.
Config.Features.ACD.ACDAutoAvailableTime	Configure the time of the ACD Auto Available The range of the value is 0~180s (in seconds).
Config.Features.ACD.ACDAutoLogin	Configure status of the ACD
Config.Features.ACTIONURL.SetupCompleted	Configuration of Action url key word.
Config.Features.ACTIONURL.Registered	
Config.Features.ACTIONURL.Unregistered	
Config.Features.ACTIONURL.RegisterFailed	
Config.Features.ACTIONURL.OffHook	
Config.Features.ACTIONURL.OnHook	
Config.Features.ACTIONURL.IncomingCall	
Config.Features.ACTIONURL.OutgoingCall	
Config.Features.ACTIONURL.Established	
Config.Features.ACTIONURL.Terminated	
Config.Features.ACTIONURL.OpenDND	

Config.Features.ACTIONURL.CloseDND	
Config.Features.ACTIONURL.OpenAlwaysForward	
Config.Features.ACTIONURL.CloseAlwaysForward	
Config.Features.ACTIONURL.OpenBusyForward	
Config.Features.ACTIONURL.CloseBusyForward	
Config.Features.ACTIONURL.OpenNoAnswerForwar d	
Config.Features.ACTIONURL.CloseNoAnswerForwar d	
Config.Features.ACTIONURL.TransferCall	
Config.Features. ACTIONURL.BlinkTransfer	
Config.Features.ACTIONURL.AttendedTransfer	
Config.Features.ACTIONURL.Hold	
Config.Features.ACTIONURL.UnHold	
Config.Features.ACTIONURL.Mute	
Config.Features.ACTIONURL.UnMute	
Config.Features.ACTIONURL.MissedCall	
Config.Features.ACTIONURL.IPChanged	
Config.Features.ACTIONURL.ForwardInComingCall	
Config.Features.ACTIONURL.RejectInComingCall	
Config.Features.ACTIONURL.AnswerNewInCall	
Config.Features.ACTIONURL.TransferFinished	
Config.Features.ACTIONURL.TransferFailed	
Config.Features.ACTIONURL.IdleToBusy	
Config.Features.ACTIONURL.BusyToIdle	
Config.Features.ACTIONURL.Enable	
Config.Features.REMOTECONTROL.ActionURIAllowI PList	Configure the IP address to remote control phone
Config.Features.SENDKEY.KeySendType	Configure the KeySendType 0: Disabled 1:#
Config.FeaturesADVANCED.HangupInHold	Enable or disable Hangup InHold; 0:Disabled; 1:Enabled.
Setting Configuration	
Config.Settings.LANGUAGE.Type	Configure the language displays on the phone LCD screen, the available values are: 0-English, 1-Simplified Chinese, 2-Traditional Chinese, 3-RUSSIAN, 4-KOREAN,

	5-PORTUGUESE, 6-SPANISH, 7-ITALIAN, 8-DUTCH, 9-FRENCH, 10-GERMAN, 11-HEBREW, 12-VIETNAMESE, 13-POLISH, 14-TURKISH.
Config.Settings.LANGUAGE.ActiveWebLang	Enable or disable WebLang feature; 0:Disabled; 1:Enabled.
Config.Settings.LANGUAGE.WebLang	Configure the language displays on the web page, the available values are: 0-English, 1-Simplified Chinese, 2-Traditional Chinese, 6-Espanol, 8-Nederlands.
Config.Settings.DateTime.Type	Configure the DST type when the DST was set to Enabled. 0:Date, 1:Week.
Config.Settings.DateTime.TimeFormat	Configure the time format, 0(12 Hour), 1(24 Hour).
Config.Settings.DATETIME.DateFormat	Configure the date display format.
Config.Settings.DateTime.Offset	Configure the offset time (in minutes), ranges from -300 to 300,(60 by default) the valid value is Integer.
Config.Settings.SNTP.Enable	Enable or disable the NTP feature; 0:Disabled; 1:Enabled(default).
Config.Settings.SNTP.TimeZone	Configure the time zone and time zone name for the phone; time zone ranges from -11 to +13 (0 by default); time zone name (GMT by default).
Config.Settings.SNTP.Name	Configure the primary and secondary NTP servers. primary NTP servers Default is 0.pool.ntp.org; secondary NTP servers Default is 1.pool.ntp.org.
Config.Settings.SNTP.NTPServer1	Configure the primary and secondary NTP servers. primary NTP servers Default is 0.pool.ntp.org; secondary NTP servers Default is 1.pool.ntp.org.
Config.Settings.SNTP.NTPServer2	
Config.Settings.SNTP.DTS	Configure the daylight saving time feature. 0:Disabled, 1:Enabled,

	2:Automatic(default).
Config.Settings.SNTP.Interval	Configure the update interval(in seconds) when using NTP Server(3600 by default). The valid value is >=3600.
Config.Settings.SNTP.StartTime	Configure the start time of DST.(1/1/0 by default) If the DST type is set to By Date, the value format is Month/Day/Hour; If the DST type is set to By Week, the value format is Start Month/Start Day of Week/Start Day of Week Last in Month/Start Hour of Day. For example, the value is 1/4/2/5, it means the start time is at 5 o'clock on Tuesday, the 4th week in January;
Config.Settings.SNTP.EndTime	Configure the end time of DST, (12/31/23 by default), the value format is the same as the start time.
Config.Settings.Backlight.Level	Configure the backlight level, Integer:0, 1, 2, 3, 4(default), 5.
Config.Settings.Backlight.Time	Configure the backlight time, 0-Always off, 1-Always on, 10, 20(default), 30, 40, 50, 60, 90, 120(in seconds).
Config.Settings.BACKLIGHT.FreeLevel	Configure the backlight level for phone free
Config.Settings.General.DirectIP	Enable or disable direct IP; 0:Disabled; 1:Enabled(default).
Config.Settings.GENERAL.WebTitle	Configure the WebTitle.
Config.Settings.GENERAL.HttpUserAgent	Configure the HttpUserAgent
Config.Settings.LogLevel.Level	Configure the log level, Integer:0, 1, 2, 3(default), 4, 5, 6, 7.
Config.Settings.LOGLEVEL.RemoteSyslog	Enable or disable RemoteSyslog; 0:Disabled(default); 1:Enabled.
Config.Settings.LOGLEVEL.RemoteServer	Configure the Remote Server.
Config.Settings.RingTone.Type	Configure the ring tone type, string(Ring1.wav by default).
Config.Settings.RINGTONE.Lifetime	Configure the Ring time
Config.Settings.AUDIO.KeyVol	Configure the keyboard volume, the range is 1~15, default is 8.
Config.Settings.AUDIO.KeyMidVol	Configure the middle value of keyboard volume.
Config.Settings.AUDIO.RingVol	Configure the ring volume, the range is 1~15, default is 8.

Config.Settings.AUDIO.RingMidVol	Configure the middle value of ring volume
Config.Settings.HANDFREE.SpkVol	Configure the handfree speak volume, the range is 1~15, default is 8.
Config.Settings.HANDFREE.MicVol	Configure the handfree mic volume, the range is 1~15, default is 8.
Config.Settings.HANDFREE.SpkMidValue	Configure the middle value of the handfree speak volume.
Config.Settings.HANDFREE.MicMidValue	Configure the middle value of the handfree mic volume.
Config.Settings.HANDFREE.SigToneVol	Configure the handfree signal tone volume, the range is 1~15, default is 8.
Config.Settings.HANDFREE.SigToneMidVol	Configure the middle value of the handfree signal tone volume.
Config.Settings.HandSet.SpkVol	Configure the handset speak volume, the range is 1~15, default is 8.
Config.Settings.HandSet.MicVol	Configure the handset mic volume, the range is 1~15, default is 8.
Config.Settings.HandSet.SpkMidValue	Configure the middle value of the handset speak volume.
Config.Settings.HandSet.MicMidValue	Configure the middle value of the handset mic volume.
Config.Settings.HandSet.SigToneVol	Configure the handset signal tone volume, the range is 1~15, default is 8.
Config.Settings.HandSet.SigToneMidVol	Configure the middle value of the handset signal tone volume.
Config.Settings.HEADSET.Active	Enable or Disable headset mode 0-Disabled, 1-Enabled.
Config.Settings.HeadSet.SpkVol	Configure the headset speak volume, the range is 1~15, default is 8.
Config.Settings.HeadSet.MicVol	Configure the headset mic volume, the range is 1~15, default is 8.
Config.Settings.HEADSET.SpkMidValue	Configure the middle value of the headset speak volume.
Config.Settings.HEADSET.MicMidValue	Configure the middle value of the headset mic volume.
Config.Settings.HeadSet.SigToneVol	Configure the headset signal tone volume, the range is 1~15, default is 8.
Config.Settings.HEADSET.SigToneMidVol	Configure the middle value of the headset signal tone volume.
Config.Settings.LOGIN.User Config.Settings.LOGIN.Password	Configure the login password of the advanced settings on the phone UI(admin by default). The range of the value length is 1~63 characters.

Config.Settings.WEB_LOGIN.User	Configure the login password of the web (admin by default).
Config.Settings.WEB_LOGIN.Password	The range of the value length is 1~63 characters.
Config.Settings.WEB_LOGIN.Active	Enable or Disable web login feature 0-Disabled, 1-Enabled.
Config.Settings.WEB_LOGIN.SessionTimeOut	Configure web relogin time The range is 60~14400(in seconds).
Config.Settings.CallTimeOut.DialIn	Configure the timeout of the dial in or dial out(in seconds, 60 by default).
Config.Settings.CallTimeOut.DialOut	
Config.Settings.Ringer.KeywordX	Configure the distinctive ring X ("X" ranges from 01-12).
Config.Settings.Ringer.RingtoneX	The range of the value length is 1~63 characters.
Config.Settings.HotDesking.ServerName	Configure the HotDesking server name.
Config.Settings.HotDesking.ServerPort	Configure the HotDesking server port.
Config.Settings.HotDesking.OutBoundName	Configure the HotDesking outbound server name.
Config.Settings.HotDesking.OutBoundPort	Configure the HotDesking outbound server port.
Config.Settings.HotDesking.PhoneName	Configure the HotDesking phone name.
Config.Settings.HotDesking.RegisterName	Configure the HotDesking register name.
Config.Settings.HotDesking.PassWord	Configure the HotDesking password.
Config.Settings.HotDesking.ServerName2	Configure the HotDesking backup server name.
Config.Settings.HotDesking.ServerPort2	Configure the HotDesking backup server port.
Config.Settings.DATEDISPLAY.DisplayMode	Configure the date displaymode
Config.Settings.OTHERS.ProductMode	Enable or Disable ProductMode 0-Disabled, 1-Enabled
Config.Settings.OTHERS.Telnet	Enable or Disable Telnet feature 0-Disabled, 1-Enabled.
Config.Settings.OTHERS.QuickReset	Enable or Disable QuickReset feature 0-Disabled, 1-Enabled.
Config.Settings.KEYPADLOCK.Type	Configure the keypad lock type
Config.Settings.KEYPADLOCK.Pin	Configure the unlock keypad pin
Config.Settings.KEYPADLOCK.Timeout	Configure the time of keypad lock
Config.Settings.KEYPADLOCK.Emergency	Configure the number
Config.Settings.SECURITY.OnlyAcceptTrusted	Enable or Disable phone Only Accept Trusted Certificates 0-Disabled, 1-Enabled.
CallLog Configuration	

Config.Calllog.CALLLOGX.DisplayName	Configure the calllog DisplayName.("X" ranges from 0-2).
Config.Calllog.CALLLOGX.Server	Configure the calllog server
Config.Calllog.CALLLOGX.Port	Configure the calllog port
Config.Calllog.CALLLOGX.User	Configure the calllog username
Config.Calllog.CALLLOGX.Pwd	Configure the calllog password

Programmable Key Configuration

Config.Programable.LineKeyX.Type	Configure the type of the Programmable line key X ("X" ranges from 1-6). The range of Type is: 1~22. 1:DND; 2:Menu; 3:MSG; 4:Status; 5:Book; 6:Fwd; 7:PickUp; 8:Group PickUp; 9:Intercom; 10:Speed Dial; 11:History; 12:Favorite; 13:Redial; 14:Account; 15:ACD; 16:BLF; 17:BLFList; 18:Call Return;19:HotDesking;20:Record; 21:XML Browser;22:DTMF.
Config.Programable.LineKeyX.Label	Configure the label of the Programmable line key X ("X" ranges from 1-6). The range of the value length is 1~63 characters.
Config.Programable.LineKeyX.Param1	The param1 is used to configure the value of the programmable line key X ("X" ranges from 1-6). The param1 is only used for line key type (7, 8, 9, 10, 16). For line key type 7, param1 is the pick up target. For line key type 8, param1 is the group pick up target. For line key type 9, param1 is the intercom number. For line key type 10, param1 is the speed dial number. For line key type 16, param1 is the BLF number. The range of the value length is 1~63 characters.
Config.Programable.LineKeyX.Param2	The param2 is used to configure the account information of the programmable line key X ("X" ranges from 1-6). 0:Auto, 1:Account 1,

	2:Account 2, 3:Account 3, 4:Account 4, 5:Account 5, 6:Account 6,
Config.Programable.LineKey.X.Param3	The param3 is used to configure the extension value of the programmable line key X ("X" ranges from 1-6). The param3 is only used for line key type (16). For line key type 16, param3 is the BLF Feature code. The range of the value length is 1~63 characters.
Config.Programable.SoftKeyX.Type	Configure the type of the Programmable soft key X ("X" ranges from 01-04). 1:DND; 2:Menu; 3:MSG; 4>Status; 5:Book; 6:Fwd; 7:PickUp; 8:Group PickUp; 9:Intercom; 10:Speed Dial; 11:History; 12:Favorite; 13:Redial; 18: Call Return; 19:HotDesking; 21:XML Browser.
Config.Programable.SoftKeyX.Label	Configure the label of the Programmable soft key X ("X" ranges from 1-4). The range of the value length is 1~63 characters.
Config.Programable.SoftKeyX.Param1	The param1 is used to configure the value of the programmable line key X ("X" ranges from 1-6). The param1 is only used for line key type (7, 8, 9, 10). For line key type 7, param1 is the pick up target. For line key type 8, param1 is the group pick up target. For line key type 9, param1 is the intercom number. For line key type 10, param1 is the speed dial number. The range of the value length is 1~63 characters.
Config.Programable.SoftKeyX.Param2	The param2 is used to configure the account information of the programmable

	<p>line key X ("X" ranges from 1-6).</p> <p>0:Auto, 1:Account 1, 2:Account 2, 3:Account 3, 4:Account 4, 5:Account 5, 6:Account 6,</p>
Config.Programable.HOME.Type	<p>Configure the type of the Programmable HOME key.</p> <p>0:N/A;1:DND; 2:Menu; 3:MSG; 4:Status; 5:Book; 6:Fwd; 7:PickUp; 8:Group PickUp; 9:Intercom; 10:Speed Dial; 11:History; 12:Favorite; 13:Redial; 18: Call Return; 19:HotDesking; 21:XML Browser.</p>
Config.Programable.HOME.Param1	<p>The param1 is used to configure the value of the programmable line key X ("X" ranges from 1-6).</p> <p>The param1 is only used for line key type (7, 8, 9, 10).</p> <p>For line key type 7, param1 is the pick up target.</p> <p>For line key type 8, param1 is the group pick up target.</p> <p>For line key type 9, param1 is the intercom number.</p> <p>For line key type 10, param1 is the speed dial number.</p> <p>The range of the value length is 1~63 characters.</p>
Config.Programable.HOME.Param2	<p>The param2 is used to configure the account information of the programmable line key X ("X" ranges from 1-6).</p> <p>0:Auto, 1:Account 1, 2:Account 2, 3:Account 3, 4:Account 4, 5:Account 5, 6:Account 6,</p>
Config.Programable.OK.Type	<p>Configure the type of the Programmable OK key.</p> <p>1:DND; 2:Menu; 3:MSG; 4:Status; 5:Book;</p>

	<p>6:Fwd; 7:PickUp; 8:Group PickUp; 9:Intercom; 10:Speed Dial; 11:History; 12:Favorite; 13:Redial; 18: Call Return; 19: HotDesking; 21:XML Browser.</p>
Config.Programable.OK.Param1	<p>The param1 is used to configure the value of the programmable line key X ("X" ranges from 1-6).</p> <p>The param1 is only used for line key type (7, 8, 9, 10).</p> <p>For line key type 7, param1 is the pick up target.</p> <p>For line key type 8, param1 is the group pick up target.</p> <p>For line key type 9, param1 is the intercom number.</p> <p>For line key type 10, param1 is the speed dial number.</p> <p>The range of the value length is 1~63 characters.</p>
Config.Programable.OK.Param2	<p>The param2 is used to configure the account information of the programmable line key X ("X" ranges from 1-6).</p> <p>0:Auto, 1:Account 1, 2:Account 2, 3:Account 3, 4:Account 4, 5:Account 5, 6:Account 6,</p>
Config.Programable.Cancel.Type	<p>Configure the type of the Programmable Cancel key.</p> <p>0:N/A;1:DND; 2:Menu; 3:MSG; 4:Status; 5:Book; 6:Fwd; 7:PickUp; 8:Group PickUp; 9:Intercom; 10:Speed Dial; 11:History; 12:Favorite; 13:Redial; 18: Call Return; 19: HotDesking; 21:XML Browser.</p>
Config.Programable.Cancel.Param1	<p>The param1 is used to configure the value of the programmable line key X ("X" ranges from 1-6).</p> <p>The param1 is only used for line key type (7, 8, 9, 10).</p>

	<p>For line key type 7, param1 is the pick up target.</p> <p>For line key type 8, param1 is the group pick up target.</p> <p>For line key type 9, param1 is the intercom number.</p> <p>For line key type 10, param1 is the speed dial number.</p> <p>The range of the value length is 1~63 characters.</p>
Config.Programable.Cancel.Param2	<p>The param2 is used to configure the account information of the programmable line key X ("X" ranges from 1-6).</p> <p>0:Auto, 1:Account 1, 2:Account 2, 3:Account 3, 4:Account 4, 5:Account 5, 6:Account 6,</p>
Config.Programable.FWD.Type	<p>Configure the type of the Programmable FWD key.</p> <p>1:DND; 2:Menu; 3:MSG; 4:Status; 5:Book; 6:Fwd; 7:PickUp; 8:Group PickUp; 9:Intercom; 10:Speed Dial; 11:History; 12:Favorite; 13:Redial; 18: Call Return; 19: HotDesking; 21: XML Browser.</p>
Config.Programable.FWD.Param1	<p>The param1 is used to configure the value of the programmable line key X ("X" ranges from 1-6).</p> <p>The param1 is only used for line key type (7, 8, 9, 10).</p> <p>For line key type 7, param1 is the pick up target.</p> <p>For line key type 8, param1 is the group pick up target.</p> <p>For line key type 9, param1 is the intercom number.</p> <p>For line key type 10, param1 is the speed dial number.</p> <p>The range of the value length is 1~63 characters.</p>

Config.Programable.FWD.Param2	The param2 is used to configure the account information of the programmable line key X ("X" ranges from 1-6). 0:Auto, 1:Account 1, 2:Account 2, 3:Account 3, 4:Account 4, 5:Account 5, 6:Account 6,
Config.Programable.Book.Type	Configure the type of the Programmable Book key. 1:DND; 2:Menu; 3:MSG; 4:Status; 5:Book; 6:Fwd; 7:PickUp; 8:Group PickUp; 9:Intercom; 10:Speed Dial; 11:History; 12:Favorite; 13:Redial; 18: Call Return; 19: HotDesking; 21: XML Browser.
Config.Programable.Book.Param1	The param1 is used to configure the value of the programmable line key X ("X" ranges from 1-6). The param1 is only used for line key type (7, 8, 9, 10). For line key type 7, param1 is the pick up target. For line key type 8, param1 is the group pick up target. For line key type 9, param1 is the intercom number. For line key type 10, param1 is the speed dial number. The range of the value length is 1~63 characters.
Config.Programable.Book.Param2	The param2 is used to configure the account information of the programmable line key X ("X" ranges from 1-6). 0:Auto, 1:Account 1, 2:Account 2, 3:Account 3, 4:Account 4, 5:Account 5, 6:Account 6,

Config.Programable.Mute.Type	Configure the type of the Programmable Mute key. 0:N/A;1:DND; 2:Menu; 3:MSG; 4:Status; 5:Book; 6:Fwd; 7:PickUp; 8:Group PickUp; 9:Intercom; 10:Speed Dial; 11:History; 12:Favorite; 13:Redial; 18: Call Return; 19: HotDesking; 21: XML Browser.
Config.Programable.Mute.Param1	The param1 is used to configure the value of the programmable line key X ("X" ranges from 1-6). The param1 is only used for line key type (7, 8, 9, 10). For line key type 7, param1 is the pick up target. For line key type 8, param1 is the group pick up target. For line key type 9, param1 is the intercom number. For line key type 10, param1 is the speed dial number. The range of the value length is 1~63 characters.
Config.Programable.Mute.Param2	The param2 is used to configure the account information of the programmable line key X ("X" ranges from 1-6). 0:Auto, 1:Account 1, 2:Account 2, 3:Account 3, 4:Account 4, 5:Account 5, 6:Account 6,
Config.Programable.Redial.Type	Configure the type of the Programmable Redial key. 1:DND; 2:Menu; 3:MSG; 4:Status; 5:Book; 6:Fwd; 7:PickUp; 8:Group PickUp; 9:Intercom; 10:Speed Dial; 11:History; 12:Favorite; 13:Redial; 18: Call Return; 19: HotDesking; 21:XML Browser.
Config.Programable.Redial.Param1	The param1 is used to configure the value of the programmable line key X ("X" ranges

	<p>from 1-6).</p> <p>The param1 is only used for line key type (7, 8, 9, 10).</p> <p>For line key type 7, param1 is the pick up target.</p> <p>For line key type 8, param1 is the group pick up target.</p> <p>For line key type 9, param1 is the intercom number.</p> <p>For line key type 10, param1 is the speed dial number.</p> <p>The range of the value length is 1~63 characters.</p>
Config.Programable.Redial.Param2	<p>The param2 is used to configure the account information of the programmable line key X ("X" ranges from 1-6).</p> <p>0:Auto, 1:Account 1, 2:Account 2, 3:Account 3, 4:Account 4, 5:Account 5, 6:Account 6,</p>

Voice Configuration

Config.Voice.General.VAD	Enable or Disable the phone to detect the silence, 0-Disabled, 1-Enabled.
Config.Voice.General.CNG	Enable or Disable the phone to generate comfortable noise, 0-Disabled, 1-Enabled.
Config.Voice.General.SideTone	Configure the side tone, the value ranges from -32768 to -3; the default value is -32768.
Config.Voice.General.EchoCanceller	Enable or Disable the phone to cancel echo, 0-Disabled, 1-Enabled (default).
Config.Voice.Jitter.Enable	Enable or Disable jitter buffer, 0-Disabled, 1-Enabled (default).
Config.Voice.Jitter.Adaptive	Configure the type of jitter buffer, 0-Fixed, 1-Adaptive (default).
Config.Voice.Jitter.Min	Configure the minimum delay (0 by default),
Config.Voice.Jitter.Max	maximum delay(300 by default) and normal delay (120 by default).
Config.Voice.Jitter.Nominal	The range of Type is: 0~1000(in millisecond).
Config.Voice.Tone.Country	Configure the type of voice tone.

	0 = Custom 1 = default 2 = CHINA 3 = SPAIN 4 = LUXEMBOURG 5 = SWEDEN 6 = TAIWAN 7 = BELGIUM 8 = DENMARK 9 = FINLAND 10 = GERMANY 11 = NETHERLANDS 12 = NORWAY 13 = PORTUGAL
--	--

Config.Voice.DTMF.Repetition	Configure the DTMF Repetition
Config.Voice.DTMF.Duration	Configure the DTMF Duration
Config.Voice.RTCP.Enable	Enable or Disable RTCP, 0-Disabled, 1-Enabled (default).
Config.Voice.RTCP.Interval	Configure the RTCP interval (in seconds).
Config.Voice.RTCP.RTCPXR	Configure the RTCPXR
Config.Voice.G726.Coding	Enable or Disable G726 coding, 0-Disabled(default), 1-Enabled

Tone Configuration

Config.Tone.GENERAL.Busy	Configure the tone of busy
Config.Tone.General.Ringback	Configure the tone ringback.
Config.Tone.GENERAL.Congestion	Configure the Congestion
Config.Tone.GENERAL.Dialtone	Configure the dial tone.
Config.Tone.GENERAL.Disconnect	Configure the Disconnect time.
Config.Tone.GENERAL.Callwait	Configure the call wait time.
Config.Tone.GENERAL.Recorder	Configure the Recorder.
Config.Tone.GENERAL.SpecialDial	Configure the Special Dial.
Config.Tone.GENERAL.SpecialInfo	Configure the Special Info.
Config.Tone.GENERAL.StutterDial	Configure the Stutter Dial.
Config.Tone.GENERAL.X	Configure the key from 0 to 9
Config.Tone.GENERAL.Star	Configure the [*] key
Config.Tone.GENERAL.Pound	Configure the [#] key

XML Browser Configuration

Config.XMLBrowser.XMLBROWSER.VendorPrefix	Configure the XML Browser VendorPrefix
Config.XMLBrowser.XMLBROWSER.MenuItemNode	Configure the XML Browser MenuItemNode
Config.XMLBrowser.XMLBROWSER.DirectoryItemNode	Configure the XML Browser DirectoryItemNode

Config.XMLBrowser.XMLBROWSER.MenuItemNameNode	Configure the XML Browser MenuItemNameNode
Config.XMLBrowser.XMLBROWSER.MenuItemURLNode	Configure the XML Browser MenuItemURLNode
Config.XMLBrowser.XMLBROWSER.DirectoryItemNameNode	Configure the XML Browser DirectoryItemNameNode
Config.XMLBrowser.XMLBROWSER.DirectoryItemTelephoneNode	Configure the XML Browser DirectoryItemTelephoneNode
Config.XMLBrowser.XMLBROWSER.DirectoryItemPresenceNode	Configure the XML Browser DirectoryItemPresenceNode

Download Configuration

Config.Firmware.Url	Configure the url of the firmware file server, support ftp/tftp/http/https protocol, the suffix of the file name must be .rom. The range of the value length is 1~255 characters. The max size of the firmware is 8M bytes.
Config.Ringtone.Url	Configure the url of the custom ringtone file server, support ftp/tftp/http/https protocol, the suffix of the file name must be .wav. The range of the value length is 1~255 characters. The max count of the ring file is 10, and the max total ring file size is 100K bytes.
Config.Contact.Url	Configure the url of the contact file server, support ftp/tftp/http/https protocol, the suffix of the file name must be .xml. The range of the value length is 1~255 characters. The max size of the contact file is 500K bytes.
Config.Certificate.X.Url	Configure the url of the custom ringtone file server, support ftp/tftp/http/https protocol, the suffix of the file name must be .pem. "X" ranges from 01-10 The range of the value length is 1~255 characters.