

Dual Input Manual for RM200 Serial V1.0

1. Remove the covers of top, left and right sides, as is shown in figure 1.



Figure 1 Covers

2. Install the bypass input terminals, as is shown in figure 2.

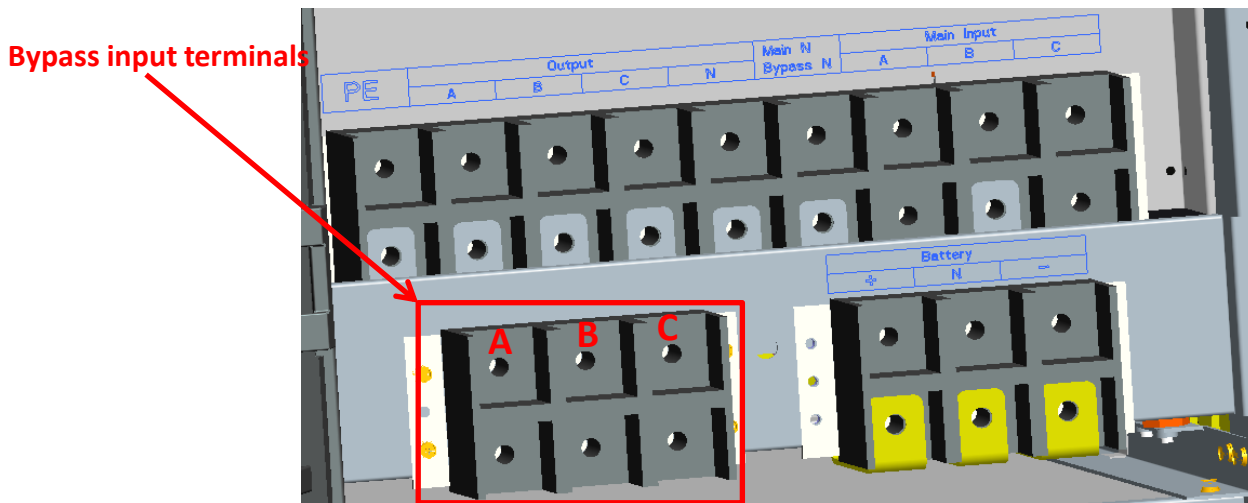


Figure 2 Bypass input terminals

- Remove shorted copper bar between input switch Q1 and maintenance Q2, as is shown in figure 3, connect 3 pcs new cables (Longer) between bypass input terminals and maintenance Q2, as is shown in figure 4.

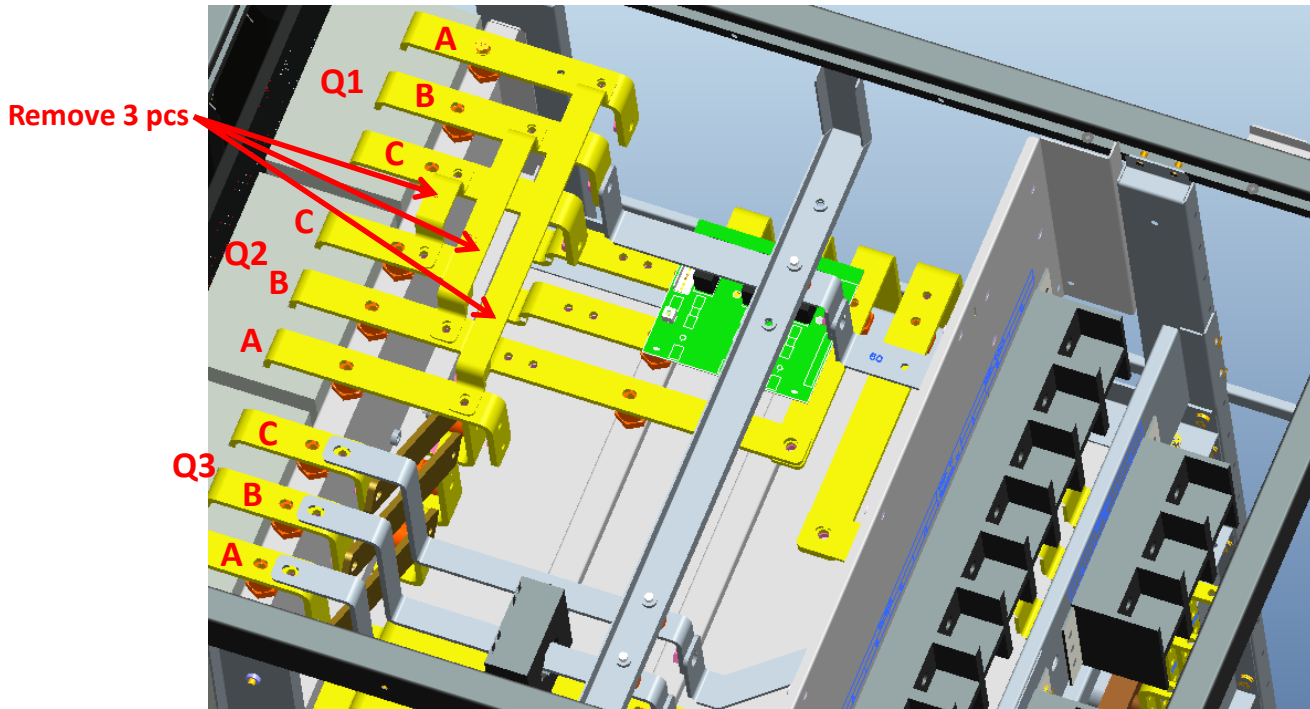


Figure 3 Shorted copper bar

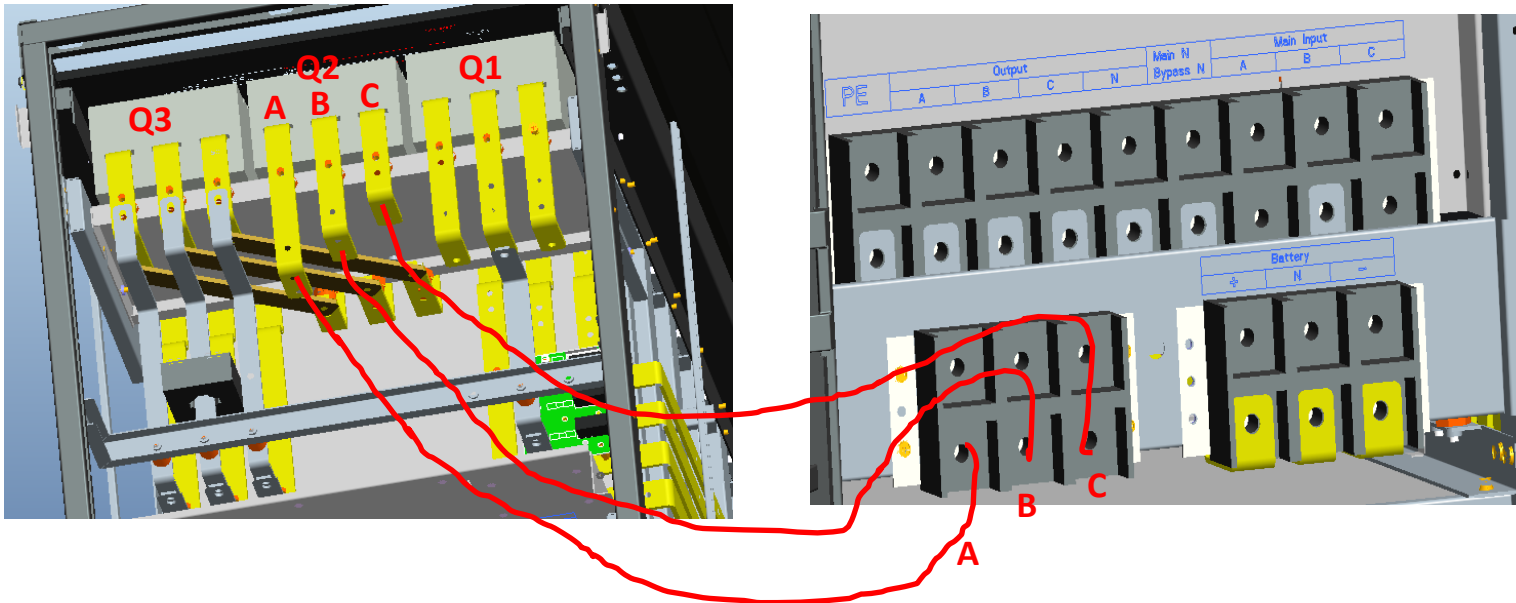


Figure 4 Connect new maintenance cables

- Remove and **leave** the old bypass module input black cables: W04 (Phase A), W05 (Phase B) and W06 (Phase C), as is shown in figure 4 and 5. Install the new bypass module input cables (Shorter than the old one) between bypass input copper bar and bypass module input, as is shown in figure 6.


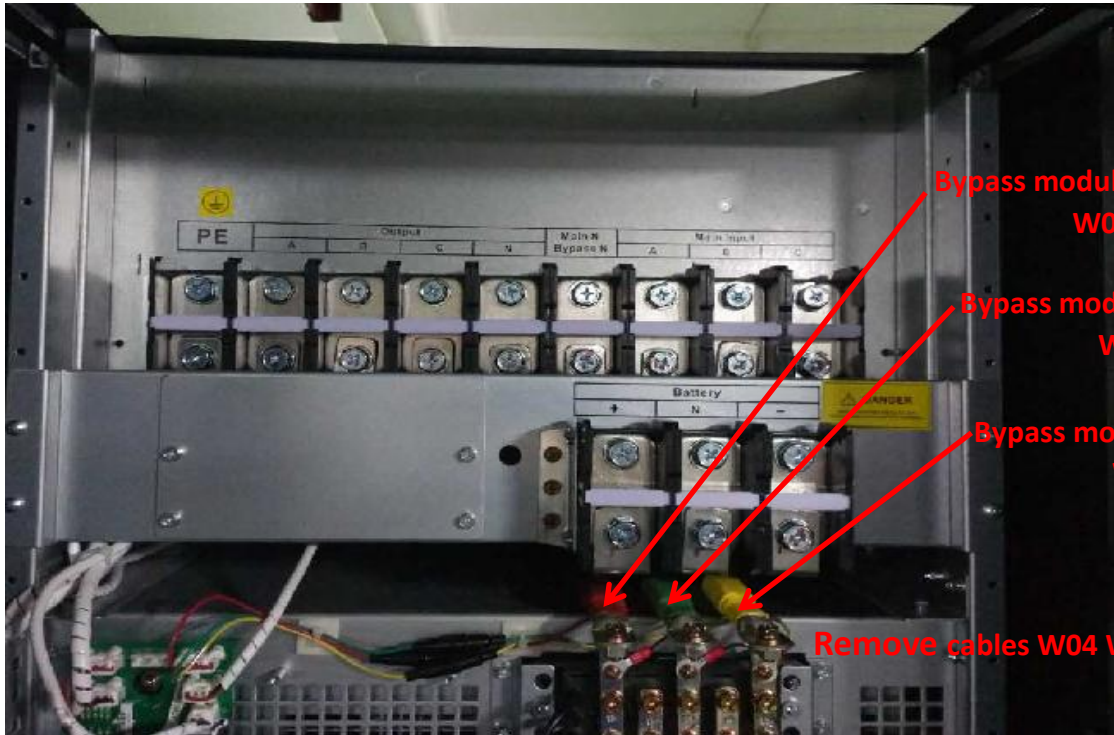


Figure 4 Bypass module input cables

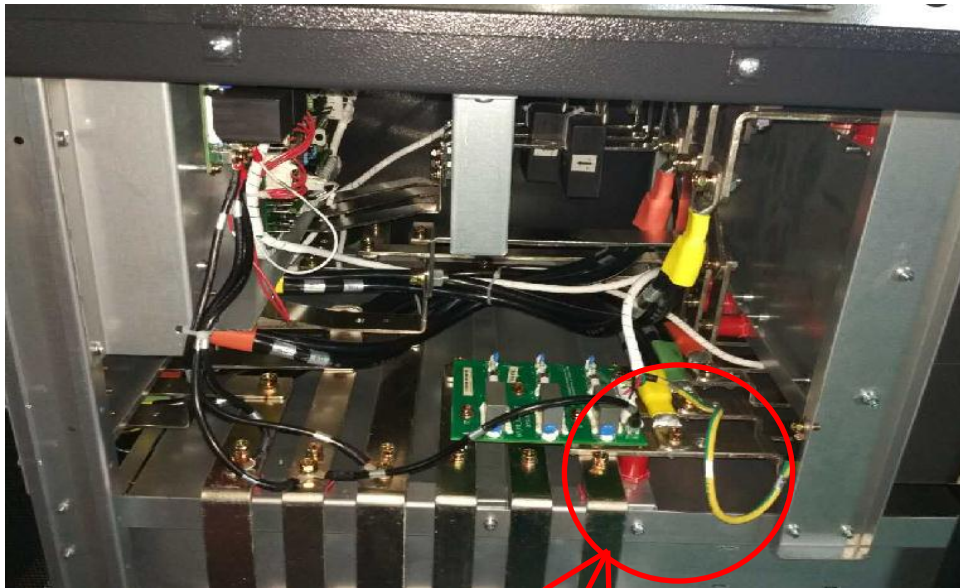

Remove cables W04 W05 W06

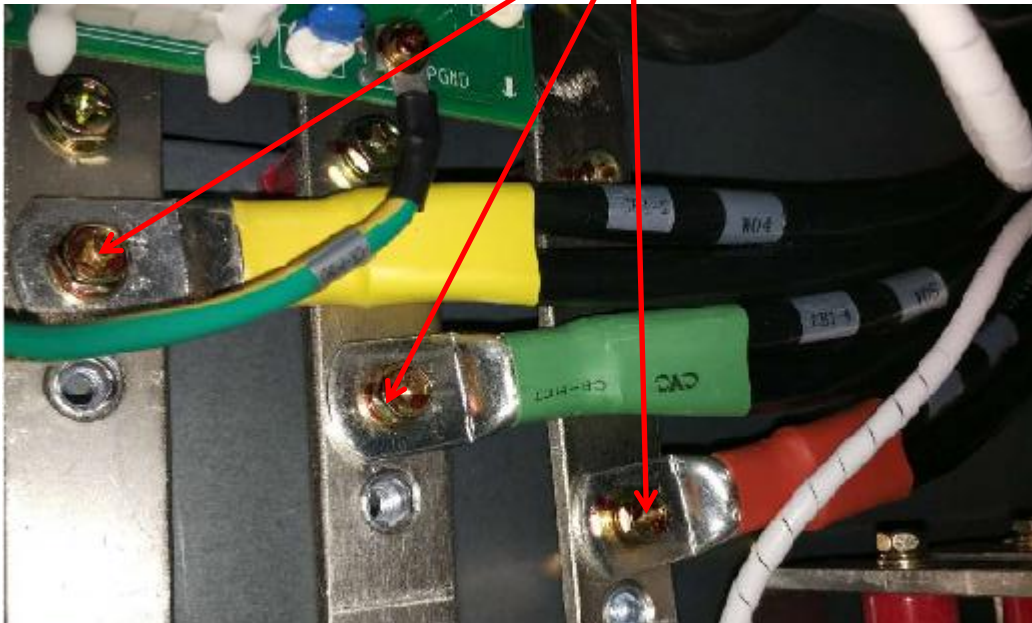


Figure 5 Remove old bypass input cables

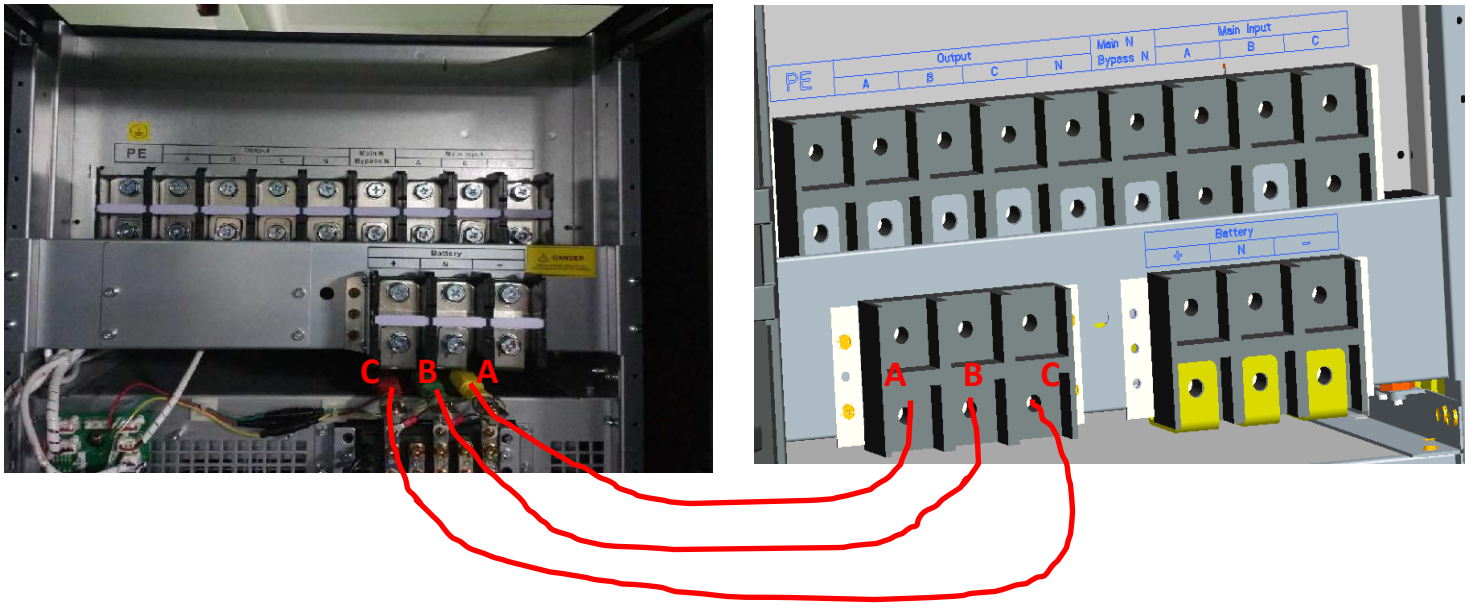


Figure 6 New bypass module input cables to bypass terminals

5. Install the bypass voltage detection cables on the battery cold start board, connect DR9-J3 terminal (Battery cold start board) to FR-J1 (Red cable) and FR-J3 (White cable), as is shown in figure 7.
Connect DR9-J3 (Battery cold start board) another terminal to FJ-J6, as is shown in figure 8.

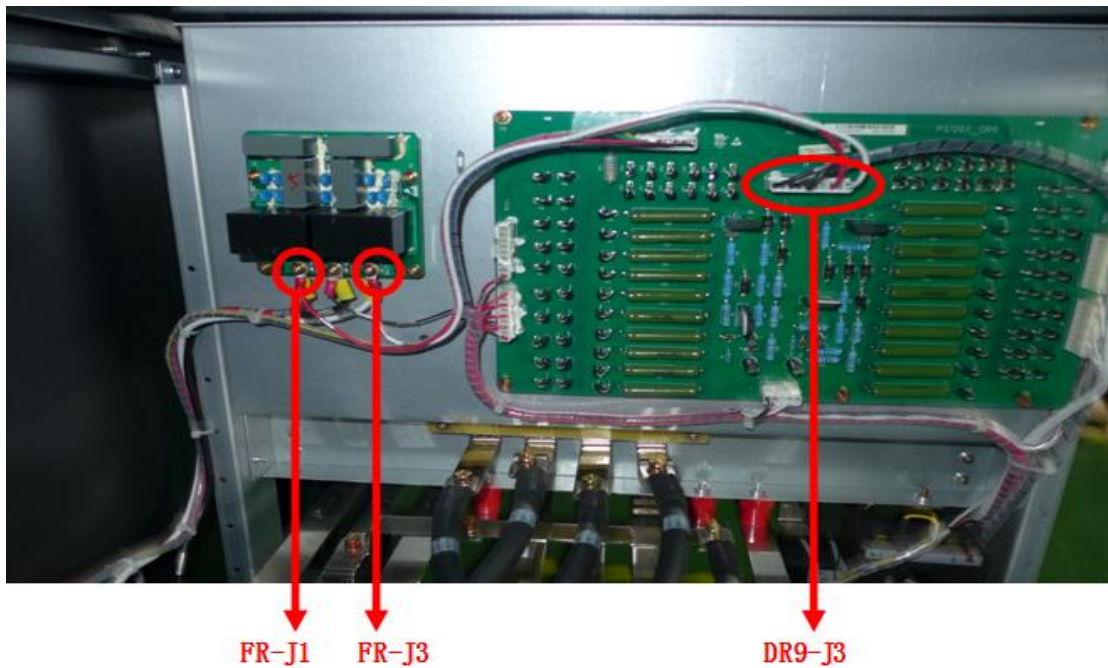


Figure 7 FR-J1 and FR-J3 cables

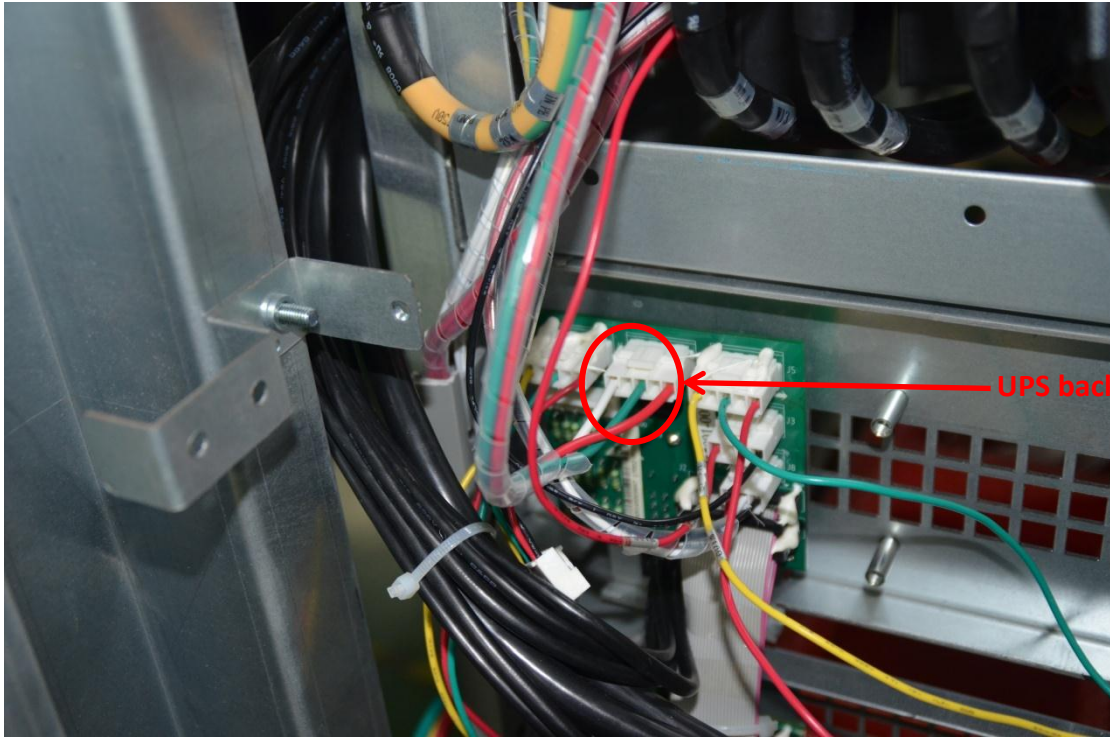


Figure 8 FJ-J6 cable

6. Check all the new connections and install back the covers of the UPS.