

## WEB Configuration Command

1 Table of Contents

2 1.1 ip http language.....1

3 1.2 ip http port.....1

4 1.3 ip http secure-port.....2

5 1.4 ip http server.....2

6 1.5 ip http http-access enable.....3

7 1.6 ip http ssl-access enable.....3

8 1.7 ip http web max-vlan.....4

9 1.8 ip http web igmp-groups.....4

10 1.9 show ip http.....5

11

12

13

## 14 Chapter 1 HTTP Configuration Commands

### 15 1.1 ip http language

#### 16 Syntax

17 To set the prompt language when a command is configured, run the following command.

```
18 [no] ip http language { english }
```

19

#### 20 Parameters

Parameters	Notes:
english	Sets the language to English.

#### 21 Default Value

22 None

#### 23 Usage Guidelines

24 This command is configured in global configuration mode.

#### 25 Example

26 The following example shows how to set the language to English.

```
27 Switch_config#ip http language english
```

### 28 1.2 ip http port

#### 29 Syntax

30 To set the HTTP port, run the following command. To return to the default setting, use the no form  
31 of this command.

```
32 ip http port { portNumber }
```

```
33 no ip http port
```

34

#### 35 Parameters

Parameters	Description
<i>portNumber</i>	Means the HTTP port's valid range is from 1 to 65535.

#### 36 Default Value

37 80

### 38 Usage Guidelines

39 This command is configured in global configuration mode.

### 40 Example

41 The following example shows how to set the HTTP port to 1234.

```
42 Switch_config#ip http port 1234
```

```
431.3 ip http secure-port
```

### 44 Syntax

45 To set the HTTPS port, run this command. To return to the default setting, use the no form of this  
46 command.

```
47 ip http secure-port {portNumber}
```

```
48 no ip http secure-port
```

### 49 Parameters

Parameters	Notes:
<i>portNumber</i>	Means the HTTPS port's valid range is from 1 to 65535.

### 50 Default Value

51 443

### 52 Usage Guidelines

53 This command is configured in global configuration mode.

### 54 Example

55 The following example shows how to set the HTTPS port to 1234.

```
56 Switch_config# ip http secure-port 1234
```

```
571.4 ip http server
```

### 58 Syntax

59 To set the HTTP service, run this command.

```
60 [no] ip http server
```

61

### 62 Usage Guidelines

63 This command is configured in global configuration mode.

## 64 Example

65 The following example shows how to set the HTTP service.

```
66 Switch_config# ip http server
```

```
671.5 ip http http-access enable
```

## 68 Syntax

```
69 [no] ip http http-access enable
```

70 To set the HTTP access mode, run this command.

## 71 Usage Guidelines

72 This command is set in global configuration mode and used to access the website, which starts  
73with http://.

## 74 Example

75 The following example shows how to set the HTTP access mode.

```
76 Switch_config# ip http http-access enable
```

```
771.6 ip http ssl-access enable
```

## 78 Syntax

```
79 [no] ip http ssl-access enable
```

80 To set the HTTPS access mode, run this command.

## 81 Usage Guidelines

82 This command is set in global configuration mode and used to access the website, which starts  
83with https://.

## 84 Example

85 The following example shows how to set the HTTPS access mode.

```
86 Switch_config# ip http ssl-access enable
```

```
871.7 ip http web max-vlan
```

## 88 Syntax

```
89 ip http web max-vlan { max-vlan }
```

90 To set the maximum number of VLAN entries displayed in a web page, run this command.

```
91 no ip http web max-vlan
```

92 To resume the default maximum number of VLAN entries to 100, run this command.

## 93 Parameters

Parameters	Notes:
------------	--------

<i>max-vlan</i>	Means the maximum number of vlan entries in the web page, which ranges from 1 to 4094.
-----------------	--

## 94 Default Value

95 100

## 96 Usage Guidelines

97 This command is configured in global configuration mode.

## 98 Example

99 The following example shows how to set the maximum number of VLAN entries displayed in a  
100 web page to 123.

101 Switch\_config# ip http web max-vlan 123

102 1.8 ip http web igmp-groups

## 103 Syntax

104 ip http web igmp-groups { *igmp-groups* }

105 To set the maximum number of multicast entries displayed in a web page, run this command.

106 no ip http web igmp-groups

107 To resume the default maximum number of multicast entries to 15, run this command.

## 108 Parameters

Parameters	Notes:
<i>igmp-groups</i>	Means the maximum number of multicast entries in the web page, which ranges from 1 to 100.

## 109 Default Value

110 15

## 111 Usage Guidelines

112 This command is configured in global configuration mode.

## 113 Example

114 The following example shows how to set the maximum number of multicast entries displayed in  
115 a web page to 12.

116 Switch\_config# ip http web igmp-groups 12

117 1.9 show ip http

118 Syntax

119 show ip http

120 Usage Guidelines

121 The command is used to browse whether the HTTP server is enabled.

122 Example

123 Switch\_config#show ip http

124 Http server is running

125