

# IPC Lite Series Hardware Instruction



Пример как открыть камеру

SNR-CI-DMB3.0I

DH-IPC-HFW4300EP-0360B

DH-IPC-HFW4300EP-0600B

DH-IPC-HFW4421EP-0360B

DH-IPC-HFW4421EP-0600B

# HFW1000/1200S



Reset: Make short circuit between two small holes on the PCB for 5 seconds.

Serial port connection: Please use connector(1.2.17.12.0011) and weld it on the package of the serial port.


# HDW1000/1200S



Reset: Make short circuit between two small holes on the PCB for 5 seconds.

Serial port connection: Please use connector(1.2.17.12.0011) and weld it on the package of the serial port.

# HD1000/1200C

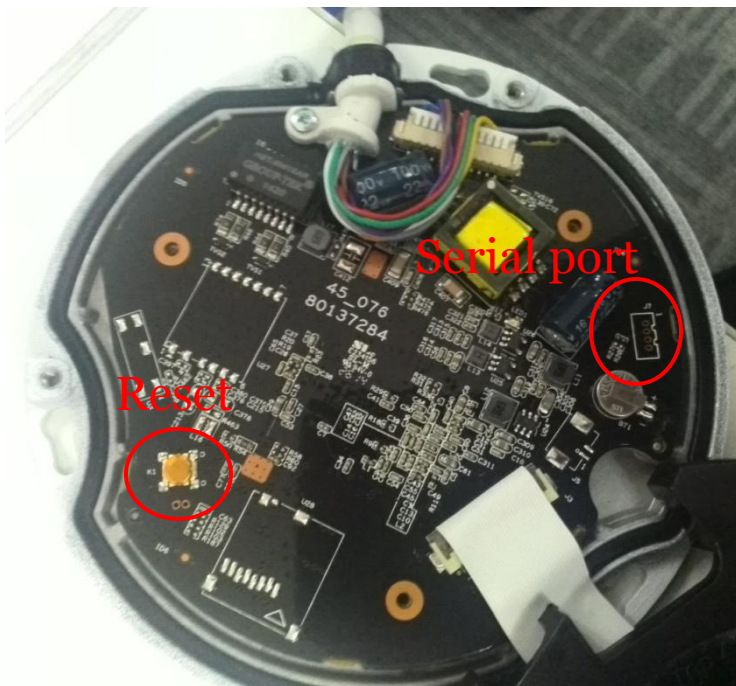

Reset: Press the reset button for 5 seconds.

Serial port connection: Please use connector(1.2.17.12.0011) and weld it on the package of the serial port.


# HDBW1000/1200E



Reset: Press the reset button for 5 seconds.

Serial port connection: Already have connector, just insert a serial line on it directly.

# HFW2100/2200/2300R-Z/VF

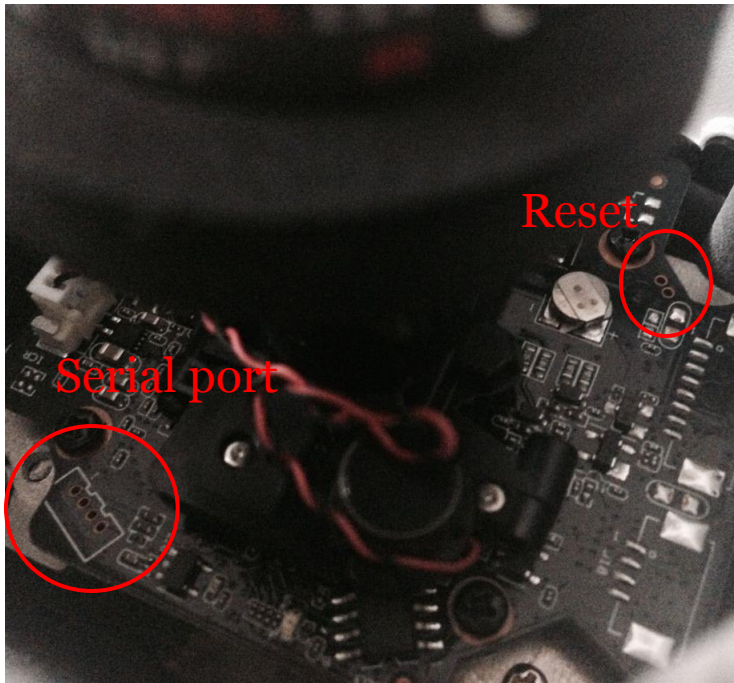


Reset: Make short circuit between two small holes on the PCB for 5 seconds.

Serial port connection: Please use connector(1.2.17.12.0011) and weld it on the package of the serial port.



# HDBW2100/2200/2300R-Z/VF

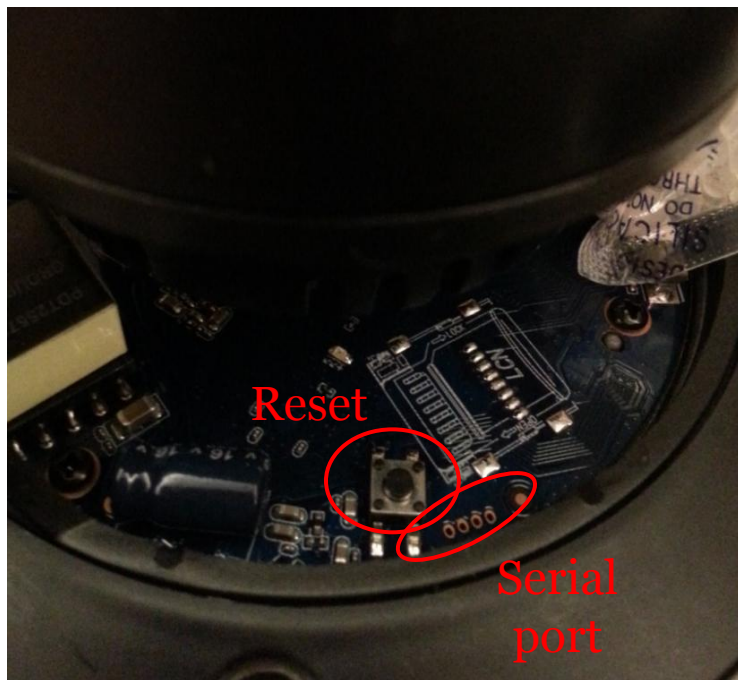

Reset: Press the reset button for 5 seconds.

Serial port connection: Please use connector(1.2.17.12.0011) and weld it on the package of the serial port.

# Illustration of serial port connection

1. Find a connector

Material number: 1.2.17.12.0011

2. Weld it on the package of the serial port

Pay attention that the two gaps on the lateral of the connector should aim the two pits on the package silk print of the PCB.

3. Insert a serial line on the connector

