

# SNR-S2970G-48S Interface Range Command

## Table of Contents

Chapter 1 Interface Range Command.....	1
1.1 Interface Range.....	1

## Chapter 1 Interface Range Command

### 1.1 Interface Range

#### Description

```
interface range type slot<port1 - port2 | port3>[<port1 - port2|port3>]
```

#### Parameter

Name	Description	Description
<i>type</i>	Interface type	All legal interface types except for the management interface on the main control board of the rack-mounted switch.
<i>slot</i>	Slot number	All legal slot numbers
<i>port1</i>	Beginning value of the port number	All legal port numbers on the slot.
<i>port2</i>	Ending value of the port number	All legal port numbers on the slot except for port 1.
<i>port3</i>	A single port.	All legal port numbers on the slot.

#### Default

none

#### Instruction

Use this command to enter the interface range mode.

#### Example

Use the following command to enter the interface configuration mode, including slot 0 and fast Ethernet port 1,2,3,6,8,10,11,12:

```
switch_config#interface range 1 - 3 , 6 , 8 , 10 - 12
switch_config_if_range#
```