

Content

CHAPTER 1 COMMANDS FOR ACL.....1-1

| | |
|--|------|
| 1.1 ABSOLUTE-PERIODIC/PERIODIC..... | 1-1 |
| 1.2 ABSOLUTE START..... | 1-2 |
| 1.3 ACCESS-LIST DENY-PREEMPTION..... | 1-2 |
| 1.4 ACCESS-LIST (IP EXTENDED)..... | 1-3 |
| 1.5 ACCESS-LIST (IP STANDARD)..... | 1-4 |
| 1.6 ACCESS-LIST(MAC EXTENDED)..... | 1-5 |
| 1.7 ACCESS-LIST(MAC-IP EXTENDED)..... | 1-5 |
| 1.8 ACCESS-LIST(MAC STANDARD)..... | 1-8 |
| 1.9 CLEAR ACCESS-GROUP STATISTIC..... | 1-8 |
| 1.10 FIREWALL..... | 1-9 |
| 1.11 IP ACCESS EXTENDED..... | 1-9 |
| 1.12 IP ACCESS STANDARD..... | 1-9 |
| 1.13 IPV6 ACCESS-LIST..... | 1-10 |
| 1.14 IPV6 ACCESS STANDARD..... | 1-10 |
| 1.15 IPV6 ACCESS EXTENDED..... | 1-11 |
| 1.16 {IP IPV6 MAC MAC-IP} ACCESS-GROUP..... | 1-11 |
| 1.17 {IP IPV6 MAC MAC-IP} ACCESS-GROUP (INTERFACE MODE)..... | 1-12 |
| 1.18 MAC ACCESS EXTENDED..... | 1-12 |
| 1.19 MAC-IP ACCESS EXTENDED..... | 1-13 |
| 1.20 PERMIT DENY (IP EXTENDED)..... | 1-13 |
| 1.21 PERMIT DENY(IP STANDARD)..... | 1-14 |
| 1.22 PERMIT DENY(IPV6 EXTENDED)..... | 1-15 |
| 1.23 PERMIT DENY(IPV6 STANDARD)..... | 1-16 |
| 1.24 PERMIT DENY(MAC EXTENDED)..... | 1-17 |
| 1.25 PERMIT DENY(MAC-IP EXTENDED)..... | 1-18 |
| 1.26 SHOW ACCESS-LISTS..... | 1-20 |
| 1.27 SHOW ACCESS-GROUP..... | 1-21 |
| 1.28 SHOW ACL VLAN-DIVISION <VLAN-ID> TO <VLAN-ID>..... | 1-22 |
| 1.29 SHOW FIREWALL..... | 1-23 |
| 1.30 SHOW IPV6 ACCESS-LISTS..... | 1-23 |
| 1.31 SHOW TIME-RANGE..... | 1-24 |
| 1.32 TIME-RANGE..... | 1-24 |

CHAPTER 2 COMMANDS FOR SELF-DEFINED ACL.....2-1

| | |
|--|-----|
| 2.1 USERDEFINED-ACCESS-LIST STANDARD OFFSET..... | 2-1 |
|--|-----|

| Commands for Security Function | Content |
|---|-------------|
| 2.2 USERDEFINED-ACCESS-LIST STANDARD..... | 2-2 |
| 2.3 USERDEFINED ACCESS-GROUP..... | 2-3 |
| CHAPTER 3 COMMANDS FOR PRIORITY ACL..... | 3-1 |
| 3.1 CLEAR ACCESS-GROUP..... | 3-1 |
| 3.2 SHOW ACCESS-GROUP..... | 3-1 |
| 3.3 CLEAR VACL STATISTIC VLAN..... | 3-2 |
| 3.4 SHOW VACL VLAN..... | 3-3 |
| 3.5 IP ACCESS-GROUP..... | 3-4 |
| 3.6 IPV6 ACCESS-GROUP..... | 3-5 |
| 3.7 MAC ACCESS-GROUP..... | 3-6 |
| 3.8 MAC-IP ACCESS-GROUP..... | 3-7 |
| 3.9 VACL IP ACCESS-GROUP..... | 3-8 |
| 3.10 VACL IPV6 ACCESS-GROUP..... | 3-8 |
| 3.11 VACL MAC ACCESS-GROUP..... | 3-9 |
| 3.12 VACL MAC-IP ACCESS-GROUP..... | 3-10 |
| CHAPTER 4 COMMANDS FOR 802.1X..... | 4-1 |
| 4.1 AUTHENTICATION DOT1X RADIUS NONE..... | 4-1 |
| 4.2 DEBUG DOT1X DETAIL..... | 4-1 |
| 4.3 DEBUG DOT1X ERROR..... | 4-2 |
| 4.4 DEBUG DOT1X FSM..... | 4-2 |
| 4.5 DEBUG DOT1X PACKET..... | 4-3 |
| 4.6 DOT1X ACCEPT-MAC..... | 4-3 |
| 4.7 DOT1X EAPOR ENABLE..... | 4-4 |
| 4.8 DOT1X ENABLE..... | 4-4 |
| 4.9 DOT1X IPV6 PASSTHROUGH..... | 4-5 |
| 4.10 DOT1X GUEST-VLAN..... | 4-5 |
| 4.11 DOT1X MACFILTER ENABLE..... | 4-6 |
| 4.12 DOT1X MACBASED GUEST-VLAN..... | 4-7 |
| 4.13 DOT1X MACBASED PORT-DOWN-FLUSH..... | 4-7 |
| 4.14 DOT1X MAX-REQ..... | 4-8 |
| 4.15 DOT1X USER ALLOW-MOVEMENT..... | 4-8 |
| 4.16 DOT1X USER FREE-RESOURCE..... | 4-9 |
| 4.17 DOT1X MAX-USER MACBASED..... | 4-9 |
| 4.18 DOT1X MAX-USER USERBASED..... | 4-10 |
| 4.19 DOT1X PORTBASED MODE SINGLE-MODE..... | 4-10 |
| 4.20 DOT1X PORT-CONTROL..... | 4-11 |
| 4.21 DOT1X PORT-METHOD..... | 4-11 |
| 4.22 DOT1X PRIVATECLIENT ENABLE..... | 4-12 |
| 4.23 DOT1X PRIVATECLIENT PROTECT ENABLE..... | 4-12 |
| 4.24 DOT1X RE-AUTHENTICATE..... | 4-13 |

| Commands for Security Function | Content |
|---|------------|
| 4.25 DOT1X RE-AUTHENTICATION..... | 4-13 |
| 4.26 DOT1X TIMEOUT QUIET-PERIOD..... | 4-14 |
| 4.27 DOT1X TIMEOUT RE-AUTHPERIOD..... | 4-14 |
| 4.28 DOT1X TIMEOUT TX-PERIOD..... | 4-14 |
| 4.29 DOT1X UNICAST ENABLE..... | 4-15 |
| 4.30 DOT1X WEB AUTHENTICATION ENABLE..... | 4-15 |
| 4.31 DOT1X WEB AUTHENTICATION IPV6 PASSTHROUGH..... | 4-15 |
| 4.32 DOT1X WEB REDIRECT..... | 4-15 |
| 4.33 DOT1X WEB REDIRECT ENABLE..... | 4-16 |
| 4.34 SHOW DOT1X..... | 4-16 |
| 4.35 SHOW DOT1X USER..... | 4-17 |
| 4.36 CLEAR DOT1X ALL..... | 4-18 |
| 4.37 USER-CONTROL LIMIT..... | 4-18 |
| 4.38 USER-CONTROL LIMIT IPV6..... | 4-18 |
| CHAPTER 5 COMMANDS FOR THE NUMBER LIMITATION FUNCTION OF MAC AND IP IN PORT, VLAN..... | 5-1 |
| 5.1 DEBUG IP ARP COUNT..... | 5-1 |
| 5.2 DEBUG IPV6 ND COUNT..... | 5-1 |
| 5.3 DEBUG SWITCHPORT ARP COUNT..... | 5-2 |
| 5.4 DEBUG SWITCHPORT MAC COUNT..... | 5-2 |
| 5.5 DEBUG SWITCHPORT ND COUNT..... | 5-3 |
| 5.6 DEBUG VLAN MAC COUNT..... | 5-3 |
| 5.7 IP ARP DYNAMIC MAXIMUM..... | 5-4 |
| 5.8 IPV6 ND DYNAMIC MAXIMUM..... | 5-4 |
| 5.9 MAC-ADDRESS QUERY TIMEOUT..... | 5-5 |
| 5.10 SHOW ARP-DYNAMIC COUNT..... | 5-5 |
| 5.11 SHOW MAC-ADDRESS DYNAMIC COUNT..... | 5-6 |
| 5.12 SHOW ND-DYNAMIC COUNT..... | 5-7 |
| 5.13 SWITCHPORT ARP DYNAMIC MAXIMUM..... | 5-7 |
| 5.14 SWITCHPORT MAC-ADDRESS DYNAMIC MAXIMUM..... | 5-8 |
| 5.15 SWITCHPORT MAC-ADDRESS VIOLATION..... | 5-9 |
| 5.16 SWITCHPORT ND DYNAMIC MAXIMUM..... | 5-9 |
| 5.17 VLAN MAC-ADDRESS DYNAMIC MAXIMUM..... | 5-10 |
| CHAPTER 6 COMMANDS FOR AM CONFIGURATION..... | 6-1 |
| 6.1 AM ENABLE..... | 6-1 |
| 6.2 AM PORT..... | 6-1 |
| 6.3 AM IP-POOL..... | 6-1 |
| 6.4 AM MAC-IP-POOL..... | 6-2 |
| 6.5 NO AM ALL..... | 6-2 |

6.6 SHOW AM.....6-3

CHAPTER 7 COMMANDS FOR SECURITY FEATURE.....7-1

7.1 DOSATTACK-CHECK SRCIP-EQUAL-DSTIP ENABLE.....7-1
7.2 DOSATTACK-CHECK IPV4-FIRST-FRAGMENT ENABLE.....7-1
7.3 DOSATTACK-CHECK TCP-FLAGS ENABLE.....7-1
7.4 DOSATTACK-CHECK SRCPORT-EQUAL-DSTPORT ENABLE.....7-2
7.5 DOSATTACK-CHECK TCP-FRAGMENT ENABLE.....7-2
7.6 DOSATTACK-CHECK TCP SEGMENT.....7-2
7.7 DOSATTACK-CHECK ICMP-ATTACKING ENABLE.....7-2
7.8 DOSATTACK-CHECK ICMPV4-SIZE.....7-3
7.9 DOSATTACK-CHECK ICMPV6-SIZE.....7-3

CHAPTER 8 COMMANDS FOR TACACS+.....8-1

8.1 TACACS-SERVER AUTHENTICATION HOST.....8-1
8.2 TACACS-SERVER KEY.....8-2
8.3 TACACS-SERVER NAS-IPV4.....8-2
8.4 TACACS-SERVER TIMEOUT.....8-3
8.5 DEBUG TACACS-SERVER.....8-3

CHAPTER 9 COMMANDS FOR RADIUS.....9-1

9.1 AAA ENABLE.....9-1
9.2 AAA-ACCOUNTING ENABLE.....9-1
9.3 AAA-ACCOUNTING UPDATE.....9-2
9.4 DEBUG AAA PACKET.....9-2
9.5 DEBUG AAA DETAIL ATTRIBUTE.....9-2
9.6 DEBUG AAA DETAIL CONNECTION.....9-3
9.7 DEBUG AAA DETAIL EVENT.....9-3
9.8 DEBUG AAA ERROR.....9-4
9.9 RADIUS NAS-IPV4.....9-4
9.10 RADIUS NAS-IPV6.....9-5
9.11 RADIUS-SERVER ACCOUNTING HOST.....9-5
9.12 RADIUS-SERVER AUTHENTICATION HOST.....9-6
9.13 RADIUS-SERVER DEAD-TIME.....9-7
9.14 RADIUS-SERVER KEY.....9-8
9.15 RADIUS-SERVER RETRANSMIT.....9-8
9.16 RADIUS-SERVER TIMEOUT.....9-9
9.17 RADIUS-SERVER ACCOUNTING-INTERIM-UPDATE TIMEOUT.....9-9
9.18 SHOW AAA AUTHENTICATED-USER.....9-10
9.19 SHOW AAA AUTHENTICATING-USER.....9-10
9.20 SHOW AAA CONFIG.....9-11

| Commands for Security Function | Content |
|---|-------------|
| 9.21 SHOW RADIUS AUTHENTICATED-USER COUNT..... | 9-12 |
| 9.22 SHOW RADIUS AUTHENTICATING-USER COUNT..... | 9-12 |
| 9.23 SHOW RADIUS COUNT..... | 9-13 |
| CHAPTER 10 COMMANDS FOR SSL CONFIGURATION.....10-1 | |
| 10.1 IP HTTP SECURE-SERVER..... | 10-1 |
| 10.2 IP HTTP SECURE-PORT..... | 10-1 |
| 10.3 IP HTTP SECURE- CIPHERSUITE..... | 10-2 |
| 10.4 SHOW IP HTTP SECURE-SERVER STATUS..... | 10-2 |
| 10.5 DEBUG SSL..... | 10-2 |
| CHAPTER 11 COMMANDS FOR IPV6 SECURITY RA.....11-1 | |
| 11.1 IPV6 SECURITY-RA ENABLE..... | 11-1 |
| 11.2 IPV6 SECURITY-RA ENABLE..... | 11-1 |
| 11.3 SHOW IPV6 SECURITY-RA..... | 11-2 |
| 11.4 DEBUG IPV6 SECURITY-RA..... | 11-2 |
| CHAPTER 12 COMMANDS FOR MAB.....12-1 | |
| 12.1 AUTHENTICATION MAB..... | 12-1 |
| 12.2 CLEAR MAC-AUTHENTICATION-BYPASS BINDING..... | 12-1 |
| 12.3 DEBUG MAC-AUTHENTICATION-BYPASS..... | 12-1 |
| 12.4 MAC-AUTHENTICATION-BYPASS BINDING-LIMIT..... | 12-2 |
| 12.5 MAC-AUTHENTICATION-BYPASS ENABLE..... | 12-2 |
| 12.6 MAC-AUTHENTICATION-BYPASS GUEST-VLAN..... | 12-3 |
| 12.7 MAC-AUTHENTICATION-BYPASS SPOOFING-GARP-CHECK..... | 12-3 |
| 12.8 MAC-AUTHENTICATION-BYPASS TIMEOUT LINKUP-PERIOD..... | 12-3 |
| 12.9 MAC-AUTHENTICATION-BYPASS TIMEOUT OFFLINE-DETECT..... | 12-4 |
| 12.10 MAC-AUTHENTICATION-BYPASS TIMEOUT QUIET-PERIOD..... | 12-4 |
| 12.11 MAC-AUTHENTICATION-BYPASS TIMEOUT REAUTH-PERIOD..... | 12-4 |
| 12.12 MAC-AUTHENTICATION-BYPASS TIMEOUT STALE-PERIOD..... | 12-5 |
| 12.13 MAC-AUTHENTICATION-BYPASS USERNAME-FORMAT..... | 12-5 |
| 12.14 SHOW MAC-AUTHENTICATION-BYPASS..... | 12-6 |
| CHAPTER 13 COMMANDS FOR PPPOE INTERMEDIATE AGENT.....13-1 | |
| 13.1 DEBUG PPPOE INTERMEDIATE AGENT PACKET {RECEIVE SEND} INTERFACE ETHERNET <INTERFACE-NAME>..... | 13-1 |
| 13.2 PPPOE INTERMEDIATE-AGENT..... | 13-1 |
| 13.3 PPPOE INTERMEDIATE-AGENT (PORT)..... | 13-2 |

| Commands for Security Function | Content |
|--|-------------|
| 13.4 PPPOE INTERMEDIATE-AGENT CIRCUIT-ID..... | 13-2 |
| 13.5 PPPOE INTERMEDIATE-AGENT DELIMITER..... | 13-3 |
| 13.6 PPPOE INTERMEDIATE-AGENT FORMAT..... | 13-3 |
| 13.7 PPPOE INTERMEDIATE-AGENT REMOTE-ID..... | 13-3 |
| 13.8 PPPOE INTERMEDIATE-AGENT TRUST..... | 13-4 |
| 13.9 PPPOE INTERMEDIATE-AGENT TYPE SELF-DEFINED CIRCUIT-ID..... | 13-4 |
| 13.10 PPPOE INTERMEDIATE-AGENT TYPE SELF-DEFINED REMOTEID..... | 13-5 |
| 13.11 PPPOE INTERMEDIATE-AGENT TYPE TR-101 CIRCUIT-ID ACCESS-NODE-ID..... | 13-5 |
| 13.12 PPPOE INTERMEDIATE-AGENT TYPE TR-101 CIRCUIT-ID IDENTIFIER-STRING OPTION DELIMITER..... | 13-6 |
| 13.13 PPPOE INTERMEDIATE-AGENT VENDOR-TAG STRIP..... | 13-7 |
| 13.14 SHOW PPPOE INTERMEDIATE-AGENT ACCESS-NODE-ID..... | 13-7 |
| 13.15 SHOW PPPOE INTERMEDIATE-AGENT IDENTIFIER-STRING OPTION DELIMITER..... | 13-8 |
| 13.16 SHOW PPPOE INTERMEDIATE-AGENT INFO..... | 13-8 |
| CHAPTER 14 COMMANDS FOR WEB PORTAL | |
| AUTHENTICATION..... | 14-1 |
| 14.1 COMMANDS FOR AUTHENTICATION FUNCTION..... | 14-1 |
| 14.1.1 ac-name..... | 14-1 |
| 14.1.2 captive-portal..... | 14-1 |
| 14.1.3 clear..... | 14-1 |
| 14.1.4 configuration..... | 14-2 |
| 14.1.5 debug captive-portal packet..... | 14-2 |
| 14.1.6 debug captive-portal trace..... | 14-3 |
| 14.1.7 debug captive-portal-cluster info..... | 14-3 |
| 14.1.8 debug captive-portal error..... | 14-3 |
| 14.1.9 enable (global)..... | 14-4 |
| 14.1.10 enable (instance)..... | 14-4 |
| 14.1.11 external portal-server server-name..... | 14-4 |
| 14.1.12 name..... | 14-5 |
| 14.1.13 portal-server..... | 14-5 |
| 14.1.14 radius-auth-server..... | 14-6 |
| 14.1.15 redirect url-head..... | 14-6 |
| 14.1.16 redirect attribute ssid enable..... | 14-7 |
| 14.1.17 redirect attribute ssid name..... | 14-7 |
| 14.1.18 redirect attribute nas-ip enable..... | 14-7 |
| 14.1.19 redirect attribute nas-ip name..... | 14-8 |
| 14.1.20 interface ethernet vlan..... | 14-8 |
| 14.1.21 show captive-portal..... | 14-9 |
| 14.1.22 show captive-portal status..... | 14-9 |

| Commands for Security Function | Content |
|--|--------------|
| 14.1.23 show captive-portal configuration..... | 14-10 |
| 14.1.24 show captive-portal configuration interface..... | 14-10 |
| 14.1.25 show captive-portal configuration status..... | 14-11 |
| 14.1.26 show captive-portal client status..... | 14-11 |
| 14.1.27 show captive-portal configuration client..... | 14-12 |
| 14.1.28 show captive-portal ext-portal-server status..... | 14-12 |
| 14.1.29 show captive-portal interface configuration status..... | 14-13 |
| 14.2 COMMANDS FOR ACCOUNTING FUNCTION..... | 14-13 |
| 14.2.1 captive-portal client deauthenticate..... | 14-13 |
| 14.2.2 radius accounting..... | 14-14 |
| 14.2.3 radius-accounting update interval..... | 14-14 |
| 14.2.4 radius-acct-server..... | 14-15 |
| 14.2.5 session-timeout..... | 14-15 |
| 14.3 COMMANDS FOR FREE-RESOURCE..... | 14-15 |
| 14.3.1 free-resource(global)..... | 14-15 |
| 14.3.2 free-resouce(instance)..... | 14-16 |
| 14.4 COMMANDS FOR AUTOMATIC PAGE PUSHING AFTER SUCCESSFUL AUTHENTICATION..... | 14-16 |
| 14.4.1 redirect attribute url-after-login enable..... | 14-16 |
| 14.4.2 redirect attribute url-after-login name..... | 14-17 |
| 14.4.3 redirect attribute url-after-login encode..... | 14-17 |
| 14.4.4 redirect attribute url-after-login value..... | 14-18 |
| CHAPTER 15 COMMANDS FOR VLAN-ACL..... | 15-1 |
| 15.1 CLEAR VACL STATISTIC VLAN..... | 15-1 |
| 15.2 SHOW VACL VLAN..... | 15-1 |
| 15.3 VACL IP ACCESS-GROUP..... | 15-3 |
| 15.4 VACL IPV6 ACCESS-GROUP..... | 15-3 |
| 15.5 VACL MAC ACCESS-GROUP..... | 15-4 |
| 15.6 VACL MAC-IP ACCESS-GROUP..... | 15-4 |
| CHAPTER 16 COMMANDS FOR SAVI..... | 16-1 |
| 16.1 COMMANDS FOR SAVI..... | 16-1 |
| 16.1.1 ipv6 cps prefix..... | 16-1 |
| 16.1.2 ipv6 cps prefix check enable..... | 16-1 |
| 16.1.3 ipv6 dhcp snooping trust..... | 16-2 |
| 16.1.4 ipv6 nd snooping trust..... | 16-2 |
| 16.1.5 savi check binding..... | 16-2 |
| 16.1.6 savi enable..... | 16-3 |
| 16.1.7 savi ipv6 binding num..... | 16-3 |
| 16.1.8 savi ipv6 check source binding..... | 16-4 |
| 16.1.9 savi ipv6 check source ip-address mac-address..... | 16-5 |

| | |
|---|-------------|
| 16.1.10 savi ipv6 {dhcp-only slaac-only dhcp-slaac} enable..... | 16-5 |
| 16.1.11 savi ipv6 mac-binding-limit..... | 16-6 |
| 16.1.12 savi max-dad-dalay..... | 16-6 |
| 16.1.13 savi max-dad-prepare-delay..... | 16-6 |
| 16.1.14 savi max-slaac-life..... | 16-7 |
| 16.1.15 savi timeout bind-protect..... | 16-7 |
| 16.2 COMMANDS FOR MONITOR AND DEBUG..... | 16-8 |
| 16.2.1 Monitor and Debugg..... | 16-8 |

Chapter 1 Commands for ACL

1.1 absolute-periodic/periodic

Command: [no] absolute-periodic {Monday|Tuesday|Wednesday|Thursday|Friday | Saturday|Sunday}<start_time>to{Monday|Tuesday|Wednesday|Thursday|Friday| Saturday| Sunday} <end_time>

[no]periodic{{Monday+Tuesday+Wednesday+Thursday+Friday+Saturday+Sunday}|daily| weekdays | weekend} <start_time> to <end_time>

Functions: Define the time-range of different commands within one week, and every week to circulate subject to this time.

Parameters:

Friday (Friday)

Monday (Monday)

Saturday (Saturday)

Sunday (Sunday)

Thursday (Thursday)

Tuesday (Tuesday)

Wednesday (Wednesday)

daily (Every day of the week)

weekdays (Monday thru Friday)

weekend (Saturday thru Sunday)

start_time start time ,HH:MM:SS (hour: minute: second)

end_time end time,HH:MM:SS (hour: minute: second)

Remark: time-range polling is one minute per time, so the time error shall be <= one minute.

Command Mode: time-range mode

Default: No time-range configuration.

Usage Guide: Periodic time and date. The definition of period is specific time period of Monday to Saturday and Sunday every week.

day1 hh:mm:ss To day2 hh:mm:ss or

{[day1+day2+day3+day4+day5+day6+day7]|weekend|weekdays|daily} hh:mm:ss To hh:mm:ss

Examples: Make configurations effective within the period from 9:15:30 to 12:30:00 during Tuesday to Saturday.

Switch(config)#time-range admin_timer

Switch(Config-Time-Range-admin_timer)#absolute-periodic Tuesday 9:15:30 to Saturday 12:30:00

Make configurations effective within the period from 14:30:00 to 16:45:00 on Monday,

Wednesday, Friday and Sunday.

```
Switch(Config-Time-Range-admin_timer)#periodic Monday Wednesday Friday Sunday
14:30:00 to 16:45:00
```

1.2 absolute start

Command: [no] absolute start <start_time> <start_data> [end <end_time> <end_data>]

Functions: Define an absolute time-range, this time-range operates subject to the clock of this equipment.

Parameters: **start_time** : start time, HH:MM:SS (hour: minute: second)

end_time : end time, HH:MM:SS (hour: minute: second)

start_data : start data, the format is, YYYY.MM.DD (year.month.day)

end_data : end data, the format is, YYYY.MM.DD (year.month.day)

 Remark: time-range is one minute per time, so the time error shall be <= one minute.

Command Mode: Time-range mode

Default: No time-range configuration.

Usage Guide: Absolute time and date, assign specific year, month, day, hour, minute of the start, shall not configure multiple absolute time and date, when in repeated configuration, the latter configuration covers the absolute time and date of the former configuration.

Examples: Make configurations effective from 6:00:00 to 13:30:00 from Oct. 1, 2004 to Jan. 26, 2005.

```
Switch(config)#Time-range admin_timer
```

```
Switch(Config-Time-Range-admin_timer)#absolute start 6:00:00 2004.10.1 end 13:30:00
2005.1.26
```

1.3 access-list deny-preemption

This command is not supported by the switch.

1.4 access-list (ip extended)

Command: access-list <num> {deny | permit} icmp {{<sIpAddr> <sMask>}} | any-source | {host-source <sIpAddr>} {{<dIpAddr> <dMask>}} | any-destination | {host-destination <dIpAddr>} [<icmp-type> [<icmp-code>]] [precedence <prec>] [tos <tos>][time-range<time-range-name>]

access-list <num> {deny | permit} igmp {{<sIpAddr> <sMask>}} | any-source | {host-source <sIpAddr>} {{<dIpAddr> <dMask>}} | any-destination | {host-

```

destination <dlpAddr>} [<igmp-type>] [precedence <prec>] [tos <tos>][time-
range<time-range-name>]
    access-list <num> {deny | permit} tcp {{ <sIpAddr> <sMask> } | any-source | 
{host-source <sIpAddr> }} [s-port { <sPort> | range <sPortMin> <sPortMax> }] {{ 
<dlpAddr> <dMask> } | any-destination | {host-destination <dlpAddr> }} [d-port { 
<dPort> | range <dPortMin> <dPortMax> }] [ack+ fin+ psh+ rst+ urg+ syn] 
[precedence <prec> ] [tos <tos> ][time-range <time-range-name> ]
    access-list <num> {deny | permit} udp {{ <sIpAddr> <sMask> } | any-source | 
{host-source <sIpAddr> }} [s-port { <sPort> | range <sPortMin> <sPortMax> }] 
{{ <dlpAddr> <dMask> } | any-destination | {host-destination <dlpAddr> }} [d-port { 
<dPort> | range <dPortMin> <dPortMax> }] [precedence <prec> ] [tos <tos> ][time-
range<time-range-name> ]
    access-list <num> {deny | permit} {eigrp | gre | igrp | ipinip | ip | ospf | 
<protocol-num>} {{ <sIpAddr> <sMask> } | any-source | {host-source <sIpAddr> }} 
{{ <dlpAddr> <dMask> } | any-destination | {host-destination <dlpAddr> }} 
[precedence <prec> ] [tos <tos> ][time-range <time-range-name> ]
    no access-list <num>

```

Functions: Create a numeric extended IP access rule to match specific IP protocol or all IP protocol; if access-list of this coded numeric extended does not exist, thus to create such a access-list.

Parameters: *<num>* is the No. of access-list, 100-299; *<protocol>* is the No. of upper-layer protocol of ip, 0-255; *<sIpAddr>* is the source IP address, the format is dotted decimal notation; *<sMask>* is the reverse mask of source IP, the format is dotted decimal notation; *<dlpAddr>* is the destination IP address, the format is dotted decimal notation; *<dMask>* is the reverse mask of destination IP, the format is dotted decimal notation, attentive position 0, ignored position1;*<igmp-type>*,the type of igmp, 0-15; *<icmp-type>*, the type of icmp, 0-255;*<icmp-code>*, protocol No. of icmp, 0-255;*<prec>*, IP priority, 0-7; *<tos>*, to value, 0-15; *<sPort>*, source port No., 0-65535; *<sPortMin>*, the down boundary of source port; *<sPortMax>*, the up boundary of source port; *<dPortMin>*, the down boundary of destination port; *<dPortMax>*, the up boundary of destination port; *<dPort>*, destination port No., 0-65535; *<time-range-name>*, the name of time-range.

Command Mode: Global mode

Default: No access-lists configured.

Usage Guide: When the user assign specific *<num>* for the first time, ACL of the serial number is created, then the lists are added into this ACL; the access list which marked 200-299 can configure not continual reverse mask of IP address.

<igmp-type> represent the type of IGMP packet, and usual values please refer to the following description:

- 17(0x11): IGMP QUERY packet
- 18(0x12): IGMP V1 REPORT packet
- 22(0x16): IGMP V2 REPORT packet
- 23(0x17): IGMP V2 LEAVE packet
- 34(0x22): IGMP V3 REPORT packet

19(0x13): DVMR packet

20(0x14): PIM V1 packet

Particular notice: The packet types included here are not the types excluding IP OPTION. Normally, IGMP packet contains OPTION fields, and such configuration is of no use for this type of packet. If you want to configure the packets containing OPTION, please directly use the manner where OFFSET is configured.

Examples: Create the numeric extended access-list whose serial No. is 110. deny icmp packet to pass, and permit udp packet with destination address 192. 168. 0. 1 and destination port 32 to pass.

Switch(config)#access-list 110 deny icmp any any-destination

Switch(config)#access-list 110 permit udp any host-destination 192.168.0.1 d-port 32

1.5 access-list (ip standard)

Command: access-list <num> {deny | permit} {{<sIpAddr> <sMask >}} | any-source| {host-source <sIpAddr>}}}

no access-list <num>

Functions: Create a numeric standard IP access-list. If this access-list exists, then add a rule list; the “**no access-list <num>**“ operation of this command is to delete a numeric standard IP access-list.

Parameters: <num> is the No. of access-list, 100-199; <sIpAddr> is the source IP address, the format is dotted decimal notation; <sMask > is the reverse mask of source IP, the format is dotted decimal notation.

Command Mode: Global mode

Default: No access-lists configured.

Usage Guide: When the user assign specific <num> for the first time, ACL of the serial number is created, then the lists are added into this ACL.

Examples: Create a numeric standard IP access-list whose serial No. is 20, and permit date packets with source address of 10.1.1.0/24 to pass, and deny other packets with source address of 10.1.1.0/16.

Switch(config)#access-list 20 permit 10.1.1.0 0.0.0.255

Switch(config)#access-list 20 deny 10.1.1.0 0.0.255.255

1.6 access-list(mac extended)

Command: access-list <num> {deny | permit} {any-source-mac | {host-source-mac <host_smac>} | {<smac> <smac-mask>}} {any-destination-mac | {host-destination-mac <host_dmac>} | {<dmac> <dmac-mask>}} [untagged-eth2 | tagged-eth2 | untagged-802-3 | tagged-802-3]

no access-list <num>

Functions: Define an extended numeric MAC ACL rule, “**no access-list <num>**” command deletes an extended numeric MAC access-list rule.

Parameters: **<num>** is the access-list No. which is a decimal's No. from 1100-1199; **deny** if rules are matching, deny access; **permit** if rules are matching, permit access; **<any-source-mac>** any source address; **<any-destination-mac>** any destination address; **<host_smac>**, **<smac>** source MAC address; **<smac-mask>** mask (reverse mask) of source MAC address; **<host_dmac>** , **<dmac>** destination MAC address; **<dmac-mask>** mask (reverse mask) of destination MAC address; **untagged-eth2** format of untagged ethernet II packet; **tagged-eth2** format of tagged ethernet II packet; **untagged-802-3** format of untagged ethernet 802.3 packet; **tagged-802-3** format of tagged ethernet 802.3 packet.

Command Mode: Global mode

Default Configuration: No access-list configured

Usage Guide: When the user assign specific **<num>** for the first time, ACL of the serial number is created, then the lists are added into this ACL.

Examples: Permit tagged-eth2 with any source MAC addresses and any destination MAC addresses and the packets pass.

```
Switch(config)#access-list 1100 permit any-source-mac any-destination-mac tagged-eth2
```

1.7 access-list(mac-ip extended)

Command:

```
access-list<num>{deny|permit}{any-source-mac} {host-source-mac<host_smac>}|<smac><smac-mask>}} {any-destination-mac|{host-destination-mac<host_dmac>}|{<dmac><dmac-mask>}}icmp {{<source><source-wildcard>}|any-source|{host-source<source-host-ip>}} {{<destination><destination-wildcard>}}|any-destination| {host-destination<destination-host-ip>}|[<icmp-type> [<icmp-code>]] [precedence <precedence>] [tos <tos>][time-range<time-range-name>]
access-list<num>{deny|permit}{any-source-mac} {host-source-mac<host_smac>}|<smac><smac-mask>}} {any-destination-mac|{host-destination-mac<host_dmac>}|{<dmac><dmac-mask>}}igmp {{<source><source-wildcard>}|any-source|{host-source<source-host-ip>}} {{<destination><destination-wildcard>}}|any-destination| {host-destination<destination-host-ip>} [<igmp-type>] [precedence <precedence>] [tos <tos>][time-range<time-range-name>]
access-list      <num>      {deny|permit}{any-source-mac}      {host-source-mac<host_smac>}|{<smac><smac-mask>}}{any-destination-mac|{host-destination-mac<host_dmac>}|{<dmac><dmac-mask>}}tcp {{<source><source-wildcard>}}|any-source| {host-source <source-host-ip>}|[s-port{ <port1> | range <sPortMin><sPortMax> }|{{<destination><destination-wildcard>}}| any-destination | {host-destination <destination-host-ip>}| [d-port { <port3> | range <dPortMin><dPortMax> }|[ack+fin+psh+rst+urg+syn]| [precedence <precedence>] [tos <tos>]| [time-range <time-range-name>]
access-list      <num>      {deny|permit}{any-source-mac}      {host-source-mac<host_smac>}|{<smac><smac-mask>}}{any-destination-mac|{host-destination-mac<host_dmac>}|{<dmac><dmac-mask>}}udp {{<source><source-wildcard>}}
```

```

}|any-source| {host-source <source-host-ip>}|[s-port{ <port1> | range <sPortMin>
<sPortMax> }]| {{ <destination> <destination-wildcard>}|any-destination| {host-
destination <destination-host-ip>}|[d-port{ <port3> | range <dPortMin>
<dPortMax> }]| [precedence <precedence> ] [tos <tos> ][time-range <time-
range-name> ]]

access-list <num> {deny|permit}{any-source-mac| {host-source-mac <host_smac>
}|{ <smac> <smac-mask> }| {any-destination-mac| {host-destination-mac
<host_dmac>}|{ <dmac> <dmac-mask> }| {eigrp|gre|igrp|ip|ipinip|ospf|{ <protocol-
num> }| {{ <source> <source-wildcard>}|any-source| {host-source <source-host-
ip>}| {{ <destination> <destination-wildcard>}|any-destination| {host-destination
<destination-host-ip>}| [precedence <precedence> ] [tos <tos> ][time-range <time-
range-name> ]

```

Functions: Define an extended numeric MAC-IP ACL rule, no command deletes a extended numeric MAC-IP ACL access-list rule.

Parameters: **num** access-list serial No. this is a decimal's No. from 3100-3299; **deny** if rules are matching, deny to access; **permit** if rules are matching, permit to access; **any-source-mac**: any source MAC address; **any-destination-mac**: any destination MAC address; **host_smac , smac**: source MAC address; **smac-mask: mask** (reverse mask) of source MAC address ; **host_dmac , dmas** destination MAC address; **dmac-mask** mask (reverse mask) of destination MAC address; **protocol** No. of name or IP protocol. It can be a key word: eigrp, gre, icmp, igmp, igrp, ip, ipinip, ospf, tcp, or udp, or an integer from 0-255 of list No. of IP address. Use key word 'ip' to match all Internet protocols (including ICMP, TCP, AND UDP) list; **source-host-ip, source** No. of source network or source host of packet delivery. Numbers of 32-bit binary system with dotted decimal notation expression; **host**: means the address is the IP address of source host, otherwise the IP address of network; **source-wildcard**: reverse of source IP. Numbers of 32-bit binary system expressed by decimal's numbers with four-point separated, reverse mask; **destination-host-ip**, destination No. of destination network or host to which packets are delivered. Numbers of 32-bit binary system with dotted decimal notation expression; **host**: means the address is the that the destination host address, otherwise the network IP address; **destination-wildcard**: mask of destination. I Numbers of 32-bit binary system expressed by decimal's numbers with four-point separated, reverse mask; **s-port(optional)**: means the need to match TCP/UDP source port; **port1(optional)**: value of TCP/UDP source interface No., Interface No. is an integer from 0-65535; **d-port(optional)**: means need to match TCP/UDP destination interface; **<sPortMin>**, the down boundary of source port; **<sPortMax>**, the up boundary of source port; **port3(optional)**: value of TCP/UDP destination interface No., Interface No. is an integer from 0-65535; **<dPortMin>**, the down boundary of destination port; **<dPortMax>**, the up boundary of destination port; **[ack] [fin] [psh] [rst] [urg] [syn]**,(optional) only for TCP protocol, multi-choices of tag positions are available, and when TCP data reports the configuration of corresponding position, then initialization of TCP data report is enabled to form a match when in connection; **precedence** (optional) packets can be filtered by priority which is a number from 0-7; **tos** (optional) packets can be filtered by service type which ia number from 0-15; **icmp-type** (optional) ICMP packets can be filtered by packet

type which is a number from 0-255; **icmp-code** (optional) ICMP packets can be filtered by packet code which is a number from 0-255; **igmp-type** (optional) ICMP packets can be filtered by IGMP packet name or packet type which is a number from 0-255; **<time-range-name>**, name of time range

Command Mode: Global mode

Default Configuration: No access-list configured.

Usage Guide: When the user assign specific <num> for the first time, ACL of the serial number is created, then the lists are added into this ACL; the access list which marked 3200-3299 can configure not continual reverse mask of IP address.

Examples: Permit the passage of TCP packet with source MAC 00-12-34-45-XX-XX, any destination MAC address, source IP address 100.1.1.0 0.255.255.255, and source port 100.

```
Switch(config)#access-list 3199 permit 00-12-34-45-67-00 00-00-00-00-FF-FF any-destination-mac tcp 100.1.1.0 0.255.255.255 s-port 100 any-destination
```

1.8 access-list(mac standard)

Command: `access-list <num> {deny|permit} {any-source-mac | {host-source-mac <host_smac>} | {<smac> <smac-mask>}}
no access-list <num>`

Functions: Define a standard numeric MAC ACL rule, no command deletes a standard numeric MAC ACL access-list rule.

Parameters: <num> is the access-list No. which is a decimal's No. from 700-799; **deny** if rules are matching, deny access; **permit** if rules are matching, permit access; **<host_smac>**, **<sumac>** source MAC address; **<sumac-mask>** mask (reverse mask) of source MAC address.

Command Mode: Global mode

Default Configuration: No access-list configured.

Usage Guide: When the user assign specific <num> for the first time, ACL of the serial number is created, then the lists are added into this ACL.

Examples: Permit the passage of packets with source MAC address 00-00-XX-XX-00-01, and deny passage of packets with source MAC address 00-00-00-XX-00-ab.

```
Switch(config)# access-list 700 permit 00-00-00-00-00-01 00-00-FF-FF-00-00
```

```
Switch(config)# access-list 700 deny 00-00-00-00-00-ab 00-00-00-FF-00-00
```

1.9 clear access-group statistic

Command: `clear access-group statistic [ethernet <interface-name>]`

Functions: Empty packet statistics information of the specified interface.

Parameters: <interface-name>: Interface name.

Command Mode: Admin mode

Default: None

Examples: Empty packet statistics information of interface.

Switch#clear access-group statistic

1.10 firewall

Command: **firewall {enable | disable}**

Functions: Enable or disable firewall.

Parameters: **enable** means to enable of firewall; **disable** means to disable firewall.

Default: It is used if default is firewall.

Command Mode: Global mode

Usage Guide: Whether enabling or disabling firewall, access rules can be configured. But only when the firewall is enabled, the rules can be used in specific orientations of specific ports. When disabling the firewall, all ACL tied to ports will be deleted.

Examples: Enable firewall.

Switch(config)#firewall enable

1.11 ip access extended

Command: **ip access extended <name>**

no ip access extended <name>

Function: Create a named extended IP access list. The no prefix will remove the named extended IP access list including all the rules.

Parameters: **<name>** is the name of the access list. The name can be formed by non-all-digit characters of length of 1 to 32.

Command Mode: Global Mode.

Default: No access list is configured by default.

Usage Guide: When this command is issued for the first time, an empty access list will be created.

Example: To create a extended IP access list name tcpFlow.

Switch(config)#ip access-list extended tcpFlow

1.12 ip access standard

Command: **ip access standard <name>**

no ip access standard <name>

Function: Create a named standard access list. The no prefix will remove the named standard access list including all the rules in the list.

Parameters: **<name>** is the name of the access list. The name can be formed by non-all-digit characters of length of 1 to 32.

Command Mode: Global Mode.

Default: No access list is configured by default.

Usage Guide: When this command is issued for the first time, an empty access list will be created.

Example: To create a standard IP access list name ipFlow.

```
Switch(config)#ip access-list standard ipFlow
```

1.13 ipv6 access-list

Command: `ipv6 access-list <num-std> {deny | permit} {<sIPv6Prefix/sPrefixlen> | any-source | {host-source <sIPv6Addr>}}`

`no ipv6 access-list <num-std>`

Functions: Creates a numbered standard IP access-list, if the access-list already exists, then a rule will add to the current access-list; the “`no access-list {<num-std>}|<num-ext>`” command deletes a numbered standard IP access-list.

Parameters: `<num-std>` is the list number, list range is between 500 ~ 599; `<sIPv6Prefix>` is the prefix of the ipv6 source address; `<sPrefixlen>` is the length of prefix of the ipv6 source address, `range` is between 1~128; `<sIPv6Addr>` is the ipv6 source address.

Command Mode: Global Mode.

Default: No access-list configured.

Usage Guide: Creates a numbered 520 standard IP access-list first time, the following configuration will add to the current access-list.

Examples: Creates a numbered 520 standard IP access-list, allow the source packet from 2003:1:2:3::1/64 pass through the net, and deny all the other packet from the source address 2003:1:2::1/48 pass through.

```
Switch (config)#ipv6 access-list 520 permit 2003:1:2:3::1/64
```

```
Switch (config)#ipv6 access-list 520 deny 2003:1:2::1/48
```

1.14 ipv6 access standard

Command: `ipv6 access-list standard <name>`

`no ipv6 access-list standard <name>`

Function: Create a name-based standard IPv6 access list; the “`no ipv6 access-list standard<name>`” command deletes the name-based standard IPv6 access list (including all entries).

Parameter: `<name>` is the name for access list, the character string length is from 1 to 32.

Command Mode: Global Mode.

Default: No access list is configured by default.

Usage Guide: When this command is run for the first time, only an empty access list with no entry will be created.

Example: Create a standard IPv6 access list named ip6Flow.

```
Switch(config)#ipv6 access-list standard ip6Flow
```

1.15 ipv6 access extended

Command: `ipv6 access-list extended <name>`

`no ipv6 access-list extended <name>`

Function: Create a name-based extended IPv6 access list; the no command delete the name-based extended IPv6 access list.

Parameter: `<name>` is the name for access list, the character string length is from 1 to 32.

Command Mode: Global Mode.

Default: No IP address is configured by default.

Usage Guide: When this command is run for the first time, only an empty access list with no entry will be created.

Example: Create an extensive IPv6 access list named tcpFlow.

```
Switch (config)#ipv6 access-list extended tcpFlow
```

1.16 {ip|ipv6|mac|mac-ip} access-group

Command: `{ip|ipv6|mac|mac-ip} access-group <name> {in} [traffic-statistic]`

`no {ip|ipv6|mac|mac-ip} access-group <name> {in}`

Function: Apply an access-list on some direction of port, and determine if ACL rule is added statistic counter or not by options; the no command deletes access-list binding on the port.

Parameter: `<name>` is the name for access list, the character string length is from 1 to 32.

Command Mode: Port Mode

Default: The entry of port is not bound ACL.

Usage Guide: One port can bind ingress rulesNote: when a ACL has multiple rules, traffic-statistic can't configure.

There are four kinds of packet head field based on concerned: MAC ACL, IP ACL, MAC-IP ACL and IPv6 ACL; to some extent, ACL filter behavior (permit, deny) has a conflict when a data packet matches multi types of four ACLs. The strict priorities are specified for each ACL based on outcome veracity. It can determine final behavior of packet filter through priority when the filter behavior has a conflict.

When binding ACL to port, there are some limits as below:

1. Each port can bind a MAC-IP ACL, a IP ACL, a MAC ACL and a IPv6 ACL; It only supports the standard ipv6 type when binding the IPV6 ACL to the port.

2. When binding four ACLs and data packet matching the multi ACLs simultaneity, the priority from high to low are shown as below,

Ingress IPv6 ACL

Ingress MAC-IP ACL

Ingress MAC ACL

Ingress IP ACL

Example: Binding AAA access-list to entry direction of port.

Switch(Config-If-Ethernet1/0/5)#ip access-group aaa in

1.17 {ip|ipv6|mac|mac-ip} access-group (Interface Mode)

This command is not supported by switch.

1.18 mac access extended

Command: mac-access-list extended <name>

 no mac-access-list extended <name>

Functions: Define a name-manner MAC ACL or enter access-list configuration mode, “no mac-access-list extended <name>” command deletes this ACL.

Parameters: <name> name of access-list excluding blank or quotation mark, and it must start with letter, and the length cannot exceed 32. (remark: sensitivity on capital or small letter.)

Command Mode: Global mode

Default Configuration: No access-lists configured.

Usage Guide: After assigning this command for the first time, only an empty name access-list is created and no list item included.

Examples: Create an MAC ACL named mac_acl.

Switch(config)# mac-access-list extended mac_acl

Switch(Config-Mac-Ext-Nacl-mac_acl)#

1.19 mac-ip access extended

Command: mac-ip-access-list extended <name>

 no mac-ip-access-list extended <name>

Functions: Define a name-manner MAC-IP ACL or enter access-list configuration mode, “no mac-ip-access-list extended <name>” command deletes this ACL.

Parameters: <name>: name of access-list excluding blank or quotation mark, and it must start with letter, and the length cannot exceed 32 (remark: sensitivity on capital or small letter).

Command Mode: Global Mode.

Default: No named MAC-IP access-list.

Usage Guide: After assigning this command for the first time, only an empty name access-list is created and no list item included.

Examples: Create an MAC-IP ACL named macip_acl.

Switch(config)# mac-ip-access-list extended macip_acl

Switch(Config-Maclp-Ext-Nacl-macip_acl)#

1.20 permit | deny (ip extended)

Command: [no] {deny | permit} icmp {{<sIpAddr> <sMask>} | any-source | {host-source <sIpAddr>}} {{<dIpAddr> <dMask>} | any-destination | {host-destination <dIpAddr>}} [<icmp-type> [<icmp-code>]] [precedence <prec>] [tos <tos>][time-range<time-range-name>]

[no] {deny | permit} igmp {{<sIpAddr> <sMask>} | any-source | {host-source <sIpAddr>}} {{<dIpAddr> <dMask>} | any-destination | {host-destination <dIpAddr>}} [<igmp-type>] [precedence <prec>] [tos <tos>][time-range<time-range-name>]

[no] {deny | permit} tcp {{ <sIpAddr> <sMask> } | any-source | {host-source <sIpAddr> }} [s-port { <sPort> | range <sPortMin> <sPortMax> }] {{ <dIpAddr> <dMask> } | any-destination | {host-destination <dIpAddr> }} [d-port { <dPort> | range <dPortMin> <dPortMax> }] [ack+fin+psh+rst+urg+syn] [precedence <prec>] [tos <tos>][time-range <time-range-name>]

[no] {deny | permit} udp {{ <sIpAddr> <sMask> } | any-source | {host-source <sIpAddr> }} [s-port { <sPort> | range <sPortMin> <sPortMax> }] {{ <dIpAddr> <dMask> } | any-destination | {host-destination <dIpAddr> }} [d-port { <dPort> | range <dPortMin> <dPortMax> }] [precedence <prec>] [tos <tos>][time-range<time-range-name>]

[no] {deny | permit} {eigrp | gre | igrp | ipinip | ip | ospf | <protocol-num>} {{<sIpAddr> <sMask>} | any-source | {host-source <sIpAddr>}} {{<dIpAddr> <dMask>} | any-destination | {host-destination <dIpAddr>}} [precedence <prec>] [tos <tos>][time-range<time-range-name>]

Functions: Create a name extended IP access rule to match specific IP protocol or all IP protocol.

Parameters: <sIpAddr> is the source IP address, the format is dotted decimal notation; <sMask > is the reverse mask of source IP, the format is dotted decimal notation; <dIpAddr> is the destination IP address, the format is dotted decimal notation; <dMask> is the reverse mask of destination IP, the format is dotted decimal notation, attentive position 0, ignored position 1; <igmp-type>, the type of igmp, 0-15; <icmp-type>, the type of icmp, 0-255 ; <icmp-code>, protocol No. of icmp, 0-255; <prec>, IP priority, 0-7; <tos>, to value, 0-15; <sPort>, source port No., 0-65535; <sPortMin>, the down boundary of source port; <sPortMax>, the up boundary of source port; <dPort>, destination port No. 0-65535; <dPortMin>, the down boundary of destination port; <dPortMax>, the up boundary of destination port; <time-range-name>, time range name.

Command Mode: Name extended IP access-list configuration mode

Default: No access-list configured.

Examples: Create the extended access-list, deny icmp packet to pass, and permit udp packet with destination address 192. 168. 0. 1 and destination port 32 to pass.

```

Switch(config)# access-list ip extended udpFlow
Switch(Config-IP-Ext-Nacl-udpFlow)#deny igmp any any-destination
Switch(Config-IP-Ext-Nacl-udpFlow)#permit udp any host-destination 192.168.0.1 d-port
32

```

1.21 permit | deny(ip standard)

Command: {deny | permit} {{<sIpAddr> <sMask>} | any-source | {host-source <sIpAddr>}}

no {deny | permit} {{<sIpAddr> <sMask>} | any-source | {host-source <sIpAddr>}}

Functions: Create a name standard IP access rule, and “no {deny | permit} {{<sIpAddr> <sMask>} | any-source | {host-source <sIpAddr>}}” action of this command deletes this name standard IP access rule.

Parameters: <sIpAddr> is the source IP address, the format is dotted decimal notation; <sMask> is the reverse mask of source IP, the format is dotted decimal notation.

Command Mode: Name standard IP access-list configuration mode

Default: No access-list configured.

Example: Permit packets with source address 10.1.1.0/24 to pass, and deny other packets with source address 10.1.1.0/16.

```

Switch(config)# access-list ip standard ipFlow
Switch(Config-Std-Nacl-ipFlow)# permit 10.1.1.0 0.0.0.255
Switch(Config-Std-Nacl-ipFlow)# deny 10.1.1.0 0.0.255.255

```

1.22 permit | deny(ipv6 extended)

Command: [no] {deny | permit} icmp {{<sIPv6Prefix/sPrefixlen>} | any-source | {host-source <sIPv6Addr>}} {<dIPv6Prefix/dPrefixlen> | any-destination | {host-destination <dIPv6Addr>}} [<icmp-type> [<icmp-code>]] [dscp <dscp>] [flow-label <fl>][time-range <time-range-name>]

[no] {deny | permit} tcp { <sIPv6Prefix/sPrefixlen> | any-source | {host-source <sIPv6Addr>} } [s-port { <sPort> | range <sPortMin> <sPortMax> }] { <dIPv6Prefix/dPrefixlen> | any-destination | {host-destination <dIPv6Addr>} } [d-port { <dPort> | range <dPortMin> <dPortMax> }] [syn | ack | urg | rst | fin | psh] [dscp <dscp>] [flow-label <fl>][time-range <time-range-name>]

[no] {deny | permit} udp { <sIPv6Prefix/sPrefixlen> | any-source | {host-source <sIPv6Addr>} } [s-port { <sPort> | range <sPortMin> <sPortMax> }] { <dIPv6Prefix/dPrefixlen> | any-destination | {host-destination <dIPv6Addr>} } [d-port { <dPort> | range <dPortMin> <dPortMax> }] [dscp <dscp>] [flow-label <fl>] [time-range <time-range-name>]

[no] {deny | permit} <next-header> {<sIPv6Prefix/sPrefixlen> | any-source | {host-source <sIPv6Addr>} } {<dIPv6Prefix/dPrefixlen> | any-destination | {host-

destination <dIPv6Addr>}} [dscp <dscp>] [flow-label <fl>][time-range <time-range-name>]

[no] {deny | permit} {{<sIPv6Prefix/sPrefixlen>} | any-source | {host-source <sIPv6Addr>}} {{<dIPv6Prefix/dPrefixlen>} | any-destination | {host-destination <dIPv6Addr>}} [dscp <dscp>] [flow-label <fl>] [time-range<time-range-name>]

Function: Create an *extended nomenclature IPv6 access control rule for specific IPv6 protocol.*

Parameter: <sIPv6Addr> is the source IPv6 address; <sPrefixlen> is the length of the IPv6 address prefix, the range is 1~128; <dIPv6Addr> is the destination IPv6 address; <dPrefixlen> is the length of the IPv6 address prefix, the range is 1~128; <igmp-type>, type of the IGMP; <icmp-type>, icmp type; <icmp-code>, icmp protocol number; <dscp>, IPv6 priority ,the range is 0~63; <flowlabel>, value of the flow label, the range is 0~1048575; **syn,ack,urg,rst,fin,psh,tcp** label position; <sPort>, source port number, the range is 0~65535; <sPortMin>, the down boundary of source port; <sPortMax>, the up boundary of source port; <dPort>, destination port number, the range is 0 ~ 65535; <dPortMin>, the down boundary of destination port; <dPortMax>, the up boundary of destination port. <next-header>, the IPv6 next-header. <time-range-name>, time range name.

Command Mode: IPv6 nomenclature extended access control list mode

Default: No access control list configured.

Example: Create an extended access control list named udpFlow, denying the igmp packets while allowing udp packets with destination address 2001:1:2:3::1 and destination port 32.

```
Switch(config)#ipv6 access-list extended udpFlow
Switch(Config-IPv6-Ext-Nacl-udpFlow)#deny igmp any any-destination
Switch(Config-IPv6-Ext-Nacl-udpFlow)#permit      udp      any-source      host-destination
2001:1:2:3::1 dPort 32
```

1.23 permit | deny(ipv6 standard)

Command: [no] {deny | permit} {{<sIPv6Prefix/sPrefixlen>} | any-source | {host-source <sIPv6Addr>}}

Function: Create a standard nomenclature IPv6 access control rule; the no form of this command deletes the nomenclature standard IPv6 access control rule.

Parameter: <sIPv6Prefix> is the prefix of the source IPv6 address, <sPrefixlen> is the length of the IPv6 address prefix, the valid range is 1~128. <sIPv6Addr> is the source IPv6 address.

Command Mode: Standard IPv6 nomenclature access list mode

Default: No access list configured by default.

Usage Guide:

Example: Permit packets with source address of 2001:1:2:3::1/64 while denying those with source address of 2001:1:2:3::1/48.

```
Switch(config)#ipv6 access-list standard ipv6Flow
```

```
Switch(Config-IPv6-Std-Nacl-ipv6Flow)# permit 2001:1:2:3::1/64
Switch(Config-IPv6-Std-Nacl-ipv6Flow)# deny 2001:1:2:3::1/48
```

1.24 permit | deny(mac extended)

Command:

```
[no]{deny|permit} {any-source-mac}{host-source-mac <host_smac>}|[<smac>
<smac-mask>} {any-destination-mac}{host-destination-mac <host_dmac>}|
{<dmac><dmac-mask>} [cos <cos-val> [<cos-bitmask>]] [vlanId <vid-value>
[<vid-mask>]] [ethertype <protocol> [<protocol-mask>]]]

[no]{deny|permit} {any-source-mac}{host-source-mac <host_smac>}|[<smac>
<smac-mask>} {any-destination-mac}{host-destination-mac <host_dmac>}|
{<dmac><dmac-mask>} [untagged-eth2 [ethertype <protocol> [<protocol-
mask>]]]

[no]{deny|permit}{any-source-mac}{host-source-mac <host_smac>}|[<smac>
<smac-mask>} {any-destination-mac}{host-destination-mac <host_dmac>}|
{<dmac><dmac-mask>} [untagged-802-3]

[no]{deny|permit} {any-source-mac}{host-source-mac <host_smac>}|[<smac>
<smac-mask>} {any-destination-mac}{host-destination-mac <host_dmac>}|
{<dmac><dmac-mask>} [tagged-eth2 [cos <cos-val> [<cos-bitmask>]]
[vlanId <vid-value> [<vid-mask>]] [ethertype <protocol> [<protocol-mask>]]]

[no]{deny|permit}{any-source-mac}{host-source-mac <host_smac>}|[<smac>
<smac-mask>} {any-destination-mac}{host-destination-mac <host_dmac>}|
{<dmac><dmac-mask>} [tagged-802-3 [cos <cos-val> [<cos-bitmask>]
[vlanId <vid-value> [<vid-mask>]]]]
```

Functions: Define an extended name MAC ACL rule, and no command deletes this extended name IP access rule.

Parameters: **any-source-mac**: any source of MAC address; **any-destination-mac**: any destination of MAC address; **host_smac**, **smac**: source MAC address; **smac-mask**: mask (reverse mask) of source MAC address; **host_dmac**, **dmas** destination MAC address; **dmac-mask** mask (reverse mask) of destination MAC address; **untagged-eth2** format of untagged ethernet II packet; **tagged-eth2** format of tagged ethernet II packet; **untagged-802-3** format of untagged ethernet 802.3 packet; **tagged-802-3** format of tagged ethernet 802.3 packet; **cos-val**: cos value, 0-7; **cos-bitmask**: cos mask, 0-7 reverse mask and mask bit is consecutive; **vid-value**: VLAN No, 1-4094; **vid-bitmask**: VLAN mask, 0-4095, reverse mask and mask bit is consecutive; **protocol**: specific Ethernet protocol No., 1536-65535; **protocol-bitmask**: protocol mask, 0-65535, reverse mask and mask bit is consecutive.

Notice: mask bit is consecutive means the effective bit must be consecutively effective

from the first bit on the left, no ineffective bit can be added through. For example: the reverse mask format of one byte is: 00001111b; mask format is 11110000; and this is not permitted: 00010011.

Command Mode: Name extended MAC access-list configuration mode

Default configuration: No access-list configured.

Example: The forward source MAC address is not permitted as 00-12-11-23-XX-XX of 802.3 data packet.

```
Switch(config)# mac-access-list extended macExt
```

```
Switch(Config-Mac-Ext-Nacl-macExt)#deny 00-12-11-23-00-00 00-00-00-00-ff-ff any-destination-mac untagged-802-3
```

```
Switch(Config-Mac-Ext-Nacl-macExt)#deny 00-12-11-23-00-00 00-00-00-00-ff-ff any-tagged-802
```

1.25 permit | deny(mac-ip extended)

Command:

```
[no] {deny|permit} {any-source-mac}{host-source-mac<host_smac>}|{<smac><smac-mask>}} {any-destination-mac}{host-destination-mac<host_dmac>}|{<dmac><dmac-mask>}} icmp{{<source><source-wildcard>}}|any-source|{host-source<source-host-ip>}|{{<destination><destination-wildcard>}}|any-destination|{host-destination <destination-host-ip>}|<icmp-type>|<icmp-code>]] [precedence <precedence>] [tos <tos>][time-range<time-range-name>]
```

```
[no]{deny|permit}
{any-source-mac}{host-source-mac<host_smac>}|{<smac><smac-mask>}} {any-destination-mac}{host-destination-mac<host_dmac>}|{<dmac><dmac-mask>}} igmp{{<source><source-wildcard>}}|any-source| {host-source<source-host-ip>}|{{<destination><destination-wildcard>}}|any-destination|{host-destination <destination-host-ip>}|<igmp-type>]] [precedence <precedence>] [tos <tos>][time-range<time-range-name>]
```

```
[no]{deny|permit}{any-source-mac}{host-source-mac <host_smac>}| { <smac><smac-mask> }|{any-destination-mac}{host-destination-mac <host_dmac>}|{<dmac><dmac-mask> }tcp{{<source><source-wildcard>}}|any-source| {host-source <source-host-ip>}|{s-port { <port1> | range <sPortMin> <sPortMax> }}|{{<destination><destination-wildcard> } | any-destination| {host-destination <destination-host-ip>}|{d-port { <port3> | range <dPortMin> <dPortMax> }}|{ack + fin + psh + rst + urg + syn}|[precedence <precedence>] [tos <tos>][time-range <time-range-name>]
```

```
[no]{deny|permit}{any-source-mac}{host-source-mac <host_smac>}| { <smac><smac-mask> }|{any-destination-mac}{host-destination-mac <host_dmac>}| {
```

```
<dmac> <dmac-mask> } } udp{{ <source> <source-wildcard> }|any-source| {host-source <source-host-ip> }|[s-port{ <port1> | range <sPortMin> <sPortMax> }] {{ <destination> <destination-wildcard> }|any-destination| {host-destination <destination-host-ip>} } [d-port { <port3> | range <dPortMin> <dPortMax> }] [precedence <precedence>] [tos <tos>] [time-range <time-range-name>]
```

```
[no]{deny|permit}{any-source-mac}{host-source-mac<host_smac>}|{<smac> <smac-mask>}|{any-destination-mac}{host-destination-mac<host_dmac>}|{<dmac><dmac-mask>}|{eigrp|gre|igrp|ip|ipinip|ospf|{<protocol-num>}}|{{<source><source-wildcard>}|any-source|{host-source<source-host-ip>}}|{{<destination><destination-wildcard>}|any-destination|{host-destination <destination-host-ip>} } [precedence <precedence>] [tos <tos>] [time-range<time-range-name>]
```

Functions: Define an extended name MAC-IP ACL rule, no form deletes one extended numeric MAC-IP ACL access-list rule.

Parameters: **num** access-list serial No. this is a decimal's No. from 3100-3199; **deny** if rules are matching, deny to access; **permit** if rules are matching, permit to access; **any-source-mac**: any source MAC address; **any-destination-mac**: any destination MAC address; **host_smac**, smac: source MAC address; smac-mask: mask (reverse mask) of source MAC address ; **host_dmac** , dmas destination MAC address; **dmac-mask** mask (reverse mask) of destination MAC address; **protocol** No. of name or IP protocol. It can be a key word: eigrp, gre, icmp, igmp, igrp, ip, ipinip, ospf, tcp, or udp, or an integer from 0-255 of list No. of IP address. Use key word 'ip' to match all Internet protocols (including ICMP, TCP, AND UDP) list; **source-host-ip**, source No. of source network or source host of packet delivery. Numbers of 32-bit binary system with dotted decimal notation expression; **host**: means the address is the IP address of source host, otherwise the IP address of network; **source-wildcard**: reverse of source IP. Numbers of 32-bit binary system expressed by decimal's numbers with four-point separated, reverse mask; **destination-host-ip**, destination No. of destination network or host to which packets are delivered. Numbers of 32-bit binary system with dotted decimal notation expression; **host**: means the address is that the destination host address, otherwise the network IP address; **destination-wildcard**: mask of destination. I Numbers of 32-bit binary system expressed by decimal's numbers with four-point separated, reverse mask; **s-port(optional)**: means the need to match TCP/UDP source port; **port1(optional)**: value of TCP/UDP source interface No., Interface No. is an integer from 0-65535; **<sPortMin>**, the down boundary of source port; **<sPortMax>**, the up boundary of source port; **d-port(optional)**: means need to match TCP/UDP destination interface; **port3(optional)**: value of TCP/UDP destination interface No., Interface No. is an integer from 0-65535; **<dPortMin>**, the down boundary of destination port; **<dPortMax>**, the up boundary of destination port; **[ack] [fin] [psh] [rst] [urg] [syn]**, (optional) only for TCP protocol, multi-choices of tag positions are available, and when TCP data reports the configuration of corresponding position, then initialization of TCP data report is enabled to form a match when in connection; **precedence (optional)** packets can be filtered by priority which is a number from 0-7; **tos (optional)** packets can be filtered by service type which ia number

from 0-15; **icmp-type (optional)** ICMP packets can be filtered by packet type which is a number from 0-255; **icmp-code (optional)** ICMP packets can be filtered by packet code which is a number from 0-255; **igmp-type (optional)** ICMP packets can be filtered by IGMP packet name or packet type which is a number from 0-255; **<time-range-name>**, name of time range.

Command Mode: Name extended MAC-IP access-list configuration mode

Default: No access-list configured.

Examples: Deny the passage of UDP packets with any source MAC address and destination MAC address, any source IP address and destination IP address, and source port 100.

```
Switch(config)# mac-ip-access-list extended macIpExt
```

```
Switch(Config-MacIp-Ext-Nacl-macIpExt)# deny any-source-mac any-destination-mac
udp any-source s-port 100 any-destination
```

1.26 show access-lists

Command: **show access-lists [<num>|<acl-name>]**

Functions: Reveal ACL of configuration.

Parameters: **<acl-name>**, specific ACL name character string; **<num>**, specific ACL No.

Default: None.

Command Mode: Admin Mode

Usage Guide: When not assigning names of ACL, all ACL will be revealed, used x time (s) indicates the times of ACL to be used.

Examples:

```
Switch#show access-lists
access-list 10(used 0 time(s))
    access-list 10 deny any-source
```

```
access-list 100(used 1 time(s))
    access-list 100 deny ip any any-destination
    access-list 100 deny tcp any any-destination
```

```
access-list 1100(used 0 time(s))
    access-list 1100 permit any-source-mac any-destination-mac tagged-eth2 14 2 0800
```

| Displayed information | Explanation |
|--|---|
| access-list 10(used 1 time(s)) | Number ACL10, 0 time to be used |
| access-list 10 deny any-source | Deny any IP packets to pass |
| access-list 100(used 1 time(s)) | Number ACL100, 1 time to be used |
| access-list 100 deny ip any-source any-destination | Deny IP packet of any source IP address and destination address to pass |

| | |
|--|---|
| access-list 100 deny tcp any-source any-destination | Deny TCP packet of any source IP address and destination address to pass |
| access-list 1100 permit any-source-mac any-destination-mac tagged-eth2 14 2 0800 | Permit tagged-eth2 with any source MAC addresses and any destination MAC addresses and the packets whose 15th and 16th byte is respectively 0x08 , 0x0 to pass. |

1.27 show access-group

Command: `show access-group in {interface {Ethernet | Ethernet IFNAME}}`

Functions: Display the ACL binding status on the port.

Parameters: `IFNAME`, Port name.

Default: None.

Command Mode: Admin and Configuration Mode.

Usage Guide: When not assigning interface names, all ACL tied to port will be revealed.

Examples:

Switch#show access-group

interface name: Ethernet 1/0/1

IP Ingress access-list used is 100, traffic-statistics Disable.

interface name: Ethernet1/0/2

IP Ingress access-list used is 1, packet(s) number is 11110.

| Displayed information | Explanation |
|------------------------------------|--|
| interface name: Ethernet 1/0/1 | Tying situation on port Ethernet1/0/1 |
| IP Ingress access-list used is 100 | No. 100 numeric expansion ACL tied to entrance of port Ethernet1/0/1 |
| packet(s) number is 11110 | Number of packets matching this ACL rule |

1.28 show acl vlan-division <vlan-id> to <vlan-id>

Command: `show acl vlan-division <vlan-id> to <vlan-id>`

Function: According to the two vlan-id, show how to express the vlan between these two vlan-id (these two vlan-id are included) by using the vlan-id and mask.

Parameters: `vlan-id`: the boundary value in the range of vlan.

Default: None.

Command Mode: Admin and configuration mode.

Usage Guide: Show a range of vlan-id by using the vlan-id and mask.

Example: Show vlan 346-4001 by using the vlan-id and mask.

Switch(config)#show acl vlan-division 346 to 4001

Vlan range: 346 to 4001; Total rules: 12

```
-----
[ 1]:Value = 346 Mask = 0xffe Range[ 346, 347]
[ 2]:Value = 348 Mask = 0xfff Range[ 348, 351]
[ 3]:Value = 352 Mask = 0xfe0 Range[ 352, 383]
[ 4]:Value = 384 Mask = 0xf80 Range[ 384, 511]
[ 5]:Value = 512 Mask = 0xe00 Range[ 512,1023]
[ 6]:Value = 1024 Mask = 0xc00 Range[1024,2047]
[ 7]:Value = 2048 Mask = 0xc00 Range[2048,3071]
[ 8]:Value = 3072 Mask = 0xe00 Range[3072,3583]
[ 9]:Value = 3584 Mask = 0xf00 Range[3584,3839]
[10]:Value = 3840 Mask = 0xf80 Range[3840,3967]
[11]:Value = 3968 Mask = 0xfe0 Range[3968,3999]
[12]:Value = 4000 Mask = 0xffe Range[4000,4001]
```

1.29 show firewall

Command: **show firewall**

Functions: Reveal configuration information of packet filtering functions.

Parameters: None.

Default: None.

Command Mode: Admin and Configuration Mode.

Examples:

Switch#show firewall

Firewall status: Enable.

| Displayed information | Explanation |
|-----------------------|-----------------------------------|
| fire wall is enable | Packet filtering function enabled |

1.30 show ipv6 access-lists

Command: **show ipv6 access-lists [<num>|<acl-name>]**

Function: Show the configured IPv6 access control list.

Parameter: <num> is the number of specific access control list, the valid range is 500 ~ 699, amongst 500 ~ 599 is digit standard IPv6 ACL number, 600 ~ 699 is the digit extended IPv6 ACL number; <acl-name> is the nomenclature character string of a specific access control list, lengthening within 1~32.

Default: None.

Command Mode: Admin and Configuration Mode.

Usage Guide: When no access control list is specified, all the access control lists will be displayed; in used x time (s) is shown the times the ACL had been quoted.

Example:

```
Switch #show ipv6 access-lists
ipv6 access-list 500(used 1 time(s))
  ipv6 access-list 500 deny any-source

ipv6 access-list 510(used 1 time(s))
  ipv6 access-list 510 deny ip any-source any-destination
  ipv6 access-list 510 deny tcp any-source any-destination

ipv6 access-list 520(used 1 time(s))
  ipv6 access-list 520 permit ip any-source any-destination
```

1.31 show time-range

Command: `show time-range <word>`

Functions: Reveal configuration information of time range functions.

Parameters: *word* assign name of time-range needed to be revealed.

Default: None.

Command Mode: Admin Mode

Usage Guide: When not assigning time-range names, all time-range will be revealed.

Examples:

```
Switch#show time-range
time-range timer1 (inactive, used 0 times)
  absolute-periodic Saturday 0:0:0 to Sunday 23:59:59
time-range timer2 (inactive, used 0 times)
  absolute-periodic Monday 0:0:0 to Friday 23:59:59
```

1.32 time-range

Command: `[no] time-range <time_range_name>`

Functions: Create the name of time-range as time range name, enter the time-range mode at the same time.

Parameters: *time_range_name*, time range name must start with letter or number, and the length cannot exceed 32 characters long.

Command Mode: Global mode

Default: No time-range configuration.

Usage Guide: None

Examples: Create a time-range named admin_timer.

```
Switch(config)#Time-range admin_timer
```

Chapter 2 Commands for Self-defined ACL

2.1 userdefined-access-list standard offset

Command: userdefined-access-list standard offset [window1 {l2endoftag | l3start | l4start} <offset>] [window2 { l2endoftag | l3start | l4start } <offset>] [window3 { l2endoftag | l3start | l4start } <offset>] [window4 { l2endoftag | l3start | l4start } <offset>] [window5 { l2endoftag | l3start | l4start } <offset>] [window6 { l2endoftag | l3start | l4start } <offset>] [window7 { l2endoftag | l3start | l4start } <offset>] [window8 { l2endoftag | l3start | l4start } <offset>] [window9 { l2endoftag | l3start | l4start } <offset>] [window10 { l2endoftag | l3start | l4start } <offset>] [window11 { l2endoftag | l3start | l4start } <offset>]
no userdefined-access-list standard offset [window1] [window2] [window3] [window4] [window5] [window6] [window7] [window8] [window9] [window10] [window11]

Function: Create a standard self-defined ACL template. If the template exists, the corresponding window of the template can be modified; the no command deletes the window of the standard self-defined ACL template. If the window is not specified, the standard self-defined ACL template will be deleted.

Parameter:

window1-window11 self-defined window 1 to 11

l2endoftag The start offset position is end of layer2 tag

l3start The start offset position is start of layer3 (It can be effective only when the start of layer3 exists)

l4start The start offset position is start of layer4 (It can be effective only when the start of layer4 exists)

offset The configured offset is from 0 to 31 (unit is 2Bytes)

Command Mode: Global Mode

Default: No Configuration Template

Usage Guide: {l2endoftag | l3start | l4start}: used to configure the start offset position of a window, <offset>: used to the offset of a window, the range is <0-31>, unit is 2Bytes, namely, 0 means 0Bytes offset and 1 means 2Bytes offset. Standard self-defined ACL template can configure the start offset position and offset for 11 window at most. One standard self-defined ACL template can be shared in global mode. The window cannot be modified if the standard self-defined ACL rule is configured with this window. But if the standard self-defined ACL rule is not configured, the window configuration can be modified with this command.

The no command can delete one or more offset configuration of the window in the

template or delete the whole template. The window in the template can be deleted successfully when it is not used by the self-defined ACL rule.

Example: Create a global template with 7 windows (3-9) to configure the start offset position and the offset:

```
Switch(config)#userdefined-access-list standard offset window3 l2 0 window4 l2 2  
window5 l3 0 window6 l3 1 window7 l3 2 window8 l4 1 window9 l4 2
```

2.2 userdefined-access-list standard

Command: userdefined-access-list standard <num> {deny | permit} {any-source-mac | { host-source-mac <host_smac>} | {<smac> <smac-mask>}} {any-destination-mac | {host-destination-mac <host_dmac>} | {<dmac> <dmac-mask>}} {untagged-eth2 | tagged-eth2 [cos <value> [<mask>]] [vlanId <value> [<mask>]]} | untagged-802-3 | tagged-802-3 [cos <value> [<mask>]] [vlanId <value> [<mask>]]} [window1 <value> <mask>] [window2 <value> <mask>] [window3 <value> <mask>] [window4 <value> <mask>] [window5 <value> <mask>] [window6 <value> <mask>] [window7 <value> <mask>] [window8 <value> <mask>] [window9 <value> <mask>] [window10 <value> <mask>] [window11 <value> <mask>]

no userdefined-access-list <num>

Function: Create a numbered standard self-defined ACL. If the standard self-defined ACL exists, then a rule will be added to the ACL. The no command deletes a numbered standard self-defined ACL.

Parameter: <num> is the access-list No. from 1200 to 1299 in decimal notation; **deny** if rules are matching, deny access; **permit** if rules are matching, permit access; **<any-source-mac>** any source address; **<any-destination-mac>** any destination address; **<host_smac>, <smac>** source MAC address; **<smac-mask>** mask (reverse mask) of source MAC address; **<host_dmac>, <dmac>** destination MAC address; **<dmac-mask>** mask (reverse mask) of destination MAC address; **untagged-eth2** format of untagged ethernet II packet; **tagged-eth2** format of tagged ethernet II packet; **untagged-802-3** format of untagged ethernet 802.3 packet; **tagged-802-3** format of tagged ethernet 802.3 packet. **cos** and **vlanId** can be configured when the tagged-eth2 or tagged-802-3 is configured. cos can configure <value> only, range is 0-7, matching a single value; it also can configure <mask> then, range is 0-7, matching multiple cos value with <value>. vlanId can configure <value> only, range is 1-4095, matching a single value; vlanId also can configure <mask>, range is 0-4094, matching multiple vlanId value with <value>. The <value> and <mask> of every window are 2Bytes length in hexadecimal notation.

Command Mode: Global Mode

Default: No any access-list configured

Usage Guide: When users specify the specified <num> for the first time, create the ACL with this serial number, then add the entry into this ACL.

Example: Permit tagged-eth2 of any source MAC address and any destination MAC address. Permit the packets that the first and the second bytes of the start of l3 is

0x4501. Permit the packets that the forth byte of the start of I4 is 0xFF.
Switch(config)#userdefined-access-list standard offset window1 l3 0 window2 l4 1
Switch(config)#userdefined-access-list standard 1200 permit any-source-mac any-destination-mac tagged-eth2 window1 4501 FFFF window2 00FF 00FF
Configure a rule in the same list to deny the packets of untagged-eth2 of any source MAC address and any destination MAC address and that the fifth and the sixth bytes of the start of l3 is 0xFFAA.
Switch(config)#userdefined-access-list standard offset window3 l3 2
Switch(config)#userdefined-access-list standard 1200 deny any-source-mac any-destination-mac untagged-eth2 window3 FFAA FFFF

2.3 userdefined access-group

Command: userdefined access-group <name> {in} [traffic-statistic]

no userdefined access-group <name> {in}

Function: Apply userdefined-access-list to one direction of the port. Decide whether the statistical counter should be added to the ACL according to the options. The no command deletes the configuration bound to the port.

Parameter: <name> is the access-list name from 1200-1399 in decimal notation.

Command Mode: Physical Port Configuration Mode.

Default: userdefined-access-list is not bound to the port

Usage Guide: A self-defined access-list can be bound to the ingress of a port and can be configured at the ingress of the same port with other access-lists at the same time. The deny rule is precedent when different access-lists are matching, that means if there is a access-lists match the deny rule, the deny rule must be executed, the permit rule will be executed oppositely.

Example: The configured self-defined access-list is shown in the following:

Switch(config)#userdefined-access-list extended offset swindow1 l3 0 swindow2 l4 1
lwindow1 l3 1

Switch(config)#userdefined-access-list extended 1300 permit tagged-eth2 swindow1
4501 FFFF swindow2 00FF 00FF

Switch(config)#userdefined-access-list extended 1300 deny untagged-eth2 lwindow1
FFAA0000 FFFF0000

Bind the self-defined access-list to Ethernet1/0/1:

Switch(config)#interface ethernet1/0/1

Switch(config-if-ethernet1/0/1)#userdefined access-group 1300 in

Chapter 3 Commands for Priority ACL

3.1 clear access-group

Command: clear access-group in statistic interface {*<interface-name>* | ethernet*<interface-name>*}

Function: This command can clear the packets filtration statistic information of the in direction of the appointed port.

Parameters: *<interface-name>*: interface name.

Command Mode: Admin Mode.

Default: None.

Usage Guide: This command can clear the packets filtration statistic information of the appointed port. Multiple ports can be connected, such as 1/0/2-3 or 1/0/2;3.

Example: Clear the packets filtration statistic information of port 1/0/1.

Switch#clear access-group in statistic interface ethernet 1/0/1

3.2 show access-group

Command: show access-group in (interface {Ethernet | Ethernet IFNAME}) | [begin | include | exclude <regular-expression>]

Function: This command can show the ACL binding situation on the port.

Parameters: *<interface-name>*: interface name.

begin | include | exclude <regular-expression>: regular expression.

. Match any character except the newline symbol.

^ Match the start of the line.

\$ Match the end of the line.

| Match the string on the left or right of the vertical line.

[0-9] Match the number of 0 to 9.

[a-z] Match the lower case letter of a to z.

[aeiou] Match any letter in aeiou.

\ escape character, it is used to match the metacharacter, for example, \\$ willmatch \$ but not the end of the string.

\w Match the letter, number or the underline.

\b Match the start or end of the word.

\W Match any character except letter, number and underline.

\B Match the letter except the start and end of the word.

[^x] Match any character except x.

[^aeiou] Match any character except the letters of a, e, i, o and u.

* Duplicate 0 time or more times.

+ Duplicate once or more times.

{n} Duplicate n times.
 {n,} Duplicate n or more times.
 {n,m} Duplicate n to m times.

The following grammars are not supported by the current regular expression:

\s Match any free space.
 \d Match the numbers.
 \S Match any character except the free space.
 \D Match any character except numbers.
 ? Duplicate 0 time or once.

Command Mode: Admin or Configuration Mode.

Default: None.

Usage Guide: This command is used to show the priority acl configured on the port. If there are no parameters, show all the acl situation configured on the ports.

Usage Guide: If the interface name is not appointed, show the all the ACL bound to the ports.

Example: Show all the ACL bound to the ports.

```
Switch#show access-group  
interface name:Ethernet1/0/1
```

```
IP Ingress access-list used is 100, traffic-statistics Disable.  
interface name:Ethernet1/0/2
```

```
IP Ingress access-list used is 1, packet(s) number is 11110.
```

| Content | Explanation |
|------------------------------------|---|
| interface name:Ethernet1/0/1 | The binding situation of Ethernet1/0/1 |
| IP Ingress access-list used is 100 | The ingress direction of Ethernet1/0/1 is bound the digital extended ACL which is numbered 100. |
| packet(s) number is 11110 | Add up the data packets that match this ACL rule. |

3.3 clear vacl statistic vlan

Command: clear vacl in statistic vlan [<1-4094>]

Function: This command can clear the statistic information of the priority ACL which was issued to vlan.

Parameters: **vlan <1-4094>**: the VLAN which needs to clear the ACL statistic information. If the VLAN ID is not inputted, clear the statistic information of all VLAN.

Command Mode: Admin Mode.

Default: None.

Usage Guide: This command is used to clear the statistic information of the priority ACL which was issued to vlan.

Example: Clear the ACL statistic information of vlan1.

```
Switch# clear vacl statistic vlan 1
```

3.4 show acl vlan

Command: `show acl in vlan [<1-4094>] | [begin | include | exclude <regular-expression>]`

Function: This command can show the configuration and statistic information of the priority ACL which was issued to vlan.

Parameters: `vlan <1-4094>`: the VLAN which needs to show the ACL configuration and statistic information.

`begin | include | exclude <regular-expression>`: regular expression.

- . Match any character except the newline symbol.
- ^ Match the start of the line.
- \$ Match the end of the line.
- | Match the string on the left or right of the vertical line.
- [0-9] Match the number of 0 to 9.
- [a-z] Match the lower case letter of a to z.
- [aeiou] Match any letter in aeiou.

\ escape character, it is used to match the metacharacter, for example, \\$ willmatch \$ but not the end of the string.

- \w Match the letter, number or the underline.
- \b Match the start or end of the word.
- \W Match any character except letter, number and underline.
- \B Match the letter except the start and end of the word.
- [^x] Match any character except x.
- [^aeiou] Match any character except the letters of a, e, i, o and u.
- * Duplicate 0 time or more times.
- + Duplicate once or more times.
- {n} Duplicate n times.
- {n,} Duplicate n or more times.
- {n,m} Duplicate n to m times.

The following grammars are not supported by the current regular expression:

- \s Match any free space.
- \d Match the numbers.
- \S Match any character except the free space.
- \D Match any character except numbers.
- ? Duplicate 0 time or once.

Command Mode: Admin or Configuration Mode.

Default: None.

Usage Guide: Show the configuration and statistic information of the priority ACL which was issued to vlan.

Example: Show the acl configuration and statistic information of vlan2.

Switch (config)#show acl in vlan 2

Vlan 2:

IP Ingress access-list used is 100, traffic-statistics Disable.

Switch (config)# show vACL in vlan 3

Vlan 3:

IP Ingress access-list used is myacl, packet(s) number is 5.

| Information | Explanation |
|----------------------------|---|
| Vlan 2 | VLAN name |
| 100, myacl | ACL name |
| traffic-statistics Disable | ACL statistic function is disabled. |
| packet(s) number is 5 | The out-profile data packets number which matches this ACL. |

3.5 ip access-group

Command: ip access-group {<1-299> | WORD} in [traffic-statistic] priority-high
no ip access-group {<1-299> | WORD} in priority-high

Function: In the ingress direction of the port, issue an **ip access-list** command with the priority method and decide if add the statistic counter to ACL rule according to the selectable items. The no command deletes the priority ACL which was bound to the port.

Parameters: <1-299> | WORD: configure the digital IP ACL (include standard access list rule <1-99>, extended access list rule <100-299>) or name the ACL.

traffic-statistic: Enable the statistic function of matching packets.

priority-high: Issue with the priority method.

Command Mode: Port Mode.

Default: The port does not bind ACL.

Usage Guide: One port can bind an ingress priority ip ACL (if repeat binding, the one before will be covered.). ACL can achieve the filtration of packets. The packets which match the specific rule can be allowed or forbidden passing by.

Please pay attention to the following aspects when binding the acl to port:

1. The priority ip ACL does not support some matching items, such as SrcIp and SrcMac. The fields below are matching the priority ip ACL only.
Priority ip acl: DstIp+L4Src+L4Dst+IpProtocol+TTL+OuterVlan+IpType;
2. When the matching items (SrcIp and SrcMac etc.) are not supported, it must be anyone (any-source, any-source-mac etc.) but not the specific value. Otherwise, print WARNING: The.... and fail to issue. The rule will be rollback.

When binding ACL to the port, there are some restrictions as below:

1. Every port ingress can bind one priority ip ACL.
2. When binding four ACL at the same time and the data packets match multiple ACL, the priority is as below:

IPv6 ACL > MAC-IP ACL > IP ACL > MAC ACL

Example: Configure the digital IP priority ACL for port 1/0/1 and enable the statistic function.

Switch(config-if-ethernet1/0/1)#ip access-group 1 in traffic-statistic priority-high

3.6 ipv6 access-group

Command: **ipv6 access-group (<500-699> | WORD) in [traffic-statistic] priority-high**

no ipv6 access-group (<500-699> | WORD) in priority-high

Function: In the ingress direction of the port, issue an **ipv6 access-list** command with the priority method and decide if add the statistic counter to ACL rule according to the selectable items. The no command deletes the priority ACL which was bound to the port.

Parameters: **<500-699> | WORD:** configure the digital IP ACL (include IPv6 standard access list rule <500-599>, IPv6 extended access list rule <600-699>) or name the ACL.

traffic-statistic: Enable the statistic function of matching packets.

priority-high: Issue with the priority method.

Command Mode: Port Mode.

Default: The port does not bind ACL.

Usage Guide: One port can bind an ingress priority ipv6 ACL (if repeat binding, the one before will be covered.). ACL can achieve the filtration of packets. The packets which match the specific rule can be allowed or forbidden passing by.

Please pay attention to the following aspects when binding the acl to port:

1. The priority ipv6 ACL does not support some matching items, such as SrcIpv6 and SrcMac. The fields below are matching the priority ipv6 ACL only.
Priority ipv6 acl: DstIp6High+L4Src+L4Dst+IpProtocol+OuterVlan+IpType;
2. When the matching items (SrcIpv6 and SrcMac etc.) are not supported, it must be anyone (any-source, any-source-mac etc.) but not the specific value. Otherwise, print WARNING: The.... and fail to issue. The rule will be rollback.

When binding ACL to the port, there are some restrictions as below:

1. Every port ingress can bind one priority ipv6 ACL.
2. When binding four ACL at the same time and the data packets match multiple ACL, the priority is as below:

IPv6 ACL > MAC-IP ACL > IP ACL > MAC ACL

Example: Configure the digital IPv6 priority ACL for port 1/0/1 and enable the statistic function.

Switch(config-if-ethernet1/0/1)#ipv6 access-group 500 in traffic-statistic priority-high

3.7 mac access-group

Command: **mac access-group {<700-1199> | WORD} in [traffic-statistic] priority-high**

no mac access-group {<700-1199> | WORD} in priority-high

Function: In the ingress direction of the port, issue an **mac access-list** command with the priority method and decide if add the statistic counter to ACL rule according to the

selectable items. The no command deletes the priority ACL which was bound to the port.

Parameters: <700-1199> | WORD: configure the digital MAC ACL (include MAC standard access list rule <700-799>, MAC extended access list rule <1100-1199>) or name the ACL.

traffic-statistic: Enable the statistic function of matching packets.

priority-high: Issue with the priority method.

Command Mode: Port Mode.

Default: The port does not bind ACL.

Usage Guide: One port can bind an ingress priority MAC ACL (if repeat binding, the one before will be covered.). ACL can achieve the filtration of packets. The packets which match the specific rule can be allowed or forbidden passing by.

Please pay attention to the following aspects when binding the acl to port:

1. The priority MAC ACL does not support some matching items, such as SrcMac.
The fields below are matching the priority MAC ACL only.
MAC ACL: DstMac+EtherType+OuterVlan+IpType;
2. When the matching items (SrcMac etc.) are not supported, it must be anyone (any-source-mac etc.) but not the specific value. Otherwise, print WARNING:
The.... and fail to issue. The rule will be rollback.

When binding ACL to the port, there are some restrictions as below:

1. Every port ingress can bind one priority MAC ACL.
2. When binding four ACL at the same time and the data packets match multiple ACL, the priority is as below:
IPv6 ACL > MAC-IP ACL > IP ACL > MAC ACL

Example: Configure the digital MAC priority ACL for port 1/0/1 and enable the statistic function.

```
Switch(config-if-ethernet1/0/1)#mac access-group 700 in traffic-statistic priority-high
```

3.8 mac-ip access-group

Command: mac-ip access-group {<3100-3299> | WORD} in [traffic-statistic] priority-high

no mac-ip access-group {<3100-3299> | WORD} in priority-high

Function: In the ingress direction of the port, issue an **mac-ip access-list** command with the priority method and decide if add the statistic counter to ACL rule according to the selectable items. The no command deletes the priority ACL which was bound to the port.

Parameters: <3100-3299>| WORD: configure the digital mac-ip ACL or name the ACL.

traffic-statistic: Enable the statistic function of matching packets.

priority-high: Issue with the priority method.

Command Mode: Port Mode.

Default: The port does not bind ACL.

Usage Guide: One port can bind an ingress priority mac-ip ACL (if repeat binding, the one before will be covered.). ACL can achieve the filtration of packets. The packets which

match the specific rule can be allowed or forbidden passing by.

Please pay attention to the following aspects when binding the acl to port:

1. The priority mac-ip ACL does not support some matching items, such as SrcMac. The fields below are matching the priority mac-ip ACL only.
MAC-IP ACL: DstMac+DstIp+L4Src+L4Dst+IpProtocol+TTL+OuterVlan+IpType;
2. When the matching items (SrcMac etc.) are not supported, it must be anyone (any-source-mac etc.) but not the specific value. Otherwise, print WARNING: The.... and fail to issue. The rule will be rollback.

When binding ACL to the port, there are some restrictions as below:

1. Every port ingress can bind one priority mac-ip ACL.
2. When binding four ACL at the same time and the data packets match multiple ACL, the priority is as below:
IPv6 ACL > MAC-IP ACL > IP ACL > MAC ACL

Example: Configure the digital mac-ip priority ACL for port 1/0/1 and enable the statistic function.

```
Switch(config-if-ethernet1/0/1)#mac-ip access-group 3100 in traffic-statistic priority-high
```

3.9 vACL ip access-group

Command: vACL ip access-group {<1-299> | WORD} in [traffic-statistic] vlan WORD priority-high

no vACL ip access-group {<1-299> | WORD} in lan WORD priority-high

Function: Configure the priority ACL of IP type on the appointed VLAN.

Parameters: <1-299> | WORD: configure the digital IP ACL (include standard access list rule <1-99>, extended access list rule <100-299>) or name the ACL.

traffic-statistic: Enable the statistic function of matching packets.

priority-high: Issue with the priority method.

vlan WORD: the VLAN which needs to bind the priority ACL.

Command Mode: Global Mode.

Default: Do not bind ACL.

Usage Guide: One vlan can bind an ingress priority ip ACL (if repeat binding, the one before will be covered.). ACL can achieve the filtration of packets. The packets which match the specific rule can be allowed or forbidden passing by.

Please pay attention to the following aspects when binding the acl to vlan:

1. The priority ip ACL does not support some matching items, such as SrcIp and SrcMac. The fields below are matching the priority ip ACL only.
Priority IP ACL: DstIp+L4Src+L4Dst+IpProtocol+TTL+OuterVlan+IpType;
2. When the matching items (SrcIp, SrcMac etc.) are not supported, it must be anyone (any-source, any-source-mac etc.) but not the specific value. Otherwise, print WARNING: The.... and fail to issue. The rule will be rollback.

When binding ACL to the vlan, there are some restrictions as below:

1. Every vlan can bind one priority ip ACL.
2. When binding four ACL at the same time and the data packets match multiple

ACL, the priority is as below:

IPv6 ACL > MAC-IP ACL > IP ACL > MAC ACL

Example: Configure the digital IP priority ACL for vlan1 and enable the statistic function.

Switch (config)#vaci ip access-group 1 in traffic-statistic vlan 1 priority-high

3.10 vaci ipv6 access-group

Command: vaci ipv6 access-group (<500-699> | WORD) in [traffic-statistic] vlan WORD priority-high

no vaci ipv6 access-group (<500-699> | WORD) in vlan WORD priority-high

Function: Configure the priority ACL of IPv6 type on the appointed VLAN.

Parameters: <500-699> | WORD: configure the digital IPv6 ACL (include IPv6 standard access list rule <500-599>, IPv6 extended access list rule <600-699>) or name the ACL.

traffic-statistic: Enable the statistic function of matching packets.

priority-high: Issue with the priority method.

vlan WORD: the VLAN which needs to bind the priority ACL.

Command Mode: Global Mode.

Default: Do not bind ACL.

Usage Guide: One vlan can bind an ingress priority ipv6 ACL (if repeat binding, the one before will be covered.). ACL can achieve the filtration of packets. The packets which match the specific rule can be allowed or forbidden passing by.

Please pay attention to the following aspects when binding the acl to vlan:

1. The priority ipv6 ACL does not support some matching items, such as SrcIpv6 and SrcMac. The fields below are matching the priority ipv6 ACL only.
Priority IPv6 ACL: DstIp6High+L4Src+L4Dst+IpProtocol+OuterVlan+IpType;
2. When the matching items (SrcIpv6, SrcMac etc.) are not supported, it must be anyone (any-source, any-source-mac etc.) but not the specific value. Otherwise, print WARNING: The.... and fail to issue. The rule will be rollback.

When binding ACL to the vlan, there are some restrictions as below:

1. Every vlan can bind one priority ipv6 ACL.
2. When binding four ACL at the same time and the data packets match multiple ACL, the priority is as below:

IPv6 ACL > MAC-IP ACL > IP ACL > MAC ACL

Example: Configure the digital IPv6 priority ACL for vlan1 and enable the statistic function.

Switch (config)#vaci ipv6 access-group 500 in traffic-statistic vlan 1 priority-high

3.11 vaci mac access-group

Command: vaci mac access-group {<700-1199> | WORD} in [traffic-statistic] vlan WORD priority-high

no vaci mac access-group {<700-1199> | WORD} in vlan WORD priority-high

Function: Configure the priority ACL of MAC type on the appointed VLAN.

Parameters:<700-1199> | WORD : configure the digital MAC ACL (include MAC standard access list rule <700-799>, MAC extended access list rule <1100-1199>) or name the ACL.

traffic-statistic: Enable the statistic function of matching packets.

priority-high: Issue with the priority method.

vlan WORD: the VLAN which needs to bind the priority ACL.

Command Mode: Global Mode.

Default: Do not bind ACL.

Usage Guide: One vlan can bind an ingress priority MAC ACL (if repeat binding, the one before will be covered.). ACL can achieve the filtration of packets. The packets which match the specific rule can be allowed or forbidden passing by.

Please pay attention to the following aspects when binding the acl to vlan:

1. The priority MAC ACL does not support some matching items, such as SrcMac.
The fields below are matching the priority MAC ACL only.
Priority MAC ACL: DstMac+EtherType+OuterVlan+IpType;
2. When the matching items (SrcMac etc.) are not supported, it must be anyone (any-source-mac etc.) but not the specific value. Otherwise, print WARNING:
The.... and fail to issue. The rule will be rollback.

When binding ACL to the vlan, there are some restrictions as below:

1. Every vlan can bind one priority MAC ACL.
2. When binding four ACL at the same time and the data packets match multiple ACL, the priority is as below:

IPv6 ACL > MAC-IP ACL > IP ACL > MAC ACL

Example: Configure the digital MAC priority ACL for vlan1 and enable the statistic function.

Switch (config)#vaci mac access-group 700 in traffic-statistic vlan 1 priority-high

3.12 vaci mac-ip access-group

Command: vaci mac-ip access-group {<3100-3299> | WORD} in traffic-statistic]
vlan WORD priority-high

no vaci mac-ip access-group {<3100-3299> | WORD} in vlan WORD priority-high

Function: Configure the priority ACL of MAC-IP type on the appointed VLAN.

Parameters:<3100-3299>| WORD: Configure the digital MAC-IP ACL or name the ACL.

traffic-statistic: Enable the statistic function of matching packets.

priority-high: Issue with the priority method.

vlan WORD: the VLAN which needs to bind the priority ACL.

Command Mode: Global Mode.

Default: Do not bind ACL.

Usage Guide: One vlan can bind an ingress priority MAC-IP ACL (if repeat binding, the one before will be covered.). ACL can achieve the filtration of packets. The packets which

match the specific rule can be allowed or forbidden passing by.

Please pay attention to the following aspects when binding the acl to vlan:

1. The priority MAC-IP ACL does not support some matching items, such as SrcIp and SrcMac. The fields below are matching the priority MAC-IP ACL only.

Priority MAC-IP ACL:

dstMac+DstIp+L4Src+L4Dst+IpProtocol+TTL+OuterVlan+IpType;

2. When the matching items (SrcIp, SrcMac etc.) are not supported, it must be anyone (any-source, any-source-mac etc.) but not the specific value. Otherwise, print WARNING: The.... and fail to issue. The rule will be rollback.

When binding ACL to the vlan, there are some restrictions as below:

1. Every vlan can bind one priority MAC-IP ACL.
2. When binding four ACL at the same time and the data packets match multiple ACL, the priority is as below:

IPv6 ACL > MAC-IP ACL > IP ACL > MAC ACL

Example: Configure the digital MAC-IP priority ACL for vlan1 and enable the statistic function.

Switch (config)#vacl mac-ip access-group 3100 in traffic-statistic vlan 1 priority-high

Chapter 4 Commands for 802.1x

4.1 authentication dot1x radius none

Command: `authentication dot1x radius none`

no authentication dot1x radius none

Function: Run the none authentication method when the Radius Server has no response, permit the dot1x user and divide the user to the appointed VLAN by configuring native vlan. There is no accounting for user. This is named escaping authentication.

Default: The escaping authentication is not useful.

Command Mode: Global Mode.

Usage Guide: (1) Only the radius authentication is running as default. After configured authentication dot1x radius none, if there is no response when dot1x passed the radius authentication, run the none authentication method directly to permit the user. There is no accounting for user. The command of no authentication dot1x can recover to be the default authentication method of radius.

(2) When a user conducts the radius authentication, if the retransmissions of sending authentication request exceeds the maximum value, the user can be permit directly if configured the NONE authentication method of dot1x. Otherwise, the user authentication fails.

(3) Because there is no problem of radius issuing auto vlan, the authentication is successful. If it is the ACCESS port, it will be joined in access vlan directly; if it is hybrid port, it will be joined in the configured native vlan (the situation is similar to that radius does not issue auto vlan).

Example: Enable the escaping authentication.

```
Switch(config)#authentication dot1x radius none
```

4.2 debug dot1x detail

Command: `debug dot1x detail {pkt-send | pkt-receive | internal | all | userbased}`
`interface [ethernet] <interface-name>`

no debug dot1x detail { pkt-send | pkt-receive | internal | all | userbased}
`interface [ethernet] <interface-name>`

Function: Enable the debug information of dot1x details; the no operation of this command will disable that debug information.

Parameters: **pkt-send:** Enable the debug information of dot1x about sending packets;

pkt-receive: Enable the debug information of dot1x about receiving packets;

internal: Enable the debug information of dot1x about internal details;

all: Enable the debug information of dot1x about all details mentioned above;
userbased: user-based authentication;
<interface-name>: the name of the interface.

Command Mode: Admin Mode.

Usage Guide: By enabling the debug information of dot1x details, users can check the detailed processes of the Radius protocol operation, which might help diagnose the cause of faults if there is any.

Example: Enable all debug information of dot1x details on interface1/0/1.

Switch#debug dot1x detail all interface ethernet1/0/1

4.3 debug dot1x error

Command: **debug dot1x error**

no debug dot1x error

Function: Enable the debug information of dot1x about errors; the no operation of this command will disable that debug information.

Parameters: None.

Command Mode: Admin Mode.

Usage Guide: By enabling the debug information of dot1x about errors, users can check the information of errors that occur in the processes of the Radius protocol operation, which might help diagnose the cause of faults if there is any.

Example: Enable the debug information of dot1x about errors.

Switch#debug dot1x error

4.4 debug dot1x fsm

Command: **debug dot1x fsm {all | aksm | asm | basm | ratsm} interface <interface-name>**

no debug dot1x fsm {all | aksm | asm | basm | ratsm} interface <interface-name>

Function: Enable the debug information of dot1x state machine; the no operation of this command will disable that debug information.

Command Mode: Admin Mode.

Parameters: **all:** Enable the debug information of dot1x state machine;

aksm: Enable the debug information of Authenticator Key Transmit state machine;

asm: Enable the debug information of Authenticator state machine;

basm: Enable the debug information of Backend Authentication state machine;

ratsm: Enable the debug information of Re-Authentication Timer state machine;

<interface-name>: the name of the interface.

Usage Guide: By enabling the debug information of dot1x, users can check the

negotiation process of dot1x protocol, which might help diagnose the cause of faults if there is any.

Example: Enable the debug information of dot1x state machine.

Switch#debug dot1x fsm asm interface ethernet1/0/1

4.5 debug dot1x packet

Command: `debug dot1x packet {all | receive | send} interface <interface-name>`

`no debug dot1x packet {all | receive | send} interface <interface-name>`

Function: Enable the debug information of dot1x about messages; the no operation of this command will disable that debug information.

Command Mode: Admin Mode.

Parameters: `send`: Enable the debug information of dot1x about sending packets;

`receive`: Enable the debug information of dot1x about receiving packets;

`all`: Enable the debug information of dot1x about both sending and receiving packets;

`<interface-name>`: The name of the interface.

Usage Guide: By enabling the debug information of dot1x about messages, users can check the negotiation process of dot1x protocol, which might help diagnose the cause of faults if there is any.

Example: Enable the debug information of dot1x about messages.

Switch#debug dot1x packet all interface ethernet1/0/1

4.6 dot1x accept-mac

Command: `dot1x accept-mac <mac-address> [interface <interface-name>]`

`no dot1x accept-mac <mac-address> [interface <interface-name>]`

Function: Add a MAC address entry to the dot1x address filter table. If a port is specified, the entry added applies to the specified port only. If no port is specified, the entry added applies to all the ports. The “`no dot1x accept-mac <mac-address> [interface <interface-name>]`” command deletes the entry from dot1x address filter table.

Parameters: `<mac-address>` stands for MAC address;

`<interface-name>` for interface name and port number.

Command mode: Global Mode.

Default: N/A.

Usage Guide: The dot1x address filter function is implemented according to the MAC address filter table, dot1x address filter table is manually added or deleted by the user. When a port is specified in adding a dot1x address filter table entry, that entry applies to the port only; when no port is specified, the entry applies to all ports in the switch. When dot1x address filter function is enabled, the switch will filter the authentication user by the MAC address. Only the authentication request initiated by the users in the dot1x address filter table will be accepted, the rest will be rejected.

Example: Adding MAC address 00-01-34-34-2e-0a to the filter table of Ethernet 1/0/5.

```
Switch(config)#dot1x accept-mac 00-01-34-34-2e-0a interface ethernet 1/0/5
```

4.7 dot1x eapor enable

Command: **dot1x eapor enable**

no dot1x eapor enable

Function: Enables the EAP relay authentication function in the switch; the "no dot1x eapor enable" command sets EAP local end authentication.

Command mode: Global Mode.

Default: EAP relay authentication is used by default.

Usage Guide: The switch and RADIUS may be connected via Ethernet or PPP. If an Ethernet connection exists between the switch and RADIUS server, the switch needs to authenticate the user by EAP relay (EAPoR authentication); if the switch connects to the RADIUS server by PPP, the switch will use EAP local end authentication (CHAP authentication). The switch should use different authentication methods according to the connection between the switch and the authentication server.

Example: Setting EAP local end authentication for the switch.

```
Switch(config)#no dot1x eapor enable
```

4.8 dot1x enable

Command: **dot1x enable**

no dot1x enable

Function: Enables the 802.1x function in the switch and ports: the "no dot1x enable" command disables the 802.1x function.

Command mode: Global Mode and Port Mode.

Default: 802.1x function is not enabled in global mode by default; if 802.1x is enabled under Global Mode, 802.1x will not be enabled for the ports by default.

Usage Guide: The 802.1x authentication for the switch must be enabled first to enable 802.1x authentication for the respective ports. If Spanning Tree or MAC binding is enabled on the port, or the port is a Trunk port or member of port aggregation group, 802.1x function cannot be enabled for that port unless such conditions are removed.

Example: Enabling the 802.1x function of the switch and enable 802.1x for port1/0/12.

```
Switch(config)#dot1x enable
```

```
Switch(config)#interface ethernet 1/0/12
```

```
Switch(Config-If-Ethernet1/0/12)#dot1x enable
```

4.9 dot1x ipv6 passthrough

Command: **dot1x ipv6 passthrough**

no dot1x ipv6 passthrough

Function: Enable IPv6 passthrough function on a switch port, only applicable when access control mode is userbased; the no operation of this command will disable the function.

Command Mode: Port Configuration Mode.

Default Settings: IPv6 passthrough function is disabled on the switch by default.

Usage Guide: The function can only be enabled when 802.1x function is enabled both globally and on the port, with userbased being the control access mode. After it is enabled, users can send IPv6 messages without authentication.

Examples: Enable IPv6 passthrough function on port Ethernet1/0/12.

```
Switch(config)#dot1x enable
```

```
Switch(config)#interface ethernet 1/0/12
```

```
Switch(Config-If-Ethernet1/0/12)#dot1x enable
```

```
Switch(Config-If-Ethernet1/0/12)#dot1x ipv6 passthrough
```

4.10 dot1x guest-vlan

Command: dot1x guest-vlan <vlanid>

no dot1x guest-vlan

Function: Set the guest-vlan of the specified port; the “**no dot1x guest-vlan**” command is used to delete the guest-vlan.

Parameters: <*vlanid*> the specified VLAN id, ranging from 1 to 4094.

Command Mode: Port Mode.

Default Settings: There is no 802.1x guest-vlan function on the port.

User Guide: The access device will add the port into Guest VLAN if there is no supplicant getting authenticated successfully in a certain stretch of time because of lacking exclusive authentication supplicant system or the version of the supplicant system being too low.

In Guest VLAN, users can get 802.1x supplicant system software, update supplicant system or update some other applications (such as anti-virus software, the patches of operating system). When a user of a port within Guest VLAN starts an authentication, the port will remain in Guest VLAN in the case of a failed authentication. If the authentication finishes successfully, there are two possible results:

- ☞ The authentication server assigns an Auto VLAN, causing the port to leave Guest VLAN to join the assigned Auto VLAN. After the user gets offline, the port will be allocated back into the specified Guest VLAN.
- ☞ The authentication server assigns an Auto VLAN, then the port leaves Guest VLAN and joins the specified VLAN. When the user becomes offline, the port will be allocated to the specified Guest VLAN again.

Attention:

- ☞ There can be different Guest VLAN set on different ports, while only one Guest VLAN is allowed on one port.

- ☞ Only when the access control mode is portbased, the Guest VLAN can take effect. If the access control mode of the port is macbased or userbased, the Guest VLAN can be successfully set without taking effect.

Examples: Set Guest-VLAN of port Ethernet1/0/3 as VLAN 10.

```
Switch(Config-If-Ethernet1/0/3)#dot1xguest-vlan 10
```

4.11 dot1x macfilter enable

Command: **dot1x macfilter enable**

no dot1x macfilter enable

Function: Enables the dot1x address filter function in the switch; the "no dot1x macfilter enable" command disables the dot1x address filter function.

Command mode: Global Mode

Default: dot1x address filter is disabled by default.

Usage Guide: When dot1x address filter function is enabled, the switch will filter the authentication user by the MAC address. Only the authentication request initiated by the users in the dot1x address filter table will be accepted.

Example: Enabling dot1x address filter function for the switch.

```
Switch(config)#dot1x macfilter enable
```

4.12 dot1x macbased guest-vlan

Command: **dot1x macbased guest-vlan <vlanid>**

no dot1x macbased guest-vlan

Function: Configure to appoint the port's guest-vlan based on the mac authentication; the no command deletes this guest-vlan.

Parameters: <vlanid>: the configured vlan id, the range is from 1 to 4094.

Command mode: Port Mode.

Default: Do not configure 802.1x macbased guest-vlan.

Usage Guide: If there is no dedicated authentication client or the client version was too low, and it makes no clients authenticate successfully on the port in some time, then the access device will make this user join to the guest VLAN. User can get the 802.1x client software in guest VLAN, update the client or do other updating things (such as anti-virus software, system patches and etc.) When the user under the port in Guest VLAN issues the authentication, this port will be stay in guest VLAN if the authentication failed; if it was successful, there are two situations as below:

1. The authentication server issues an auto VLAN, in this time, the user left the guest VLAN and joined to the auto VLAN. After the user was downline, this user will be assigned to the configured guest VLAN again.

2. The authentication server did not issue the VLAN, in this time, the user left the guest VLAN and joined to the configured native VLAN. After the user was downline, this user will be assigned to the configured guest VLAN again.

Notice:

1. dot1x macbased guest-vlan can be configured only on the port based on mac authentication and in HYBRID mode.
2. Different macbased guestVLAN can be configured on different ports, but only one macbased guestVLAN can be configured on one port.

Example: Configure the guest-vlan of Ethernet1/0/3 as Vlan 10.

```
Switch(Config-If-Ethernet1/0/3)#dot1x macbased guest-vlan 10
```

4.13 dot1x macbased port-down-flush

Command: **dot1x macbased port-down-flush**

no dot1x macbased port-down-flush

Function: Enables this command, when the dot1x certification according to mac is down, delete the user who passed the certification of the port; The no command does not make the down operation.

Command mode: Global Mode

Default: The command is not enabled by default.

Usage Guide: When users who passed the certification according to mac changed among different ports, delete the user for the new certification. The command should be enable to delete the user.

Example: When the dot1x certification according to mac is down, delete the user who passed the certification of the port.

```
Switch(config)#dot1x macbased port-down-flush
```

4.14 dot1x max-req

Command: **dot1x max-req <count>**

no dot1x max-req

Function: Sets the number of EAP request/MD5 frame to be sent before the switch re-initials authentication on no supplicant response; the “no dot1x max-req” command restores the default setting.

Parameters: <count> is the times to re-transfer EAP request/ MD5 frames, the valid range is 1 to 10.

Command mode: Global Mode.

Default: The default maximum for retransmission is 2.

Usage Guide: The default value is recommended in setting the EAP request/ MD5 retransmission times.

Example: Changing the maximum retransmission times for EAP request/ MD5 frames to 5 times.

```
Switch(config)#dot1x max-req 5
```

4.15 dot1x user allow-movement

Command: **dot1x user allow-movement**

no dot1x user allow-movement

Function: Enable the authentication function after the user moves the port, the no command disables the function.

Command Mode: Global mode

Default: Disable the authentication function after the user moves the port.

Usage Guide: Enable the authentication function after the user moves the port, so the switch allows user to process this authentication. In the condition that the switch connects with hub, when the user will be moved to other port, dot1x user allow-movement command should be enabled.

Example: Enable the authentication function after the user moves the port.

```
Switch(config)#dot1x user allow-movement
```

4.16 dot1x user free-resource

Command: **dot1x user free-resource <prefix> <mask>**

no dot1x user free-resource

Function: To configure 802.1x free resource; the no form command closes this function.

Parameter: **<prefix>** is the segment for limited resource, in dotted decimal format;

<mask> is the mask for limited resource, in dotted decimal format.

Command Mode: Global Mode.

Default: There is no free resource by default.

Usage Guide: This command is available only if user based access control is applied. If user based access control has been applied, this command configures the limited resources which can be accessed by the un-authenticated users. For port based and MAC based access control, users could access no network resources before authentication.

If TrustView management system is available, the free resource can be configured in TrustView server, and the TrustView server will distribute the configuration to the switches.

To be noticed, only one free resource can be configured for the overall network.

Example: To configure the free resource segment as 1.1.1.0, the mask is 255.255.255.0.

```
Switch(Config)#dot1x user free-resource 1.1.1.0 255.255.255.0
```

4.17 dot1x max-user macbased

Command: **dot1x max-user macbased <number>**

no dot1x max-user macbased

Function: Sets the maximum users allowed connect to the port; the “no dot1x max-user”

command restores the default setting.

Parameters: <number> is the maximum users allowed, the valid range is 1 to 256.

Command mode: Port configuration Mode.

Default: The default maximum user allowed is 1.

Usage Guide: This command is available for ports using MAC-based access management, if MAC address authenticated exceeds the number of allowed user, additional users will not be able to access the network.

Example: Setting port 1/0/3 to allow 5 users.

```
Switch(Config-If-Ethernet1/0/3)#dot1x max-user macbased 5
```

4.18 dot1x max-user userbased

Command: **dot1x max-user userbased <number>**

no dot1x max-user userbased

Function: Set the upper limit of the number of users allowed access the specified port when using user-based access control mode; the no command is used to reset the default value.

Parameters: <number> the maximum number of users allowed to access the network, ranging from 1 to 1~256.

Command Mode: Port Mode.

Default Settings: The maximum number of users allowed to access each port is 10 by default.

User Guide: This command can only take effect when the port adopts user-based access control mode. If the number of authenticated users exceeds the upper limit of the number of users allowed access the network, those extra users can not access the network.

Examples: Setting port 1/0/3 to allow 5 users.

```
Switch(Config-If-Ethernet1/0/3)#dot1x max-user userbased 5
```

4.19 dot1x portbased mode single-mode

Command: **dot1x portbased mode single-mode**

no dot1x portbased mode single-mode

Function: Set the single-mode based on portbase authentication mode; the no command disables this function.

Parameters: None.

Command mode: Port Mode

Default: Disable the single-mode.

Usage Guide: This command takes effect when the access mode of the port is set as portbase only. Before configuring the single-mode, if the port has enabled dot1x port-method portbased command and exist online users, the switch will enforce all users of this port are offline. After that, this port only allows a user to pass the authentication, the

user can access the specified network resource, but other authentication users of this port will be denied and cannot access the network. After disabling the single-mode, the switch also enforce the authenticated user is offline.

Example:

```
Switch(Config-If-Ethernet1/0/1)#dot1x portbased mode single-mode
```

4.20 dot1x port-control

Command: **dot1x port-control {auto | force-authorized | force-unauthorized}**

no dot1x port-control

Function: Sets the 802.1x authentication status; the “no dot1x port-control” command restores the default setting.

Parameters: **auto** enable 802.1x authentication, the port authorization status is determined by the authentication information between the switch and the supplicant; **force-authorized** sets port to authorized status, unauthenticated data is allowed to pass through the port; **force-unauthorized** will set the port to non-authorized mode, the switch will not provide authentication for the supplicant and prohibit data from passing through the port.

Command mode: Port configuration Mode

Default: When 802.1x is enabled for the port, **auto** is set by default.

Usage Guide: If the port needs to provide 802.1x authentication for the user, the port authentication mode should be set to auto.

Example: Setting port1/0/1 to require 802.1x authentication mode.

```
Switch(config)#interface ethernet 1/0/1
```

```
Switch(Config-If-Ethernet1/0/1)#dot1x port-control auto
```

4.21 dot1x port-method

Command: **dot1x port-method {macbased | portbased | userbased {standard | advanced}}**

no dot1x port-method

Function: To configure the access control method of appointed interface. The no form command restores the default access control method.

Parameter: **macbased** means the access control method based on MAC address

portbased means the access control method based on port

userbased means the access control method based on user, it can be divided into two types, one is standard access control method, and the other is advanced access control method

Command mode: Port Configuration Mode.

Default: Advanced access control method based on user is used by default.

Usage Guide: This command is used to configure the dot1x authentication method for the specified port. When port based authentication is applied, only one host can

authenticate itself through one port. And after authentication, the host will be able to access all the resources. When MAC based authentication is applied, multiple host which are connected to one port can access all the network resources after authentication. When either of the above two kinds of access control is applied, un-authenticated host cannot access any resources in the network.

When user based access control is applied, un-authenticated users can only access limited resources of the network. The user based access control falls into two kinds – the standard access control and the advanced access control. The standard user based access control does not limit the access to the limited resources when the host is not authenticated yet. While the user based advanced access control can control the access to the limited resources before authentication is done.

Notes: For standard control method based on user, the 802.1x free resource must be configured first, and it needs to be used with dot1x privateclient enable.

Example: To configure the access control method based on port for Etherent1/0/4.

```
Switch(Config-If-Ethernet1/0/4)#dot1x port-method portbased
```

4.22 dot1x privateclient enable

Command: **dot1x privateclient enable**

no dot1x privateclient enable

Function: To configure the switch to force the authentication client to use private 802.1x authentication protocol. The no prefix will disable the command and allow the authentication client to use the standard 802.1x authentication protocol.

Command Mode: Global Mode.

Default: Private 802.1x authentication packet format is disabled by default.

Usage Guide: To implement integrated solution, the switch must be enabled to use private 802.1x protocol, or many applications will not be able to function. For detailed information, please refer to DCBI integrated solution. If the switch forces the authentication client to use private 802.1x protocol, the standard client will not be able to work.

Example: To force the authentication client to use private 802.1x authentication protocol.

```
Switch(config)#dot1x privateclient enable
```

4.23 dot1x privateclient protect enable

Command: **dot1x privateclient protect enable**

no dot1x privateclient protect enable

Function: Enable the privateclient protect function of the switch, the no command disables the protect function.

Parameter: None.

Command mode: Global Mode

Default: Disable the privateclient protect function.

Usage Guide: Support the partial encryption of the privateclient protocol to advance the security of the privateclient.

Example: Enable the privateclient protect function of the switch.

```
Switch(config)#dot1x privateclient protect enable
```

4.24 dot1x re-authenticate

Command: `dot1x re-authenticate [interface <interface-name>]`

Function: Enables real-time 802.1x re-authentication (no wait timeout requires) for all ports or a specified port.

Parameters: `<interface-name>` stands for port number, omitting the parameter for all ports.

Command mode: Global Mode.

Usage Guide: This command is a Global Mode command. It makes the switch to re-authenticate the client at once without waiting for re-authentication timer timeout. This command is no longer valid after authentication.

Example: Enabling real-time re-authentication on port1/0/8.

```
Switch(config)#dot1x re-authenticate interface ethernet 1/0/8
```

4.25 dot1x re-authentication

Command: `dot1x re-authentication`

`no dot1x re-authentication`

Function: Enables periodical supplicant authentication; the “`no dot1x re-authentication`” command disables this function.

Command mode: Global Mode.

Default: Periodical re-authentication is disabled by default.

Usage Guide: When periodical re-authentication for supplicant is enabled, the switch will re-authenticate the supplicant at regular interval. This function is not recommended for common use.

Example: Enabling the periodical re-authentication for authenticated users.

```
Switch(config)#dot1x re-authentication
```

4.26 dot1x timeout quiet-period

Command: `dot1x timeout quiet-period <seconds>`

`no dot1x timeout quiet-period`

Function: Sets time to keep silent on supplicant authentication failure; the “`no dot1x timeout quiet-period`” command restores the default value.

Parameters: `<seconds>` is the silent time for the port in seconds, the valid range is 1 to 65535.

Command mode: Global Mode.

Default: The default value is 10 seconds.

Usage Guide: Default value is recommended.

Example: Setting the silent time to 120 seconds.

```
Switch(config)#dot1x timeout quiet-period 120
```

4.27 dot1x timeout re-authperiod

Command: `dot1x timeout re-authperiod <seconds>`

`no dot1x timeout re-authperiod`

Function: Sets the supplicant re-authentication interval; the “`no dot1x timeout re-authperiod`” command restores the default setting.

Parameters: `<seconds>` is the interval for re-authentication, in seconds, the valid range is 1 to 65535.

Command mode: Global Mode.

Default: The default value is 3600 seconds.

Usage Guide: `dot1x re-authentication` must be enabled first before supplicant re-authentication interval can be modified. If authentication is not enabled for the switch, the supplicant re-authentication interval set will not take effect.

Example: Setting the re-authentication time to 1200 seconds.

```
Switch(config)#dot1x timeout re-authperiod 1200
```

4.28 dot1x timeout tx-period

Command: `dot1x timeout tx-period <seconds>`

`no dot1x timeout tx-period`

Function: Sets the interval for the supplicant to re-transmit EAP request/identity frame; the “`no dot1x timeout tx-period`” command restores the default setting.

Parameters: `<seconds>` is the interval for re-transmission of EAP request frames, in seconds; the valid range is 1 to 65535.

Command mode: Global Mode.

Default: The default value is 30 seconds.

Usage Guide: Default value is recommended.

Example: Setting the EAP request frame re-transmission interval to 1200 seconds.

```
Switch(config)#dot1x timeout tx-period 1200
```

4.29 dot1x unicast enable

Command: `dot1x unicast enable`

`no dot1x unicast enable`

Function: Enable the 802.1x unicast passthrough function of switch; the no operation of

this command will disable this function.

Command mode: Global Configuration Mode.

Default: The 802.1x unicast passthrough function is not enabled in global mode.

Usage Guide: The 802.1x unicast passthrough authentication for the switch must be enabled first to enable the 802.1x unicast passthrough function, then the 802.1x function is configured.

Example: Enabling the 802.1x unicast passthrough function of the switch and enable the 802.1x for port 1/0/1.

```
Switch(config)#dot1x enable  
Switch(config)# dot1x unicast enable  
Switch(config)#interface ethernet1/0/1  
Switch(Config-If-Ethernet1/0/1)#dot1x enable
```

4.30 dot1x web authentication enable

This command is not supported by switch.

4.31 dot1x web authentication ipv6 passthrough

This command is not supported by switch.

4.32 dot1x web redirect

This command is not supported by switch.

4.33 dot1x web redirect enable

This command is not supported by switch.

4.34 show dot1x

Command: `show dot1x [interface <interface-list>]`

Function: Displays dot1x parameter related information, if parameter information is added, corresponding dot1x status for corresponding port is displayed.

Parameters: `<interface-list>` is the port list. If no parameter is specified, information for all ports is displayed.

Command mode: Admin and Configuration Mode.

Usage Guide: The dot1x related parameter and dot1x information can be displayed with “show dot1x” command.

Example:

1. Display information about dot1x global parameter for the switch.

Switch#show dot1x

Global 802.1x Parameters

| | |
|--------------------|---------|
| reauth-enabled | no |
| reauth-period | 3600 |
| quiet-period | 10 |
| tx-period | 30 |
| max-req | 2 |
| authenticator mode | passive |

Mac Filter Disable

MacAccessList :

dot1x-EAPoR Enable

dot1x-privateclient Disable

dot1x-unicast Disable

802.1x is enabled on ethernet Ethernet1/0/1

Authentication Method:Port based

Max User Number:1

| | |
|--------------|-------------------|
| Status | Authorized |
| Port-control | Auto |
| Supplicant | 00-03-0F-FE-2E-D3 |

Authenticator State Machine

| | |
|-------|---------------|
| State | Authenticated |
|-------|---------------|

Backend State Machine

| | |
|-------|------|
| State | Idle |
|-------|------|

Reauthentication State Machine

| | |
|-------|------|
| State | Stop |
|-------|------|

| Displayed information | Explanation |
|--------------------------|---|
| Global 802.1x Parameters | Global 802.1x parameter information |
| reauth-enabled | Whether re-authentication is enabled or not |
| reauth-period | Re-authentication interval |
| quiet-period | Silent interval |
| tx-period | EAP retransmission interval |
| max-req | EAP packet retransmission interval |
| authenticator mode | Switch authentication mode |
| Mac Filter | Enables dot1x address filter or not |
| MacAccessList | Dot1x address filter table |

| | |
|---|---|
| dot1x-EAPoR | Authentication method used by the switch (EAP relay, EAP local end) |
| dot1x-privateclient | Whether the switch supports the privateclient |
| 802.1x is enabled on ethernet Ethernet1/0/1 | Indicates whether dot1x is enabled for the port |
| Authentication Method: | Port authentication method (MAC-based, port-based, user-based) |
| Status | Port authentication status |
| Port-control | Port authorization status |
| Supplicant | Authenticator MAC address |
| Authenticator State Machine | Authenticator state machine status |
| Backend State Machine | Backend state machine status |
| Reauthentication State Machine | Re-authentication state machine status |

4.35 show dot1x user

Command: show dot1x user

Function: Show online users, who had passed the dot1x certification, information.

Command Mode: Admin and Configuration Mode.

Usage Gudie: Usually caring about online users information, other information used for technical support person to fault diagnose and troubleshooting.

Example: Show the information of online users who had passed dot1x certification.

```
Switch(config)# show dot1x user
```

```
----- total authenticated users: 0 -----
UserName    Port    OnTime(sec)    MAC    UserIP    UserIPv6
-----
----- total authenticated users: 0-----
```

4.36 clear dot1x all

Command: clear dot1x {all |interface <ethernet IFNAME | IFNAME>}|mac WORD | user WORD }

Function: Delete the online users who had passed dot1x certification.

Parameters: <all>: Delete all dot1x online users

<IFNAME>: Delete dot1x online users in the specific port.

mac <WORD>: Delete dot1x online users in the specific mac address.

user <WORD>: Delete dot1x online users in the specific user name.

Command Mode: Admin Mode.

Usage Gudie: Users use this command can delete the specific mac address, port , user

name or all dot1x online users from switch.

Example: Delete all online dot1x users.

Switch#clear dot1x all

4.37 user-control limit

This command is not supported by switch.

4.38 user-control limit ipv6

This command is not supported by switch.

Chapter 5 Commands for the Number Limitation Function of MAC and IP in Port, VLAN

5.1 debug ip arp count

Command: **debug ip arp count**
no debug ip arp count

Function: When the number limitation function debug of ARP in the VLAN, if the number of dynamic ARP and the number of ARP in the VLAN is larger than the max number allowed, users will see debug information." **no debug ip arp count**" command is used to disable the number limitation function debug of ARP in the VLAN.

Parameters: None.

Command Mode: Admin Mode.

Default Settings: None.

Usage Guide: Display the debug information of the number of dynamic ARP in the VLAN.

Examples:

```
Switch#debug vlan mac count
%Jun 14 16:04:40 2007 Current arp count 21 is more than or equal to the maximum limit
in vlan 1!!
%Jun 14 16:04:40 2007Arp learning will be stopped and some arp will be delete !!
```

5.2 debug ipv6 nd count

Command: **debug ipv6 nd count**
no debug ipv6 nd count

Function: When the number limitation function debug of neighbor in the VLAN, if the number of dynamic neighbor and the number of neighbor in the VLAN is larger than the max number allowed, users will see debug information. "**no debug ip neighbor count**" command is used to disable the number limitation function debug of neighbor in the VLAN.

Parameters: None.

Command Mode: Admin Mode.

Default Settings: None.

Usage Guide: Display the debug information of the number of dynamic neighbor in the VLAN.

Examples:

Switch#debug vlan mac count
%Jun 14 16:04:40 2007 Current neighbor count 21 is more than or equal to the maximum limit in vlan 1!!

5.3 debug switchport arp count

Command: **debug switchport arp count**

no debug switchport arp count

Function: When the number limitation function debug of ARP on the port, if the number of dynamic ARP and the number of ARP on the port is larger than the max number allowed, users will see debug information." **no debug switchport arp count**" command is used to disable the number limitation function debug of ARP on the port.

Parameters: None

Command Mode: Admin Mode

Default Settings: None

Usage Guide: Display the debug information of the number of dynamic ARP on the port.

Examples:

Switch#debug switchport arp count
%Jun 14 16:04:40 2007 Current arp count 21 is more than or equal to the maximum limit in port Ethernet3/1
!!%Jun 14 16:04:40 2007 Arp learning will be stopped and some mac will be delete !!

5.4 debug switchport mac count

Command: **debug switchport mac count**

no debug switchport mac count

Function: When the number limitation function debug of MAC on the port, if the number of dynamic MAC and the number of MAC on the port is larger than the max number allowed, users will see debug information. "**no debug switchport mac count**" command is used to disable the number limitation function debug of MAC on the port.

Parameters: None

Command Mode: Admin Mode

Default Settings: None

Usage Guide: Display the debug information of the number of dynamic MAC on the port.

Examples:

Switch#debug switchport mac count
%Jun 14 16:04:40 2007 Current mac count 21 is more than or equal to the maximum limit in port Ethernet3/1
!!%Jun 14 16:04:40 2007 Mac learning will be stopped and some mac will be delete !!

5.5 debug switchport nd count

Command: **debug switchport nd count**

no debug switchport nd count

Function: When the number limitation function debug of ND on the port, if the number of dynamic ND and the number of ND on the port is larger than the max number allowed, users will see debug information. "**no debug switchport nd count**" command is used to disable the number limitation function debug of ND on the port.

Parameters: None

Command Mode: Admin Mode

Default Settings: None

Usage Guide: Display the debug information of the number of dynamic ND on the port

Examples:

Switch#debug switchport arp count

%Jun 14 16:04:40 2007 Current neighbor count 21 is more than or equal to the maximum limit in port Ethernet3/1

!!%Jun 14 16:04:40 2007 Neighbor learning will be stopped and some mac will be delete !!

5.6 debug vlan mac count

Command: **debug vlan mac count**

no debug vlan mac count

Function: When the number limitation function debug of MAC in the VLAN, if the number of dynamic MAC and the number of MAC in the VLAN is larger than the max number allowed, users will see debug information. "**no debug vlan mac count**" command is used to disable the number limitation function debug of MAC in the VLAN.

Parameters: None.

Command Mode: Admin Mode.

Default Settings: None.

Usage Guide: Display the debug information of the number of dynamic MAC in the VLAN.

Examples:

Switch#debug vlan mac count

%Jun 14 16:04:40 2007 Current mac count 21 is more than or equal to the maximum limit in vlan 1!!

!!%Jun 14 16:04:40 2007 Mac learning will be stopped and some mac will be delete !!

5.7 ip arp dynamic maximum

Command: **ip arp dynamic maximum <value>**

no ip arp dynamic maximum

Function: Set the max number of dynamic ARP allowed in the VLAN, and, at the same time, enable the number limitation function of dynamic ARP in the VLAN; “**no ip arp dynamic maximum**” command is used to disable the number limitation function of dynamic ARP in the VLAN.

Parameters: <value> upper limit of the number of dynamic ARP in the VLAN, ranging from 1 to 4096.

Default Settings: The number limitation function of dynamic ARP in the VLAN is disabled.

Command Mode: Interface Configuration Mode.

Usage Guide: When configuring the max number of dynamic ARP allowed in the VLAN, if the number of dynamically learnt ARP in the VLAN is already larger than the max number to be set, the extra dynamic ARP will be deleted.

Examples:

Enable the number limitation function of dynamic ARP in VLAN 1, the max number to be set is 50.

```
Switch(config)#interface ethernet  
Switch(Config-if-Vlan1)# ip arp dynamic maximum 50
```

Disable the number limitation function of dynamic ARP in VLAN 1.

```
Switch(Config-if-Vlan1)#no ip arp dynamic maximum
```

5.8 ipv6 nd dynamic maximum

Command: ipv6 nd dynamic maximum <value>

no ipv6 nd dynamic maximum

Function: Set the max number of dynamic NEIGHBOR allowed in the VLAN, and, at the same time, enable the number limitation function of dynamic NEIGHBOR in the VLAN; “**no ipv6 nd dynamic maximum**” command is used to disable the number limitation function of dynamic NEIGHBOR in the VLAN.

Parameters: <value> upper limit of the number of dynamic NEIGHBOR in the VLAN, ranging from 1 to 4096.

Default Settings: The number limitation function of dynamic NEIGHBOR in the VLAN is disabled.

Command Mode: Interface Configuration Mode.

Usage Guide: When configuring the max number of dynamic NEIGHBOR allowed in the VLAN, if the number of dynamically learnt NEIGHBOR in the VLAN is already larger than the max number to be set, the extra dynamic NEIGHBOR will be deleted.

Examples:

Enable the number limitation function of dynamic NEIGHBOR in VLAN 1, the max number to be set is 50.

```
Switch(config)#interface ethernet  
Switch(Config-if-Vlan1)# ipv6 nd dynamic maximum 50
```

Disable the number limitation function of dynamic NEIGHBOR in VLAN 1.

Switch(Config-if-Vlan1)#no ipv6 nd dynamic maximum

5.9 mac-address query timeout

Command: mac-address query timeout <seconds>

Function: Set the timeout value of querying dynamic MAC.

Parameter: <seconds> is timeout value, in second, ranging from 30 to 300.

Default Settings: Default value is 60 seconds.

Command Mode: Global mode

Usage Guide: After enabling the number limitation of MAC, users can use this command to configure the timeout value of querying dynamic MAC. If the data traffic is very large, the timeout value can be shorter, otherwise, it can be longer. Users can set it according to actual situation.

Examples:

Set the timeout value of querying dynamic MAC as 30 seconds.

Switch(config)#mac-address query timeout 30

5.10 show arp-dynamic count

Command: show arp-dynamic count {**(vlan <1-4096>)| interface ethernet <portName>}**

Function: Display the number of dynamic ARP of corresponding port and VLAN.

Parameters: <vlan-id> is the specified vlan ID.

<portName> is the name of layer-2 port.

Command Mode: Admin and Configuration Mode.

Usage Guide: Use this command to display the number of dynamic ARP of corresponding port and VLAN.

Examples: Display the number of dynamic ARP of the port and VLAN which are configured with number limitation function of ARP.

Switch(config)# show arp-dynamic count interface ethernet 1/0/3

| Port | MaxCount | CurrentCount |
|------|----------|--------------|
|------|----------|--------------|

| | | |
|---------------|---|---|
| Ethernet1/0/3 | 5 | 1 |
|---------------|---|---|

Switch(config)# show arp-dynamic count vlan 1

| Vlan | MaxCount | CurrentCount |
|------|----------|--------------|
|------|----------|--------------|

| | | |
|---|----|----|
| 1 | 55 | 15 |
|---|----|----|

5.11 show mac-address dynamic count

Command: `show mac-address dynamic count { (vlan <1-4096>) | interface ethernet <portName> }`

Function: Display the number of dynamic MAC of corresponding port and VLAN.

Parameters: `<vlan-id>` display the specified VLAN ID.

`<portName>` is the name of layer-2 port.

Command Mode: Any mode

Usage Guide: Use this command to display the number of dynamic MAC of corresponding port and VLAN.

Examples: Display the number of dynamic MAC of the port and VLAN which are configured with number limitation function of MAC.

Switch(config)# show mac-address dynamic count interface ethernet 1/0/3

| Port | MaxCount | CurrentCount |
|---------------|----------|--------------|
| Ethernet1/0/3 | 5 | 1 |

| Vlan | MaxCount | CurrentCount |
|------|----------|--------------|
| 1 | 55 | 15 |

5.12 show nd-dynamic count

Command: `show nd-dynamic count { (vlan <1-4096>) | interface ethernet <portName> }`

Function: Display the number of dynamic ND of corresponding port and VLAN.

Parameters: `<vlan-id>` is play the specified vlan ID. `<portName>` is the name of layer-2 port.

Command Mode: Admin and Configuration Mode.

Usage Guide: Use this command to display the number of dynamic ND of corresponding port and VLAN.

Examples: Display the number of dynamic ND of the port and VLAN which are configured with number limitation function of ND.

Switch(config)# show nd-dynamic count interface ethernet 1/0/3

| Port | MaxCount | CurrentCount |
|---------------|----------|--------------|
| Ethernet1/0/3 | 5 | 1 |

| Vlan | MaxCount | CurrentCount |
|------|----------|--------------|
| 1 | | |

1 55 15

5.13 switchport arp dynamic maximum

Command: **switchport arp dynamic maximum <value>**

no switchport arp dynamic maximum

Function: Set the max number of dynamic ARP allowed by the port, and, at the same time, enable the number limitation function of dynamic ARP on the port; “**no switchport arp dynamic maximum**” command is used to disable the number limitation function of dynamic ARP on the port.

Parameters: <value> upper limit of the number of dynamic ARP of the port, ranging from 1 to 4096.

Default Settings: The number limitation function of dynamic ARP on the port is disabled.

Command Mode: Port mode.

Usage Guide: When configuring the max number of dynamic ARP allowed by the port, if the number of dynamically learnt ARP on the port is already larger than the max number to be set, the extra dynamic ARP will be deleted. TRUNK ports do not support this function.

Examples:

Enable the number limitation function of dynamic ARP in port 1/0/2 mode, the max number to be set is 20

Switch(config)#interface ethernet 1/0/2

Switch(Config-If-Ethernet1/0/2)# switchport arp dynamic maximum 20

Disable the number limitation function of dynamic ARP in port 1/0/2 mode

Switch(Config-If-Ethernet1/0/2)#no switchport arp dynamic maximum

5.14 switchport mac-address dynamic maximum

Command: **switchport mac-address dynamic maximum <value>**

no switchport mac-address dynamic maximum

Function: Set the max number of dynamic MAC address allowed by the port, and, at the same time, enable the number limitation function of dynamic MAC address on the port; “**no switchport mac-address dynamic maximum**” command is used to disable the number limitation function of dynamic MAC address on the port.

Parameters: <value> upper limit of the number of dynamic MAC address of the port, ranging from 1 to 4096.

Default Settings: The number limitation function of dynamic MAC address on the port is disabled.

Command Mode: Port mode.

Usage Guide: When configuring the max number of dynamic MAC address allowed by

the port, if the number of dynamically learnt MAC address on the port is already larger than the max number of dynamic MAC address to be set, the extra dynamic MAC addresses will be deleted. This function is mutually exclusive to functions such as dot1x, MAC binding, if the functions of dot1x, MAC binding or TRUNK are enabled on the port, this function will not be allowed.

Examples:

Enable the number limitation function of dynamic MAC address in port 1/0/2 mode, the max number to be set is 20

Switch(config)#interface ethernet 1/0/2

Switch(Config-If-Ethernet1/0/2)# switchport mac-address dynamic maximum 20

Disable the number limitation function of dynamic MAC address in port 1/0/2 mode

Switch(Config-If-Ethernet1/0/2)#no switchport mac-address dynamic maximum

5.15 switchport mac-address violation

Command: **switchport mac-address violation {protect | shutdown} [recovery <5-3600>]**

no switchport mac-address violation

Function: Set the violation mode of the port, the no command restores the violation mode to **protect**.

Parameters: **protect:** protect mode

shutdown: shutdown mode

recovery: Configure the border port to automatically restore after execute **shutdown** violation mode

<5-3600>: Recovery time, do not restore by default

Command Mode: Port mode

Default: **protect** mode

Usage Guide: The port sets the violation mode after enable the number limit function of MAC only. If the violation mode is **protect**, the port only disable the dynamic MAC address learning function when the MAC address number of the port exceeds the upper limit of secure MAC. If the violation mode is **shutdown**, the port will be disabled when the MAC address number exceeds the upper limit of secure MAC, and the user can enable the port by configuring **no shutdown** command manually or the automatic recovery timeout.

Example: Set the violation mode as shutdown, the recovery time as 60s for port1.

Switch(config)#interface Ethernet 1/0/1

Switch(Config-If-Ethernet1/0/1)#switchport mac-address violation shutdown recovery 60

5.16 switchport nd dynamic maximum

Command: **switchport nd dynamic maximum <value>**

no switchport nd dynamic maximum

Function: Set the max number of dynamic NEIGHBOR allowed by the port, and, at the same time, enable the number limitation function of dynamic NEIGHBOR on the port; “**no switchport nd dynamic maximum**” command is used to disable the number limitation function of dynamic NEIGHBOR on the port.

Parameters: <**value**> upper limit of the number of dynamic NEIGHBOR of the port, ranging from 1 to 4096.

Default Settings: The number limitation function of dynamic ARP on the port is disabled.

Command Mode: Port mode.

Usage Guide: When configuring the max number of dynamic NEIGHBOR allowed by the port, if the number of dynamically learnt NEIGHBOR on the port is already larger than the max number to be set, the extra dynamic NEIGHBOR will be deleted. TRUNK ports do not support this function.

Examples:

Enable the number limitation function of dynamic NEIGHBOR in port 1/0/2 mode, the max number to be 20.

```
Switch(config)#interface ethernet 1/0/2
```

```
Switch(Config-If-Ethernet1/0/2)# switchport nd dynamic maximum 20
```

Disable the number limitation function of dynamic NEIGHBOR in port 1/0/2 mode

```
Switch(Config-If-Ethernet1/0/2)#no switchport nd dynamic maximum
```

5.17 vlan mac-address dynamic maximum

Command: **vlan mac-address dynamic maximum <value>**
no vlan mac-address dynamic maximum

Function: Set the max number of dynamic MAC address allowed in the VLAN, and, at the same time, enable the number limitation function of dynamic MAC address in the VLAN; “**no ip mac-address dynamic maximum**” command is used to disable the number limitation function of dynamic MAC address in the VLAN.

Parameters: <**value**> upper limit of the number of MAC address in the VLAN, ranging from 1 to 4096.

Default Settings: The number limitation function of dynamic MAC address in the VLAN is disabled.

Command Mode: VLAN Configuration Mode.

Usage Guide: When configuring the max number of dynamic MAC allowed in the VLAN, if the number of dynamically learnt MAC address in the VLAN is already larger than the max number to be set, the extra dynamic MAC addresses will be deleted. After enabling number limitation function of dynamic MAC in the VLAN, the number limitation of MAC is only applied to general access port, the number of MAC on TURNK ports and special ports which has enabled dot1x, MAC binding function will not be limited or counted.

Examples: Enable the number limitation function of dynamic MAC address in VLAN 1, the max number to be set is 50.

```
Switch(config)#vlan1
```

```
Switch(Config-if-Vlan1)#vlan mac-address dynamic maximum 50
```

Commands for Security Function **Chapter 5 Commands for the Number
Limitation Function of MAC and IP in Port,
VLAN**

Enable the number limitation function of dynamic MAC address in VLAN 1.

Switch(Config-if-Vlan1)#no vlan mac-address dynamic maximum

Chapter 6 Commands for AM Configuration

6.1 am enable

Command: am enable

 no am enable

Function: Globally enable/disable AM function.

Parameters: None.

Default: AM function is disabled by default.

Command Mode: Global Mode.

Usage Guide: None.

Example: Enable AM function on the switch.

Switch(config)#am enable

Disable AM function on the switch.

Switch(config)#no am enable

6.2 am port

Command: am iport

 no am port

Function: Enable/disable AM function on port.

Parameters: None.

Default: AM function is disabled on all port.

Command Mode: Port Mode.

Example: Enable AM function on interface 1/0/3 of the switch.

Switch(Config-If-Ethernet 1/0/3)#am port

Disable AM function on interface 1/0/3 of the switch.

Switch(Config-If-Ethernet 1/0/3)#no am port

6.3 am ip-pool

Command: am ip-pool <ip-address> <num>

 no am ip-pool <ip-address> <num>

Function: Set the AM IP segment of the interface, allow/deny the IP messages or APR messages from a source IP within that segment to be forwarded via the interface.

Parameters: <ip-address> the starting address of an address segment in the IP address pool; <num> is the number of consecutive addresses following ip-address, less than or equal with 32.

Default: IP address pool is empty.

Command Mode: Port Mode.

Usage Guide: None.

Example: Configure that interface 1/0/3 of the switch will forward data packets from an IP address which is one of 10 consecutive IP addresses starting from 10.10.10.1.

```
Switch(Config-If-Ethernet 1/0/3)#am ip-pool 10.10.10.1 10
```

6.4 am mac-ip-pool

Command: am mac-ip-pool <mac-address> <ip-address>

```
no am mac-ip-pool <mac-address> <ip-address>
```

Function: Set the AM MAC-IP address of the interface, allow/deny the IP messages or APR messages from a source IP within that segment to be forwarded via the interface.

Parameter: <mac-address> is the source MAC address; <ip-address> is the source IP address of the packets, which is a 32 bit binary number represented in four decimal numbers.

Default: MAC-IP address pool is empty.

Command Mode: Port Mode.

Usage Guide: None.

Example: Configure that the interface 1/0/3 of the switch will allow data packets with a source MAC address of 11-22-22-11-11-11 and a source IP address of 10.10.10.1 to be forwarded.

```
Switch(Config-If-Ethernet1/0/3)#am mac-ip-pool 11-22-22-11-11-11 10.10.10.1
```

6.5 no am all

Command: no am all [ip-pool | mac-ip-pool]

Function: Delete MAC-IP address pool or IP address pool or both pools configured by all users.

Parameters: **ip-pool** is the IP address pool; **mac-ip-pool** is the MAC-IP address pool; no parameter means both address pools.

Default: Both address pools are empty at the beginning.

Command Mode: Global Mode

Usage Guide: None.

Example: Delete all configured IP address pools.

```
Switch(config)#no am all ip-pool
```

6.6 show am

Command: show am [interface <interface-name>]

Function: Display the configured AM entries.

Parameters: <interface-name> is the name of the interface of which the configuration information will be displayed. No parameter means to display the AM configuration information of all interfaces.

Command Mode: Admin and Configuration Mode.

Example: Display all configured AM entries.

Switch#show am

AM is enabled

Interface Ethernet1/0/3

```
    am interface
    am ip-pool 30.10.10.1 20
```

Interface Ethernet1/0/5

```
    am port
    am ip-pool 50.10.10.1 30
    am mac-ip-pool 00-02-04-06-08-09 20.10.10.5
    am ip-pool 50.20.10.1 20
```

Interface Ethernet1/0/6

```
    am port
```

Interface Ethernet1/0/1

```
    am interface
    am ip-pool 10.10.10.1 20
    am ip-pool 10.20.10.1 20
```

Display the AM configuration entries of ehternet1/0/5 of the switch.

Switch#show am interface ethernet 1/0/5

AM is enabled

Interface Etherne1/0/5

```
    am interface
    am ip-pool 50.10.10.1 30
    am mac-ip-pool 00-02-04-06-08-09 20.10.10.5
    am ip-pool 50.20.10.1 20
```

Chapter 7 Commands for Security Feature

7.1 dosattack-check srcip-equal-dstip enable

Command: [no] dosattack-check srcip-equal-dstip enable

Function: Enable the function by which the switch checks if the source IP address is equal to the destination IP address; the “no” form of this command disables this function.

Parameter: None

Default: Disable the function by which the switch checks if the source IP address is equal to the destination IP address.

Command Mode: Global Mode

Usage Guide: By enabling this function, data packet whose source IP address is equal to its destination address will be dropped.

Example: Drop the data packet whose source IP address is equal to its destination address.

```
Switch(config)# dosattack-check srcip-equal-dstip enable
```

7.2 dosattack-check ipv4-first-fragment enable

This command is not supported by switch.

7.3 dosattack-check tcp-flags enable

Command: [no] dosattack-check tcp-flags enable

Function: Enable the function by which the switch will check the unauthorized TCP label function; the “no” form of this command will disable this function.

Parameter: None

Default: This function disable on the switch by default

Command Mode: Global Mode

Usage Guide: With this function enabled, the switch will be able to drop follow four data packets containing unauthorized TCP label: SYN=1 while source port is smaller than 1024;TCP label positions are all 0 while its serial No. =0;FIN=1,URG=1,PSH=1 and the TCP serial No.=0;SYN=1 and FIN=1. This function can be used associating the “dosattack-check ipv4-first-fragment enable” command.

Example: Drop one or more types of above four packet types.

```
Switch(config)#dosattack-check tcp-flags enable
```

7.4 dosattack-check srcport-equal-dstport enable

Command: dosattack-check srcport-equal-dstport enable

no dosattack-check srcport-equal-dstport enable

Function: Enable the function by which the switch will check if the source port is equal to the destination port; the no command disables this function.

Parameter: None

Default: Disable the function by which the switch will check if the source port is equal to the destination port.

Command Mode: Global Mode

Usage Guide: With this function enabled, the switch will be able to drop TCP and UDP data packet whose destination port is equal to the source port. This function can be used associating the “dosattack-check ipv4-first-fragment enable” function so to block the IPv4 fragment TCP and UDP data packet whose destination port is equal to the source port.

Example: Drop the non-fragment TCP and UDP data packet whose destination port is equal to the source port.

Switch(config)#dosattack-check srcport-equal-dstport enable

7.5 dosattack-check tcp-fragment enable

This command is not supported by switch.

7.6 dosattack-check tcp-segment

This command is not supported by switch.

7.7 dosattack-check icmp-attacking enable

Command: [no] dosattack-check icmp-attacking enable

Function: Enable the ICMP fragment attack checking function on the switch; the “no” form of this command disables this function.

Parameter: None

Default: Disable the ICMP fragment attack checking function on the switch

Command Mode: Global Mode

Usage Guide: With this function enabled the switch will be protected from the ICMP fragment attacks, dropping the fragment ICMPv4/v6 data packets whose net length is smaller than the specified value.

Example: Enable the ICMP fragment attack checking function.

Switch(config)#dosattack-check icmp-attacking enable

7.8 dosattack-check icmpV4-size

Command: dosattack-check icmpV4-size <64-1023>

Function: Configure the max net length of the ICMPv4 data packet permitted by the switch.

Parameter: <64-1023> is the max net length of the ICMPv4 data packet permitted by the switch.

Default: The value is 0x200 by default

Command Mode: Global Mode

Usage Guide: To use this function you have to enable “dosattack-check icmp-attacking enable” first.

Example: Set the max net length of the ICMPv4 data packet permitted by the switch to 100.

```
Switch(config)#dosattack-check icmp-attacking enable
```

```
Switch(config)#dosattack-check icmpV4-size 100
```

7.9 dosattack-check icmpv6-size

This command is not supported by switch.

Chapter 8 Commands for TACACS+

8.1 tacacs-server authentication host

Command: **tacacs-server authentication host <ip-address> [port <port-number>] [timeout <seconds>] [key {0 | 7} <string>] [primary]**

no tacacs-server authentication host <ip-address>

Function: Configure the IP address, listening port number, the value of timeout timer and the key string of the TACACS+ server; the no form of this command deletes TACACS+ authentication server.

Parameter: **<ip-address>** is the IP address of the server; **<port-number>** is the listening port number of the server, the valid range is 0~65535, amongst 0 indicates it will not be an authentication server; **<seconds>** is the value of TACACS+ authentication timeout timer, shown in seconds and the valid range is 1~60; **<string>** is the key string, If key option is set as 0, the key is not encrypted and its range should not exceed 64 characters, if key option is set as 7, the key is encrypted and its range should not exceed 64 characters; **primary** indicates it's a primary server.

Command Mode: Global Mode

Default: No TACACS+ authentication configured on the system by default.

Usage Guide: This command is for specifying the IP address, port number, timeout timer value and the key string of the TACACS+ server used on authenticating with the switch. The parameter port is for define an authentication port number which must be in accordance with the authentication port number of specified TACACS+ server which is 49 by default. The parameters key and timeout is used to configure the self-key and self-timeout, if the switch is not configure the timeout<seconds> and key<string>, it will use the global value and key by command tacacs-server timeout<seconds> and tacacs-server key <string>. This command can configure several TACACS+ servers communicate with the switch. The configuration sequence will be used as authentication server sequence. And in case **primary** is configured on one TACACS+ server, the server will be the primary server.

Example: Configure the TACACS+ authentication server address to 192.168.1.2, and use the global configured key.

```
Switch(config)#tacacs-server authentication host 192.168.1.2
```

8.2 tacacs-server key

Command: **tacacs-server key {0 | 7} <string>**

no tacacs-server key

Function: Configure the key of TACACS+ authentication server; the “**no tacacs-server key**” command deletes the TACACS+ server key.

Parameter: <string> is the key string of the TACACS+ server. If key option is set as 0, the key is not encrypted and its range should not exceed 64 characters, if key option is set as 7, the key is encrypted and its range should not exceed 64 characters.

Command Mode: Global Mode

Usage Guide: The key is used on encrypted packet communication between the switch and the TACACS+ server. The configured key must be in accordance with the one on the TACACS+ server or else no correct TACACS+ authentication will be performed. It is recommended to configure the authentication server key to ensure the data security.

Example: Configure test as the TACACS+ server authentication key.

```
Switch(config)#tacacs-server key 0 test
```

8.3 tacacs-server nas-ipv4

Command: tacacs-server nas-ipv4 <ip-address>

```
no tacacs-server nas-ipv4
```

Function: Configure the source IP address of TACACS+ packet sent by the switch; the “no tacacs-server nas-ipv4” command deletes the configuration.

Parameter: <ip-address> is the source IP address of TACACS+ packet, in dotted decimal notation, it must be a valid unicast IP address.

Default: No specific source IP address for TACACS+ packet is configured, the IP address of the interface from which the TACACS+ packets are sent is used as source IP address of TACACS+ packet.

Command Mode: Global Mode

Usage Guide: The source IP address must belongs to one of the IP interface of the switch, otherwise an failure message of binding IP address will be returned when the switch send TACACS+ packet. We suggest using the IP address of loopback interface as source IP address, it avoids that the packets from TACACS+ server are dropped when the interface link-down.

Example: Configure the source ip address of TACACS+ packet as 192.168.2.254.

```
Switch#tacacs-server nas-ipv4 192.168.2.254
```

8.4 tacacs-server timeout

Command: tacacs-server timeout <seconds>

```
no tacacs-server timeout
```

Function: Configure a TACACS+ server authentication timeout timer; the “no tacacs-server timeout” command restores the default configuration.

Parameter: <seconds> is the value of TACACS+ authentication timeout timer, shown in seconds and the valid range is 1~60.

Command Mode: Global Mode

Default: 3 seconds by default.

Usage Guide: The command specifies the period the switch wait for the authentication

through TACACS+ server. When connected to the TACACS+, and after sent the authentication query data packet to the TACACS+ server, the switch waits for the response. If no replay is received during specified period, the authentication is considered failed.

Example: Configure the timeout timer of the tacacs+ server to 30 seconds.

```
Switch(config)#tacacs-server timeout 30
```

8.5 debug tacacs-server

Command: `debug tacacs-server`

`no debug tacacs-server`

Function: Open the debug message of the TACACS+; the “`no debug tacacs-server`” command closes the TACACS+ debugging messages.

Command Mode: Admin Mode

Parameter: None.

Usage Guide: Enable the TACACS+ debugging messages to check the negotiation process of the TACACS+ protocol which can help detecting the failure.

Example: Enable the debugging messages of the TACACS+ protocol.

```
Switch#debug tacacs-server
```

Chapter 9 Commands for RADIUS

9.1 aaa enable

Command: **aaa enable**

no aaa enable

Function: Enables the AAA authentication function in the switch; the "no AAA enable" command disables the AAA authentication function.

Command mode: Global Mode.

Parameters: No.

Default: AAA authentication is not enabled by default.

Usage Guide: The AAA authentication for the switch must be enabled first to enable IEEE 802.1x authentication for the switch.

Example: Enabling AAA function for the switch.

Switch(config)#aaa enable

9.2 aaa-accounting enable

Command: **aaa-accounting enable**

no aaa-accounting enable

Function: Enables the AAA accounting function in the switch: the "no aaa-accounting enable" command disables the AAA accounting function.

Command mode: Global Mode

Default: AAA accounting is not enabled by default.

Usage Guide: When accounting is enabled in the switch, accounting will be performed according to the traffic or online time for port the authenticated user is using. The switch will send an "accounting started" message to the RADIUS accounting server on starting the accounting, and an accounting packet for the online user to the RADIUS accounting server every five seconds, and an "accounting stopped" message is sent to the RADIUS accounting server on accounting end. Note: The switch send the "user offline" message to the RADIUS accounting server only when accounting is enabled, the "user offline" message will not be sent to the RADIUS authentication server.

Example: Enabling AAA accounting for the switch.

Switch(config)#aaa-accounting enable

9.3 aaa-accounting update

Command: **aaa-accounting update {enable | disable}**

Function: Enable or disable the AAA update accounting function.

Command Mode: Global Mode.

Default: Enable the AAA update accounting function.

Usage Guide: After the update accounting function is enabled, the switch will sending accounting message to each online user on time.

Example: Disable the AAA update accounting function for switch.

```
Switch(config)#aaa-accounting update disable
```

9.4 debug aaa packet

Command: `debug aaa packet {send | receive | all} interface {ethernet <interface-number> | <interface-name>}`

`no debug aaa packet {send | receive | all} interface {ethernet <interface-number> | <interface-name>}`

Function: Enable the debug information of AAA about receiving and sending packets; the no operation of this command will disable such debug information.

Parameters: **send:** Enable the debug information of AAA about sending packets.

receive: Enable the debug information of AAA about receiving packets.

all: Enable the debug information of AAA about both sending and receiving packets.

<interface-number>: the number of interface.

<interface-name>: the name of interface.

Command Mode: Admin Mode.

Usage Guide: By enabling the debug information of AAA about sending and receiving packets, users can check the messages received and sent by Radius protocol, which might help diagnose the cause of faults if there is any.

Example: Enable the debug information of AAA about sending and receiving packets on interface1/0/1.

```
Switch#debug aaa packet all interface Ethernet 1/0/1
```

9.5 debug aaa detail attribute

Command: `debug aaa detail attribute interface {ethernet <interface-number> | <interface-name>}`

`no debug aaa detail attribute interface {ethernet <interface-number> | <interface-name>}`

Function: Enable the debug information of AAA about Radius attribute details; the no operation of this command will disable that debug information.

Parameters: **<interface-number>:** the number of the interface.

<interface-name>: the name of the interface.

Command Mode: Admin Mode.

Usage Guide: By enabling the debug information of AAA about Radius attribute details, users can check Radius attribute details of Radius messages, which might help diagnose

the cause of faults if there is any.

Example: Enable the debug information of aaa about Radius attribute details on interface 1/0/1.

Switch#debug detail attribute interface Ethernet 1/0/1

9.6 debug aaa detail connection

Command: **debug aaa detail connection**

no debug aaa detail connection

Function: Enable the debug information of aaa about connection details; the no operation of this command will disable that debug information.

Parameters: None.

Command Mode: Admin Mode.

Usage Guide: By enabling the debug information of aaa about connection details, users can check connection details of aaa, which might help diagnose the cause of faults if there is any.

Example: Enable the debug information of aaa about connection details.

Switch#debug aaa detail connection

9.7 debug aaa detail event

Command: **debug aaa detail event**

no debug detail event

Function: Enable the debug information of aaa about events; the no operation of this command will disable that debug information.

Parameters: None.

Command Mode: Admin Mode.

Usage Guide: By enabling the debug information of aaa about events, users can check the information of all kinds of event generated in the operation process of Radius protocol, which might help diagnose the cause of faults if there is any.

Example: Enable the debug information of aaa about events.

Switch#debug aaa detail event

9.8 debug aaa error

Command: **debug aaa error**

no debug error

Function: Enable the debug information of aaa about errors; the no operation of this command will disable that debug information.

Parameters: None.

Command Mode: Admin Mode.

Usage Guide: By enabling the debug information of aaa about errors, users can check the information of all kinds of errors that occurs in the operation process of Radius protocol, which might help diagnose the cause of faults if there is any.

Example: Enable the debug information of aaa about errors.

```
Switch#debug aaa error
```

9.9 radius nas-ipv4

Command: `radius nas-ipv4 <ip-address>`

`no radius nas-ipv4`

Function: Configure the source IP address for RADIUS packet sent by the switch. The “`no radius nas-ipv4`” command deletes the configuration.

Parameter: `<ip-address>` is the source IP address of the RADIUS packet, in dotted decimal notation, it must be a valid unicast IP address.

Default: No specific source IP address for RADIUS packet is configured, the IP address of the interface from which the RADIUS packets are sent is used as source IP address of RADIUS packet.

Command mode: Global Mode.

Usage guide: The source IP address must belongs to one of the IP interface of the switch, otherwise an failure message of binding IP address will be returned when the switch send RADIUS packet. We suggest using the IP address of loopback interface as source IP address, it avoids that the packets from RADIUS server are dropped when the interface link-down.

Example: Configure the source ip address of RADIUS packet as 192.168.2.254.

```
Switch#radius nas-ipv4 192.168.2.254
```

9.10 radius nas-ipv6

Command: `radius nas-ipv6 <ipv6-address>`

`no radius nas-ipv6`

Function: Configure the source IPv6 address for RADIUS packet sent by the switch. The `no` command deletes the configuration.

Parameter: `<ipv6-address>` is the source IPv6 address of the RADIUS packet, it must be a valid unicast IPv6 address.

Default: No specific source IPv6 address for RADIUS packet is configured, the IPv6 address of the interface from which the RADIUS packets are sent is used as source IPv6 address of RADIUS packet.

Command mode: Global Mode.

Usage guide: The source IPv6 address must belongs to one of the IPv6 interface of the switch, otherwise a failure message of binding IPv6 address will be returned when the switch send RADIUS packet. We suggest using the IPv6 address of loopback interface as source IPv6 address, it avoids that the packets from RADIUS server are dropped

when the interface link-down.

Example: Configure the source ipv6 address of RADIUS packet as 2001:da8:456::1.
Switch#radius nas-ipv6 2001:da8:456::1

9.11 radius-server accounting host

Command: radius-server accounting host {<ipv4-address> | <ipv6-address>} [port <port-number>] [key {0 | 7} <string>] [primary]

no radius-server accounting host {<ipv4-address> | <ipv6-address>}

Function: Specifies the IPv4/IPv6 address and the port number, whether be primary server for RADIUS accounting server; the no command deletes the RADIUS accounting server.

Parameters: <ipv4-address> | <ipv6-address> stands for the server IPv4/IPv6 address;

<port-number> for server listening port number from 0 to 65535;

<string> is the key string. If key option is set as 0, the key is not encrypted and its range should not exceed 64 characters, if key option is set as 7, the key is encrypted and its range should not exceed 64 characters;

primary for primary server. Multiple RADIUS sever can be configured and would be available. RADIUS server will be searched by the configured order if **primary** is not configured, otherwise, the specified RADIUS server will be used first.

Command Mode: Global Mode

Default: No RADIUS accounting server is configured by default.

Usage Guide: This command is used to specify the IPv4/IPv6 address and port number of the specified RADIUS server for switch accounting, multiple command instances can be configured. The <port-number> parameter is used to specify accounting port number, which must be the same as the specified accounting port in the RADIUS server; the default port number is 1813. If this port number is set to 0, accounting port number will be generated at random and can result in invalid configuration. This command can be used repeatedly to configure multiple RADIUS servers communicating with the switch, the switch will send accounting packets to all the configured accounting servers, and all the accounting servers can be backup servers for each other. If **primary** is specified, then the specified RADIUS server will be the primary server. It only configures a RADIUS primary server whether the server use IPv4 address or IPv6 address.

Example: Sets the RADIUS accounting server of IPv6 address to 2004:1:2:3::2, as the primary server, with the accounting port number as 3000.

Switch(config)#radius-server accounting host 2004:1:2:3::2 port 3000 primary

9.12 radius-server authentication host

Command: radius-server authentication host {<ipv4-address> | <ipv6-address>} [port <port-number>] [key {0 | 7} <string>] [primary] [access-mode {dot1x | telnet}]

```
no radius-server authentication host {<ipv4-address> | <ipv6-address>}
```

Function: Specifies the IPv4 address or IPv6 address and listening port number, cipher key, whether be primary server or not and access mode for the RADIUS server; the no command deletes the RADIUS authentication server.

Parameters: *<ipv4-address> | <ipv6-address>* stands for the server IPv4/IPv6 address;

<port-number> for listening port number, from 0 to 65535, where 0 stands for non-authentication server usage;

<string> is the key string. If key option is set as 0, the key is not encrypted and its range should not exceed 64 characters, if key option is set as 7, the key is encrypted and its range should not exceed 64 characters;

primary for primary server. Multiple RADIUS Sever can be configured and would be available. RADIUS Server will be searched by the configured order if **primary** is not configured, otherwise, the specified RADIUS server will be used last.

[**access-mode {dot1x|telnet}**] designates the current RADIUS server only use 802.1x authentication or telnet authentication, all services can use current RADIUS server by default.

Command mode: Global Mode

Default: No RADIUS authentication server is configured by default.

Usage Guide: This command is used to specify the IPv4 address or IPv6 address and port number, cipher key string and access mode of the specified RADIUS server for switch authentication, multiple command instances can be configured. The port parameter is used to specify authentication port number, which must be the same as the specified authentication port in the RADIUS server, the default port number is 1812. If this port number is set to 0, the specified server is regard as non-authenticating. This command can be used repeatedly to configure multiple RADIUS servers communicating with the switch, the configured order is used as the priority for the switch authentication server. When the first server has responded (whether the authentication is successed or failed), switch does not send the authentication request to the next. If **primary** is specified, then the specified RADIUS server will be the primary server. It will use the cipher key which be configured by **radius-server key <string>** global command if the current RADIUS server not configure key<string>. Besides, it can designate the current RADIUS server only use 802.1x authentication or telnet authentication via access-mode option. It is not configure access-mode option and all services can use current RADIUS server by default.

Example: Setting the RADIUS authentication server address as 2004:1:2:3::2.

```
Switch(config)#radius-server authentication host 2004:1:2:3::2
```

9.13 radius-server dead-time

Command: **radius-server dead-time <minutes>**

```
no radius-server dead-time
```

Function: Configures the restore time when RADIUS server is down; the “**no radius-server dead-time**” command restores the default setting.

Parameters: <*minute*> is the down -restore time for RADIUS server in minutes, the valid range is 1 to 255.

Command mode: Global Mode

Default: The default value is 5 minutes.

Usage Guide: This command specifies the time to wait for the RADIUS server to recover from inaccessible to accessible. When the switch acknowledges a server to be inaccessible, it marks that server as having invalid status, after the interval specified by this command; the system resets the status for that server to valid.

Example: Setting the down-restore time for RADIUS server to 3 minutes.

```
Switch(config)#radius-server dead-time 3
```

9.14 radius-server key

Command: **radius-server key {0 | 7} <string>**

no radius-server key

Function: Specifies the key for the RADIUS server (authentication and accounting); the “no radius-server key” command deletes the key for RADIUS server.

Parameters: <*string*> is a key string for RADIUS server, If key option is set as 0, the key is not encrypted and its range should not exceed 64 characters, if key option is set as 7, the key is encrypted and its range should not exceed 64 characters.

Command mode: Global Mode

Usage Guide: The key is used in the encrypted communication between the switch and the specified RADIUS server. The key set must be the same as the RADIUS server set, otherwise, proper RADIUS authentication and accounting will not perform properly.

Example: Setting the RADIUS authentication key to be “test”.

```
Switch(config)#radius-server key 0 test
```

9.15 radius-server retransmit

Command: **radius-server retransmit <retries>**

no radius-server retransmit

Function: Configures the re-transmission times for RADIUS authentication packets; the “**no radius-server retransmit**” command restores the default setting.

Parameters: <*retries*> is a retransmission times for RADIUS server, the valid range is 0 to 100.

Command mode: Global Mode

Default: The default value is 3 times.

Usage Guide: This command specifies the retransmission time for a packet without a RADIUS server response after the switch sends the packet to the RADIUS server. If authentication information is missing from the authentication server, AAA authentication

request will need to be re-transmitted to the authentication server. If AAA request retransmission count reaches the retransmission time threshold without the server responding, the server will be considered to as not work, the switch sets the server as invalid.

Example: Setting the RADIUS authentication packet retransmission time to five times.

```
Switch(config)#radius-server retransmit 5
```

9.16 radius-server timeout

Command: **radius-server timeout <seconds>**

no radius-server timeout

Function: Configures the timeout timer for RADIUS server; the “**no radius-server timeout**” command restores the default setting.

Parameters: **<seconds>** is the timer value (second) for RADIUS server timeout, the valid range is 1 to 1000.

Command mode: Global Mode

Default: The default value is 3 seconds.

Usage Guide: This command specifies the interval for the switch to wait RADIUS server response. The switch waits for corresponding response packets after sending RADIUS Server request packets. If RADIUS server response is not received in the specified waiting time, the switch resends the request packet or sets the server as invalid according to the current conditions.

Example: Setting the RADIUS authentication timeout timer value to 30 seconds.

```
Switch(config)#radius-server timeout 30
```

9.17 radius-server accounting-interim-update timeout

Command: **radius-server accounting-interim-update timeout <seconds>**

no radius-server accounting-interim-update timeout

Function: Set the interval of sending fee-counting update messages; the no operation of this command will reset to the default configuration.

Parameters: **<seconds>** is the interval of sending fee-counting update messages, in seconds, ranging from 60 to 3600.

Command Mode: Global Mode.

Default: The default interval of sending fee-counting update messages is 300 seconds.

User Guide: This command set the interval at which NAS sends fee-counting update messages. In order to realize the real time fee-counting of users, from the moment the user becomes online, NAS will send a fee-counting update message of this user to the RADIUS server at the configured interval.

The interval of sending fee-counting update messages is relative to the maximum number of users supported by NAS. The smaller the interval, the less the maximum number of the users supported by NAS; the bigger the interval, the more the maximum

number of the users supported by NAS. The following is the recommended ratio of interval of sending fee-counting update messages to the maximum number of the users supported by NAS:

Table 7-1 The recommended ratio of the interval of sending fee-counting update messages to the maximum number of the users supported by NAS

| The maximum number of users | The interval of sending fee-counting update messages(in seconds) |
|-----------------------------|--|
| 1~299 | 300 (default value) |
| 300~599 | 600 |
| 600~1199 | 1200 |
| 1200~1799 | 1800 |
| ≥1800 | 3600 |

Example: The maximum number of users supported by NAS is 700, the interval of sending fee-counting update messages 1200 seconds.

```
Switch(config)#radius-server accounting-interim-update timeout 1200
```

9.18 show aaa authenticated-user

Command: `show aaa authenticated-user`

Function: Displays the authenticated users online.

Command mode: Admin and Configuration Mode.

Usage Guide: Usually the administrator concerns only information about the online user, the other information displayed is used for troubleshooting by technical support.

Example:

```
Switch#show aaa authenticated-user
----- authenticated users -----
UserName  Retry RadID Port EapID ChapID OnTime UserIP      MAC
-----
----- total: 0 -----
```

9.19 show aaa authenticating-user

Command: `show aaa authenticating-user`

Function: Display the authenticating users.

Command mode: Admin and Configuration Mode.

Usage Guide: Usually the administrator concerns only information about the authenticating user, the other information displays is used for troubleshooting by the technical support.

Example:

Switch#show aaa authenticating-user

```
----- authenticating users -----
User-name  Retry-time Radius-ID  Port Eap-ID Chap-ID Mem-Addr  State
-----
----- total: 0 -----
```

9.20 show aaa config

Command: show aaa config

Function: Displays the configured commands for the switch as a RADIUS client.

Command mode: Admin and Configuration Mode.

Usage Guide: Displays whether aaa authentication, accounting are enabled and information for key, authentication and accounting server specified.

Example:

Switch#show aaa config (For Boolean value, 1 stands for TRUE and 0 for FALSE)

```
----- AAA config data -----
```

Is Aaa Enabled = 1 :1 means AAA authentication is enabled, 0 means is not enabled

Is Account Enabled= 1 :1 means AAA account is enabled, 0 means is not enabled

MD5 Server Key = yangshifeng : Authentication key

authentication server sum = 2 :Configure the number of authentication server

authentication server[0].sock_addr = 2:100.100.100.60.1812 :The address protocol group, IP and interface number of the first authentication server

.Is Primary = 1 :Is the primary server

.Is Server Dead = 0 :The server whether dead

.Socket No = 0 :The local socket number lead to this server

authentication server[1].sock_addr = 10:2004:1:2::2.1812

.Is Primary = 0

.Is Server Dead = 0

.Socket No = 0

accounting server sum = 2 :Configure the number of the accounting server

accounting server[0].sock_addr = 2:100.100.100.65.1813 :The address protocol group, IP and interface number of the accounting server

.Is Primary = 1 :Is primary server

.Is Server Dead = 0 :This server whether dead

.Socket No = 0 :The local socket number lead to this server

accounting server[1].sock_addr = 10:2004::7.1813

.Is Primary = 1

.Is Server Dead = 0

.Socket No = 0

Time Out = 5s :After send the require packets, wait for response time out
Retransmit = 3 :The number of retransmit
Dead Time = 5min :The tautology interval of the dead server
Account Time Interval = 0min :The account time interval

9.21 show radius authenticated-user count

Command: **show radius authenticated-user count**

Function: Show the number of on-line users who have already passed the authentication.

Parameter: None.

Command mode: Admin and configuration mode

Default: None.

Usage guide: None.

Example:

Switch#show radius authenticated-user count

The authenticated online user num is: 105

9.22 show radius authenticating-user count

Command: **show radius authenticating-user count**

Function: Show the number of the authenticating-user.

Parameter: None.

Command mode: Admin and configuration mode.

Default: None.

Usage Guide: None.

Example:

Switch#show radius authenticating-user count

The authenticating user num is: 10

9.23 show radius count

Command: **show radius {authenticated-user|authenticating-user} count**

Function: Displays the statistics for users of RADIUS authentication.

Parameters: **authenticated-user** displays the authenticated users online; **authenticating-user** displays the authenticating users.

Command mode: Admin and Configuration Mode.

Usage Guide: The statistics for RADIUS authentication users can be displayed with the “**show radius count**” command.

Example:

1. Display the statistics for RADIUS authenticated users.

Switch#show radius authenticated-user count

The authenticated online user num is: 0

2. Display the statistics for RADIUS authenticated users and others.

Switch#show radius authenticating-user count

Chapter 10 Commands for SSL Configuration

10.1 ip http secure-server

Command: ip http secure-server

 no ip http secure-server

Function: Enable/disable SSL function.

Parameter: None.

Command Mode: Global Mode.

Default: Disabled.

Usage Guide: This command is used for enable and disable SSL function. After enable SSL function, the users visit the switch through https client, switch and client use SSL connect, can form safety SSL connect channel. After that, all the data which transmit of the application layer will be encrypted, then ensure the privacy of the communication.

Example: Enable SSL function.

Switch(config)#ip http secure-server

10.2 ip http secure-port

Command: ip http secure-port <port-number>

 no ip http secure-port

Function: Configure/delete port number by SSL used.

Parameter: <port-number> means configured port number, range between 1025 and 65535. 443 is for default.

Command Mode: Global Mode.

Default: Not configure.

Usage Guide: If this command is used to configure the port number, then the configured port number is used to monitor. If the port number for https is changed, when users try to use https to connect, must use the changed one. For example: https://device:port_number. SSL function must reboot after every change.

Example: Configure the port number is 1028.

Switch(config)#ip http secure-port 1028

10.3 ip http secure- ciphersuite

Command: ip http secure-ciphersuite {des-cbc3-sha|rc4-128-sha| des-cbc-sha}

 no ip http secure-ciphersuite

Function: Configure/delete secure cipher suite by SSL used.

Parameter: **des-cbc3-sha** encrypted algorithm DES_CBC3, summary algorithm SHA.

rc4-128-sha encrypted algorithm RC4_128, summary algorithm SHA.

des-cbc-sha encrypted algorithm DES_CBC, summary algorithm SHA.

 default use is **rc4-md5**.

Command Mode: Global Mode.

Default: Not configure.

Usage Guide: If this command is used to configure the secure cipher suite, specified encryption method will be used. The SSL should be restarted to take effect after changes on configuration. When des-cbc-sha is configured, IE 7.0 or above is required.

Example: Configure the secure cipher suite is rc4-128-sha.

```
Switch(config)# ip http secure- ciphersuite rc4-128-sha
```

10.4 show ip http secure-server status

Command: **show ip http secure-server status**

Function: Show the status for the configured SSL.

Parameter: None.

Command Mode: Admin and Configuration Mode.

Example:

```
Switch# show ip http secure-server status
```

HTTP secure server status: Enabled

HTTP secure server port: 1028

HTTP secure server ciphersuite: rc4-128-sha

10.5 debug ssl

Command: **debug ssl**

no debug ssl

Function: Show the configured SSL information, the no command closes the DEBUG.

Parameter: None.

Command Mode: Admin Mode.

Example:

```
Switch# debug ssl
```

%Jan 01 01:02:05 2006 ssl will to connect to web server 127.0.0.1:9998

%Jan 01 01:02:05 2006 connect to http security server success!

Chapter 11 Commands for IPv6 Security RA

11.1 ipv6 security-ra enable

Command: **ipv6 security-ra enable**
 no ipv6 security-ra enable

Function: Globally enable IPv6 security RA function, all the RA advertisement messages will not be forwarded through hardware, but only sent to CPU to handle. The no operation of this command will globally disable IPv6 security RA function.

Parameters: None.

Command Mode: Global Configuration Mode.

Default: The IPv6 security RA function is disabled by default.

Usage Guide: Only after enabling the global security RA function, the security RA on a port can be enabled. Globally disabling security RA will clear all the configured security RA ports. The global security RA function and the global IPv6 SAVI function are mutually exclusive, so they can not be enabled at the same time.

Example: Globally enable IPv6 security RA.

```
Switch(config)#ipv6 security-ra enable
```

11.2 ipv6 security-ra enable

Command: **ipv6 security-ra enable**
 no ipv6 security-ra enable

Function: Enable IPv6 security RA on a port, causing this port not to forward the received RA message. The **no ipv6 security-ra enable** will disable the IPv6 security RA on a port.

Parameters: None.

Command Mode: Port Configuration Mode.

Default: IPv6 security RA function is disabled by default.

Usage Guide: Only after globally enabling the security RA function, can the security RA on a port be enabled. Globally disabling security RA will clear all the configured security RA ports.

Example: Enable IPv6 security RA on a port.

```
Switch(Config-If-Ethernet1/0/2)#ipv6 security-ra enable
```

11.3 show ipv6 security-ra

Command: **show ipv6 security-ra [interface <interface-list>]**

Function: Display all the interfaces with IPv6 RA function enabled.

Parameters: No parameter will display all distrust ports, entering a parameter will display the corresponding distrust port.

Command Mode: Admin and Configuration Mode.

Example:

```
Switch# show ipv6 security-ra
```

IPv6 security ra config and state information in the switch

Global IPv6 Security RA State: Enable

Ethernet1/0/1

IPv6 Security RA State: Yes

Ethernet1/0/3

IPv6 Security RA State: Yes

11.4 debug ipv6 security-ra

Command: **debug ipv6 security-ra**

no debug ipv6 security-ra

Function: Enable the debug information of IPv6 security RA; the no operation of this command will disable the debug information of IPv6 security RA.

Command Mode: Admin Mode.

Parameters: None.

Usage Guide: Users can check the proceeds of message handling of IPv6 security RA, which will help investigate the causes to problems if there is any.

Example: Enable the debug information of IPv6 security RA.

```
Switch#debug ipv6 security-ra
```

Chapter 12 Commands for MAB

12.1 authentication mab

Command: authentication mab {radius | none}

no authentication mab

Function: Configure the authentication mode and priority of MAC address authentication, the no command restores the default authentication mode.

Parameters: radius means RADIUS authentication mode, none means the authentication is needless.

Default: Using RADIUS authentication mode.

Command Mode: Global mode

Usage Guide: none option is used to the fleeing function of MAC address authentication. If all configured RADIUS servers don't respond, switch will adopt none authentication mode to allow that MAC address authentication users access the network directly.

Example: Configure the fleeing function of MAC address authentication.

```
Switch(config)#authentication mab radius none
```

12.2 clear mac-authentication-bypass binding

Command: clear mac-authentication-bypass binding {mac WORD | interface (ethernet IFNAME | IFNAME) | all}

Function: Clear MAB binding information.

Parameters: **MAC:** Delete MAB binding of the specified MAC address

IFNAME: Delete MAB binding of the specified port

all: Delete all MAB binding

Command Mode: Admin Mode

Default: None.

Usage Guide: None.

Example: Delete all MAB binding.

```
Switch#clear mac-authentication-bypass binding all
```

12.3 debug mac-authentication-bypass

Command: debug mac-authentication-bypass {packet | event | binding}

Function: Enable the debugging of the packet information, event information or binding information for MAB authentication.

Parameters: **packet:** Enable the debugging of the packet information for MAB authentication.

event: Enable the debugging of the event information for MAB authentication.

binding: Enable the debugging of the binding information for MAB authentication.

Command Mode: Admin Mode

Default: None.

Usage Guide: None.

Example: Enable the debugging of the packet information for MAB authentication.

```
Switch#debug mac-authentication-bypass packet
```

12.4 mac-authentication-bypass binding-limit

Command: **mac-authentication-bypass binding-limit <1-100>**

no mac-authentication-bypass binding-limit

Function: Set the max binding number of MAB. The no command will restore the default binding number as 3.

Parameters: **<1-100>** the max binding number of MAB, ranging from 1 to 100.

Command Mode: Port Mode

Default: The max binding number of MAB is 3.

Usage Guide: Set the max binding number of MAB. When the binding number reaches to the max value, the port will stop binding, if the max binding number is less than the current binding number of the port, the setting will be unsuccessful.

Example: Configure the max binding number as 10.

```
Switch(Config)#interface ethernet 1/0/1
```

```
Switch(Config-If-Ethernet1/0/1)#mac-authentication-bypass binding-limit 10
```

12.5 mac-authentication-bypass enable

Command: **mac-authentication-bypass enable**

no mac-authentication-bypass enable

Function: Enable the global and port MAB function. The no command disables MAB function.

Parameters: None.

Command Mode: Global Mode and Port Mode

Default: Disable the global and port MAB function.

Usage Guide: To process MAB authentication of a port, enable the global MAB function first, and then, enable the MAB function of the corresponding port.

Example: Enable the global and port Eth1/0/1 MAB function.

```
Switch(Config)#mac-authentication-bypass enable
```

```
Switch(Config)#interface ethernet 1/0/1
```

```
Switch(Config-If-Ethernet1/0/1)#mac-authentication-bypass enable
```

12.6 mac-authentication-bypass guest-vlan

This command is not supported by switch.

12.7 mac-authentication-bypass spoofing-garp-check

Command: **mac-authentication-bypass spoofing-garp-check enable**
no mac-authentication-bypass spoofing-garp-check enable

Function: Enable the spoofing-garp-check function, MAB function will not deal with spoofing-garp any more; the no command disables the function.

Parameters: None.

Command Mode: Global Mode

Default: Disable spoofing-garp-check function.

Usage Guide: When the terminal of Windows operating system detects the address conflict, it will send a gratuitous ARP to correct the error ARP entries generated by gratuitous ARP of the conflict detection. This command is used to detect the spoofing-garp when occurring the address conflict, MAB function is not deal with the packet any more. Notice: when enabling the check function, all ARP will be processed by the software check, it will add switch's load.

Example: Enable spoofing-garp-check function.

```
Switch(Config)#mac-authentication-bypass spoofing-garp-check enable
```

12.8 mac-authentication-bypass timeout linkup-period

This command is not supported by switch.

12.9 mac-authentication-bypass timeout offline-detect

Command: **mac-authentication-bypass timeout offline-detect (0 | <60-7200>)**
no mac-authentication-bypass timeout offline-detect

Function: Configure offline-detect time. The no command restores the default value.

Parameters: **(0 | <60-7200>):** offline-detect time, the range is 0 or 60 to 7200s.

Command Mode: Global Mode

Default: offline-detect time is 180s.

Usage Guide: When offline-detect time is 0, the switch does not detect MAB binding, when offline-detect time is 60s to 7200s, the switch timely detects the flow corresponding to the MAB binding. If there is no flow in the period of offline-detect time, it will delete this binding and forbid the flow to pass.

Example: Configure offline-detect time as 200s.

```
Switch(Config)#mac-authentication-bypass timeout offline-detect 200
```

12.10 mac-authentication-bypass timeout quiet-period

Command: **mac-authentication-bypass timeout quiet-period <1-60>**

no mac-authentication-bypass timeout quiet-period

Function: Set quiet-period of MAB authentication. The no command restores quiet-period as the default value.

Parameters: **<1-60>**: quiet-period, ranging from 1 to 60s.

Command Mode: Global Mode

Default: quiet-period is 30s.

Usage Guide: If MAB authentication is failing, within the quiet-period the switch will not respond the authentication request of this MAC, after quiet-period, it will respond the request again.

Example: Configure quiet-period of MAB authentication as 60s.

```
Switch(Config)#mac-authentication-bypass timeout quiet-period 60
```

12.11 mac-authentication-bypass timeout reauth-period

This command is not supported by switch.

12.12 mac-authentication-bypass timeout stale-period

Command: **mac-authentication-bypass timeout stale-period <0-60>**

no mac-authentication-bypass timeout stale-period

Function: Set the time that delete the binding user after MAB port is down. The no command restores the default value.

Parameters: **<1-60>**: The time that delete the binding, ranging from 0 to 60s.

Command Mode: Global Mode

Default: 30s.

Usage Guide: If the time that delete the binding as 0, delete all user binding of this port as soon as the MAB port is down, if the time is bigger than 0, delete the user binding with a delay after the MAB port is down.

Example: Configure the deletion time as 40s.

```
Switch(Config)#mac-authentication-bypass timeout stale-period 40
```

12.13 mac-authentication-bypass username-format

Command: **mac-authentication-bypass username-format {mac-address | {fixed username WORD password WORD}}**

Function: Set the authenticate method of MAB authentication.

Parameters: **mac-address:** Use MAC address of MAB user as username and password to authenticate.

fixed username WORD password WORD: Use the specified username and password to authenticate, the length of username and password ranges between 1 and 32 characters.

Command Mode: Global Mode

Default: Use MAC address of MAB user as username and password to authenticate.

Usage Guide: There are two methods for MAB authentication: use MAC address of MAB user as username and password to authenticate or use the specified username and password to authenticate. If there is no specified username and password, the device uses the first method to authenticate by default.

Example: All MAB users use the same username and password to authenticate, the username is mab-user, the password is mab-pwd.

```
Switch(Config)#mac-authentication-bypass username-format fixed username mab-user
password mab-pwd
```

12.14 show mac-authentication-bypass

Command: `show mac-authentication-bypass {interface {ethernet IFNAME | IFNAME} |}`

Function: Show the binding information of MAB authentication.

Parameters: **interface {ethernet IFNAME|IFNAME}:** The port name.

Command Mode: Admin Mode

Default: None.

Usage Guide: None.

Example: Show the binding information of all MAB users.

```
Switch#show mac-authentication-bypass
```

The Number of all binding is 5

| MAC | Interface | Vlan ID | State |
|-------------------|---------------|---------|-------------------|
| 05-0a-eb-6a-7f-88 | Ethernet1/0/1 | 1 | MAB QUIET |
| 04-0a-eb-6a-7f-88 | Ethernet1/0/1 | 1 | MAB QUIET |
| 03-0a-eb-6a-7f-88 | Ethernet1/0/1 | 1 | MAB QUIET |
| 02-0a-eb-6a-7f-88 | Ethernet1/0/1 | 1 | MAB AUTHENTICATED |
| 00-0a-eb-6a-7f-8e | Ethernet1/0/1 | 1 | MAB AUTHENTICATED |

| Displayed information | Explanation |
|---------------------------|--------------------------------------|
| The Number of all binding | The binding number of all MAB users, |

| | |
|-----------|--|
| | include the successful authentication user and the failing authentication user at quiet-period state |
| MAC | MAC address |
| Interface | The binding port |
| Vlan | The VLAN that MAB user belongs |
| State | Authentication state |

Switch(config)#show mac-authentication-bypass int e1/0/1

Interface Ethernet1/0/1 user config:

MAB enable: Enable

Binding info: 1

MAB Binding built at SUN JAN 01 01:14:48 2006

VID 1, Port: Ethernet1/0/1

Client MAC: 00-0a-eb-6a-7f-8e

Binding State: MAB_AUTHENTICATED

Binding State Lease: 164 seconds left

| Displayed information | Explanation |
|-----------------------|--|
| MAB enable | MAB function enabled or not |
| Binding info | The MAB binding number of the specified port |
| MAB Binding built at | The time when the user binding was created |
| VID | The VLAN that MAB user belongs |
| Port | The binding port |
| Client MAC | MAC address |
| Binding State | Authentication state |
| Binding State Lease | Remain time before the binding release |

Chapter 13 Commands for PPPoE Intermediate Agent

13.1 debug pppoe intermediate agent packet {receive | send} interface ethernet <interface-name>

Command: debug pppoe intermediate agent packet (receive | send) interface ethernet <interface-name>

no debug pppoe intermediate agent packet (receive | send) interface ethernet <interface-name>

Function: Enable PPPoE packet debug for the specified port, the no command disables it.

Parameter: receive: Enable the debug that receive PPPoE packet.

send: Enable the debug that send PPPoE packet.

ethernet: Physical port

interface-name: Port name

Command Mode: Admin mode

Default: Disable PPPoE packet debug for the specified port.

Usage Guide: Enable PPPoE packet debug for the specified port to show PPPoE packet received and sent by this port.

Example: Enable PPPoE intermediate debug for port ethernet1/0/2.

Switch#debug pppoe intermediate agent packet send interface ethernet 1/0/2

13.2 pppoe intermediate-agent

Command: pppoe intermediate-agent

no pppoe intermediate-agent

Function: Enable global PPPoE intermediate agent function. The no command disables global PPPoE intermediate agent function.

Parameter: None.

Command Mode: Global mode.

Default: Disable global PPPoE intermediate agent function.

Usage Guide: After enable global PPPoE IA function, process the packet of PPPoE discovery stage according to the related configuration.

Example: Enable global PPPoE intermediate agent function.

Switch(config)#pppoe intermediate agent

13.3 pppoe intermediate-agent (Port)

Command: **pppoe intermediate-agent**

no pppoe intermediate-agent

Function: Enable PPPoE intermediate agent function of the port. The no command disables PPPoE intermediate agent function of the port.

Parameter: None.

Command Mode: Port mode

Default: Disable PPPoE intermediate agent function of the port.

Usage Guide: After enable PPPoE IA function of the port, add vendor tag for PPPoE packet of the port.

Note: 1. It must enable global pppoe intermediate-agent function.

2. At least one port is connected to PPPoE server, and the port mode is trust.

Example: Enable PPPoE intermediate agent function of the port ethernet 1/0/2.

Switch(config-if-ethernet1/0/2)#pppoe intermediate agent

13.4 pppoe intermediate-agent circuit-id

Command: **pppoe intermediate-agent circuit-id <string>**

no pppoe intermediate-agent circuit-id <string>

Function: Configure circuit ID of the port, the no command cancels this configuration.

Parameter: <string>: circuit-id, the max character number is 63 bytes.

Command Mode: Port mode

Default: This configuration is null.

Usage Guide: This command configures circuit-id alone for each port, the priority is higher than pppoe intermediate-agent identifier-string command.

Example: Configure circuit-id as abcd/efgh on port ethernet1/0/3 of vlan3.

Switch(config-if-ethernet1/0/3)#pppoe intermediate-agent circuit-id abcd/efgh

After port ethernet1/0/3 of vlan3 receives PPPoE packet, circuit-id value of the added vendor tag as "abcd/efgh".

13.5 pppoe intermediate-agent delimiter

Command: **pppoe intermediate-agent delimiter <WORD>**

no pppoe intermediate-agent delimiter

Function: Configure the delimiter among the fields in circuit-id and remote-id, the no command cancels the configuration.

Parameter: <WORD>: the delimiter, its range is (#|.|,|;|:/|space).

Command Mode: Global mode

Default: The fields is comparted with '\0'.

Usage Guide: After configuring the delimiter, the added fields of circuit-id and remote-id use the configured delimiter to compart. Notice: The global **pppoe intermediate-agent** function must be enabled.

Example: Configure the delimiter.

```
Switch(config)#pppoe intermediate-agent delimiter space
```

13.6 pppoe intermediate-agent format

Command: **pppoe intermediate-agent format (circuit-id | remote-id) (hex | ascii)**
no pppoe intermediate-agent format (circuit-id | remote-id)

Function: Configure the format with hex or ASCII for circuit-id and remote-id, the no command cancels the configuration.

Parameter: hex: hexadecimal

ascii: ASCII code

Command Mode: Global mode

Default: This configuration is null.

Usage Guide: Encapsulation circuit-id and remote-id with hex ASCII format to vendor tag. Notice: The global **pppoe intermediate-agent** function must be enabled.

Example: Configure the trust port 1/0/1 to enable vendor-tag strip function.

```
Switch(config)#pppoe intermediate-agent format remote-id ascii
```

13.7 pppoe intermediate-agent remote-id

Command: **pppoe intermediate-agent remote-id <string>**
no pppoe intermediate-agent remote-id <string>

Function: Configure remote-id of the port, the no command cancels this configuration.

Parameter: <string>: remote-id, the max character number is 63 bytes.

Command Mode: Port mode

Default: This configuration is null.

Usage Guide: Configure remote-id for each port, if there is no configuration, use switch's MAC as remote-id value.

Example: Configure remote-id as abcd on port ethernet1/0/2.

```
Switch(config-if-ethernet1/0/2)# pppoe intermediate-agent remote-id abcd
```

13.8 pppoe intermediate-agent trust

Command: **pppoe intermediate-agent trust**
no pppoe intermediate-agent trust

Function: Configure the port as trust port, the no command configures the port as untrust port.

Parameter: None.

Command Mode: Port mode

Default: Untrust port.

Usage Guide: The port which connect to server must be configured as trust port. Note:
At least one trust port is connected to PPPoE server.

Example: Configure port ethernet1/0/1 as trust port.

```
Switch(config-if-ethernet1/0/1)#pppoe intermediate-agent trust
```

13.9 pppoe intermediate-agent type self-defined circuit-id

Command: pppoe intermediate-agent type self-defined circuit-id {vlan | port | id
(switch-id (mac | hostname) | remote-mac) | string WORD}

no pppoe intermediate-agent type self-defined circuit-id

Function: Configure the self-defined circuit-id, the no command cancels the configuration.

Parameter: vlan: VLAN ID

port: Port ID

id switch-id mac: the local MAC address

id switch-id hostname: the local host name

id remote-mac: the remote MAC address

string WORD: the specified keyword

Command Mode: Global mode

Default: This configuration is null.

Usage Guide: This configuration and type tr-101 circuit-id are mutually exclusive, it will clear the corresponding configuration of type tr-101 circuit-id.

Example: Configure the self-defined circuit-id as vlan port id switch-id hostname.

```
Switch(config)#pppoe intermediate-agent type self-defined circuit-id vlan port id switch-id  
hostname
```

13.10 pppoe intermediate-agent type self-defined remoteid

Command: pppoe intermediate-agent type self-defined remoteid {mac | vlan-mac |
hostname | string WORD}

no pppoe intermediate-agent type self-defined remote-id

Function: Configure the self-defined remote-id, the no command cancels the configuration.

Parameter: mac: Ethernet port MAC address

vlan-mac: IP interface MAC address

hostname: the local host name
string WORD: the specified keyword

Command Mode: Global mode

Default: This configuration is null.

Usage Guide: Configuration order of this command according to the fields order in remote-id.

Example: Configure the self-defined remote-id as string abcd mac hostname.

```
Switch(config)#pppoe intermediate-agent type self-defined remoteid string abcd mac
hostname
```

13.11 pppoe intermediate-agent type tr-101 circuit-id access-node-id

Command: pppoe intermediate-agent type tr-101 circuit-id access-node-id <string>
no pppoe intermediate-agent type tr-101 circuit-id access-node-id

Function: Configure access-node-id field value of circuit ID in the added vendor tag with tr-101 standard.

Parameter: <string>: access-node-id, the max character number is 47 bytes.

Command Mode: Global mode

Default: MAC address of the switch

Usage Guide: Use this configuration to create access-node-id of circuit ID in vendor tag. circuit-id value is access-node-id +" eth "+ Slot ID + delimiter + Port Index + delimiter + Vlan ID, access-node-id occupies n bytes (n<48), " eth " is space + e + t + h + space, it occupies 5 bytes, Slot ID occupies 2 bytes, Port Index occupies 3 bytes, Vlan ID occupies 4 bytes, delimiter occupies 1 byte. In default state, access-node-id value of circuit-id is switch's MAC, it occupies 6 bytes. For example: MAC address is "0a0b0c0d0e0f", Slot ID is 12, Port Index is 34, Vlan ID is 567, the default circuit-id value is "0a0b0c0d0e0f eth 12/034:0567".

Example: Configure access-node-id value of circuit ID as abcd in vendor tag.

```
Switch(config)#pppoe intermediate-agent access-node-id abcd
```

After port ethernet1/0/3 of vlan3 receives PPPoE packets, circuit-id value of the added vendor tag is "abcd eth 01/003:0003".

13.12 pppoe intermediate-agent type tr-101 circuit-id identifier-string option delimiter

Command: pppoe intermediate-agent type tr-101 circuit-id identifier-string <string>
option {sp | sv | pv | spv} delimiter <WORD> [delimiter <WORD>]

no pppoe intermediate-agent type tr-101 circuit-id identifier-string
option delimiter

Function: Configure circuit-id of the added vendor tag with tr-101 standard, the no command deletes this configuration.

Parameter: <string>: identifier-string, the max character number is 47 bytes.

{sp | sv | pv | spv}: This option can select the combination format for slot, port, vlan, sp means slot and port, sv means slot and vlan, pv means port and vlan, spv means slot, port and vlan.

<WORD>: The delimiter between slot, port and vlan, the range is (# | . | , | ; | : | / | space). Note: There are two delimiter WORDs in spv combo mode, the first between slot and port, the second between port and vlan.

Command Mode: Global mode

Default: This configuration is null.

Usage Guide: This command is used to configure global circuit id, the priority is higher than pppoe intermediate-agent access-node-id command. circuit-id value is access-node-id +" eth "+ Slot ID + delimiter + Port Index + delimiter + Vlan ID, access-node-id occupies n bytes (n<48), " eth " is space + e + t + h + space, it occupies 5 bytes, Slot ID occupies 2 bytes, Port Index occupies 3 bytes, Vlan ID occupies 4 bytes, delimiter occupies 1 byte.

Example: Configure access-node-id as xyz, use spv combination mode, delimiter with "#"between Slot ID and Port ID, delimiter with "/"between Port ID and Vlan ID.

```
Switch(config)#pppoe intermediate-agent identifier-string xyz option spv delimiter #  
delimiter /
```

```
Switch# show pppoe intermediate-agent identifier-string option delimiter  
config identifier string is : xyz  
config option is : slot , port and vlan  
the first delimiter is : "#"  
the second delimiter is : "/"
```

After port ethernet1/0/3 of vlan3 receives PPPoE packets, circuit-id value of the added vendor tag is "xyz eth 01#/003/0003".

13.13 pppoe intermediate-agent vendor-tag strip

Command: pppoe intermediate-agent vendor-tag strip

no pppoe intermediate-agent vendor-tag strip

Function: Enable vendor-tag strip function of the port, the no command cancels this function.

Parameter: None.

Command Mode: Port mode

Default: Disable vendor-tag strip function of the port.

Usage Guide: If the received packet includes vendor tag from server to client, strip this vendor tag.

Note: 1. Must enable global pppoe intermediate-agent function.

2. It must be configured on trust port.

Example: Trust port ethernet1/0/1 enables vendor tag strip function.

```
Switch(config-if-ethernet1/0/1)#pppoe intermediate-agent trust  
Switch(config-if-ethernet1/0/1)#pppoe intermediate-agent vendor-tag strip
```

13.14 show pppoe intermediate-agent access-node-id

Command: `show pppoe intermediate-agent access-node-id`

Function: Show the configured access node ID.

Parameter: None.

Command Mode: Admin mode

Default: The configuration information is null.

Usage Guide: This command is used to show access-node-id configured by user.

Example: Show access-node-id configuration information.

```
Switch#pppoe intermediate-agent access-node-id abcd
```

```
Switch#show pppoe intermediate-agent access-node-id
```

```
pppoe intermediate-agent access-node-id is : abcd
```

13.15 show pppoe intermediate-agent identifier-string

option delimiter

Command: `show pppoe intermediate-agent identifier-string option delimiter`

Function: Show the configured identifier-string, the combination format and delimiter of slot, port and vlan.

Parameter: None.

Command Mode: Admin mode

Default: The configuration information is null.

Usage Guide: Show the configured identifier-string, the combo format and delimiter of slot, port and vlan.

Example: Show the configuration information for pppoe intermediate-agent identifier-string.

```
Switch#pppoe intermediate-agent identifier-string abcd option spv delimiter # delimiter /
```

```
Switch# show pppoe intermediate-agent identifier-string option delimiter
```

```
config identifier string is : abcd
```

```
config option is : slot , port and vlan
```

```
the first delimiter is : "#"
```

```
the second delimiter is : "/"
```

13.16 show pppoe intermediate-agent info

Command: `show pppoe intermediate-agent info [interface ethernet <interface-name>]`

Function: Show the related PPPoE IA configuration information of all ports or the specified port.

Parameter: ehernet: physical port
 interface-name: port name

Command Mode: Admin mode

Default: The configuration information is null.

Usage Guide: Check the configuration information of the corresponding port, show whether the port is trust port, strip function is enabled, rate limit is enabled, show the configured circuit ID and remote ID.

Example: Show pppoe intermediate-agent configuration information of port ethernet1/0/2.

```
Switch# show pppoe intermediate-agent info interface ethernet 1/0/2
```

Interface IA Trusted vendor Strip Rate limit circuit id remote id

----- ----- ----- ----- ----- ----- ----- -----

Ethernet1/0/2 yes no no no test1/port1 host1

Chapter 14 Commands for Web Portal Authentication

14.1 Commands for Authentication Function

14.1.1 ac-name

Command: ac-name <word>

 no ac-name

Function: Configure the parameter of wlanacname in the redirect url. The no command deletes it.

Parameters: <word>, it is the value of wlanacname including 32 characters at most.

Command Mode: Captive Portal Instance Mode.

Default: None.

Usage Guide: This command is used to configure the parameter of wlanacname in the redirect url. Some portal servers can pass the authentication only with the specific wlanacname. So this command should be configured according to the requirement of the portal server.

Example: Configure the wlanacname in the redirect url as 0100.0010.010.00 according to the standard of the mobile portal server, and the format is ACN.CTY.PRO.OPE.

```
Switch (config-cp-instance)#ac-name 0100.0010.010.00
```

14.1.2 captive-portal

Command: captive-portal

Function: Use this command to enter Captive Portal configuration mode.

Parameters: None.

Default: None.

Command Mode: Global configuration mode.

Usage Guide: Use this command to enter Captive Portal configuration mode.

Example: Enter captive portal configuration mode for configuring.

```
Switch (config)#captive-portal
```

14.1.3 clear

Command: clear

Function: This command sets the configuration of the instance to be the default value.

Parameters: None.

Default: None.

Command Mode: Captive Portal Instance configuration mode.

Usage Guide: Set the configuration of the portal instance to be the default value.

Example: Set the configuration of the instance to be the default value.

```
Switch (config-cp-instance)# clear
```

14.1.4 configuration

Command: configuration <cp-id>

 no configuration <cp-id>

Function: Use this command to enter Captive Portal instance Mode. The no command will delete the Portal Captive instance configuration..

Parameters: <cp-id> is the number of Captive Portal instance, range is 1 to 10.

Default: None.

Command Mode: Captive Portal global configuration mode.

Usage Guide: This configuration is used to configure Captive Portal instance. Each instance represents a class of users, users under the same instance have the same flow and rate configuration, etc., and vice versa. No command will delete a captive portal configuration. If there is an interface associated with a instance, then the no command will be invalid.

Example: Set the ID parameter as 2.

```
Switch (config-cp)#configuration 2
```

14.1.5 debug captive-portal packet

Command: debug captive-portal packet {send|receive|dump|all}

 no debug captive-portal packet {send|receive|dump|all}

Function: Enable the packet debugging on-off of the captive portal authentication. The no command disables it.

Parameters: send: enables the debugging information of sending packet of captive portal;

receive: enables the debugging information of receiving packet of captive portal;

dump: enables the debugging information of dumping packet of captive portal;

all: enables the debugging information of sending, receiving and dumping packet of captive portal.

Command Mode: Admin Mode.

Default: Disable.

Usage Guide: This command is used to enable the packet debugging on-off of the captive portal authentication.

Example: Enable all the packets debugging information of the captive portal authentication.

```
Switch #debug captive-portal packet all
```

14.1.6 debug captive-portal trace

Command: `debug captive-portal trace`

`no debug captive-portal trace`

Function: Enable the tracing debugging of the captive portal authentication. The no command disables it.

Parameters: None.

Command Mode: Admin Mode.

Default: Disable.

Usage Guide: This command is used to enable the tracing debugging of the captive portal authentication.

Example: Enable the tracing debugging of the captive portal authentication.

Switch #`debug captive-portal trace`

14.1.7 debug captive-portal-cluster info

Command: `debug captive-portal-cluster info`

`no debug captive-portal-cluster info`

Function: Enable the roaming tracing debugging of the captive portal authentication. The no command disables it.

Parameters: None.

Command Mode: Admin Mode.

Default: Disable.

Usage Guide: This command is used to enable the roaming tracing debugging of the captive portal authentication.

Example: Enable the roaming tracing debugging of the captive portal authentication.

Switch #`debug captive-portal-cluster info`

14.1.8 debug captive-portal error

Command: `debug captive-portal error`

`no debug captive-portal error`

Function: Enable the error debugging of the captive portal authentication. The no command disables it.

Parameters: None.

Command Mode: Admin Mode.

Default: Disable.

Usage Guide: This command is used to enable the error debugging of the captive portal authentication.

Example: Enable the error debugging of the captive portal authentication.

Switch #`debug captive-portal error`

14.1.9 enable (global)

Command: **enable**

disable

Function: Use this command to enable the Captive Portal function of the controller globally, use disable function to disable the Captive Portal function of the controller globally.

Parameters: None.

Default: Disable.

Command Mode: Captive Portal global configuration mode.

Usage Guide: Use this command to enable global Captive Portal characteristics on the controller.

Example: Enable the global Captive Portal function on the controller.

```
switch(config-cp)#enable
```

14.1.10 enable (instance)

Command: **enable**

disable

Function: Enable Captive Portal configuration.

Parameters: None.

Default: Enable Captive Portal configuration.

Command Mode: Captive Portal Instance configuration mode.

Usage Guide: **disable** command will disable the captive-portal function, after disabling this command, the portal users will be forced offline.

Example: Enable captive-portal function.

```
switch(config-cp-instance)#enable
```

14.1.11 external portal-server server-name

Command: **external portal-server server-name <name> {ipv4 | ipv6} <ipaddr> [port <1-65535>]**

no external portal-server {ipv4 | ipv6}server-name <name>

Function: Configure the external portal server. Launch the redirect page through this server, after inputting the correct user name and password, the authentication is successful and the client can access the outside network.

Parameters: <name> is name of external portal server.

<ipaddr> is ip address of external portal server.

ipv4 the configured portal server address is ipv4 address.

ipv6 the configured portal server address is ipv6 address.

<1-65535> is number of portal server.

Default: None.

Command Mode: Captive Portal global configuration mode.

Usage Guide: Configure external portal servers, 10 can be configured at most. Each cp configuration can be bound to one portal server.

Example: Configure a external portal server.

```
Switch (config-cp)# external portal-server server-name x1 ipv4 1.0.0.1 port 11111
```

14.1.12 name

Command: name <cp-name>

 no name

Function: Define the name of Captive Portal configuration.

Parameters: <cp-name>, the name of Captive Portal configuration, 32 characters can be included at most and they can be numbers and letters.

Default: None.

Command Mode: Captive Portal Instance configuration mode.

Usage Guide: Define the name of Captive Portal configuration.

Example: Define the name of Captive Portal configuration as abc123.

```
switch(config-cp-instance)#name abc123
```

14.1.13 portal-server

Command: portal-server {ipv4 | ipv6} <name>

 no portal-server {ipv4 | ipv6}

Function: This command can bind specific external portal server for the CP configuration. Networks under this CP configuration all redirect authentication through this portal server.

Parameters: <name> binding Portal server name.

ipv4 the bond portal server address is ipv4 address.

ipv6 the bond portal server address is ipv6 address.

Default: None.

Command Mode: Captive Portal Instance configuration mode.

Usage Guide: Use this command to bind specific external portal server for the CP configuration; it can also unbind the specific external portal server.

Example: Bind specific external portal server for the CP configuration.

```
switch(config-cp -instance)#portal-server ipv4 x1
```

14.1.14 radius-auth-server

Command: radius-auth-server <server-name>

 no radius-auth-server

Function: Use this command to define the RADIUS authentication server of the Captive Portal configuration. The no command deletes the configuration.

Parameters: <server-name>, RADIUS authentication server name of Captive Portal configured.

Default: None.

Command Mode: Captive Portal Instance configuration mode.

Usage Guide: Define the RADIUS authentication server of the Captive Portal configuration.

Example: Define the RADIUS authentication server of the Captive Portal configuration as radius_aaa_1.

```
Switch (config-cp-instance)#radius-auth-server radius_aaa_1
```

14.1.15 redirect url-head

Command: redirect url-head <word>

no redirect url-head

Function: Configure the redirect url-head including transmission protocol, host name, port and path. The no command deletes it.

Parameters: <word>, It is the redirect url-head such as https://200.101.13.4:8080/index.jsp or http://www.portal.com/index.jsp. 128 characters can be input at most.

Command Mode: Captive Portal Instance Mode.

Default: None.

Usage Guide: This command is used to configure the redirect url-head including transmission protocol, host name, port and path. Configures according to the redirect url of the portal server. The transmission protocol, host name, port and path should be same for redirecting.

Example: Configure the redirect url-head as http://17.16.1.26/control.

```
Switch (config-cp-instance)#redirect url-head http://17.16.1.26/control
```

14.1.16 redirect attribute ssid enable

Command: redirect attribute ssid enable

no redirect attribute ssid enable

Function: Configure the redirect url to carry the parameter of ssid. The no command disables this function.

Parameters: None.

Command Mode: Captive Portal Instance Mode.

Default: Disable.

Usage Guide: This command is used to configure the redirect url to carry the parameter of ssid. After enabled this command, the redirect url will carry the ssid associated with client when the client conducts the redirection.

Example: Configure the redirect url to carry the parameter of ssid.

```
Switch(config-cp-instance)#redirect attribute ssid enable
```

14.1.17 redirect attribute ssid name

Command: redirect attribute ssid name <word>**no redirect attribute ssid name**

Function: Configure the name of the parameter of ssid carried in the redirect url. The no command recovers it to be the default value.

Parameters: <word>, it is the ssid name including 32 characters at most.

Command Mode: Captive Portal Instance Mode.

Default: ssid.

Usage Guide: This command is used to configure the name of the parameter of ssid carried in the redirect url.

Example: Configure the name of the parameter of ssid carried in the redirect url as wlanssid.

```
Switch(config-cp-instance)#redirect attribute ssid name wlanssid
```

14.1.18 redirect attribute nas-ip enable

Command: redirect attribute nas-ip enable**no redirect attribute nas-ip enable**

Function: Configure the redirect url to carry the parameter of nas-ip. The no command disables this function.

Parameters: None.

Command Mode: Captive Portal Instance Mode.

Default: Disable.

Usage Guide: This command is used to configure the redirect url to carry the parameter of nas-ip. After enabled this command, the redirect url will carry the wireless IP address of AC associated with client when the client conducts the redirection.

Example: Configure the redirect url to carry the parameter of nas-ip.

```
Switch(config-cp-instance)#redirect attribute nas-ip enable
```

14.1.19 redirect attribute nas-ip name

Command: redirect attribute nas-ip name <word>**no redirect attribute nas-ip name**

Function: Configure the name of the parameter of nas-ip carried in the redirect url. The no command recovers it to be the default value.

Parameters: <word>, it is the nas-ip name including 32 characters at most.

Command Mode: Captive Portal Instance Mode.

Default: wlanacname.

Usage Guide: This command is used to configure the name of the parameter of nas-ip carried in the redirect url.

Example: Configure the name of the parameter of nas-ip carried in the redirect url as wlannasip.

```
Switch(config-cp-instance)#redirect attribute nas-ip name wlannasip
```

14.1.20 interface ethernet vlan

Command: `interface ethernet <interface-list> vlan <vlan-id> { remove | add }`

`no interface ethernet <interface-list>`

Function: Enable the web portal authentication function of the port and the vlan of the port which is proceeding the web portal authentication. The no command disables this function.

Parameters: `<interface-list>` is the port number; `<vlan-id>` is the vlan id; `remove` is to delete the vlan of the authentication port; `add` is to add the vlan of the authentication port.

Command Mode: Captive Portal Instance Mode.

Default: None.

Usage Guide: This command is used to enable/disable the web portal authentication function of the port, it supports multiple vlan of web portal authentication.

Example: Enable the web portal function of vlan 10 of interface ethernet 1/0/1.

```
Switch (config-cp-instance)# interface ethernet 1/0/1 vlan 10
```

14.1.21 show captive-portal

Command: `show captive-portal`

Function: Shows the characteristics status of the Captive Portal.

Parameters: None.

Default: None.

Command Mode: Admin mode

Usage Guide: Show the relevant state parameters of the captive portal function on this AC.

Example: Show Captive Portal status of enable and disable.

captive portal enable:

```
Switch #show captive-portal
```

Administrative Mode..... Enable

Operational Status..... Enabled

CP IP Address..... 192.168.1.1

CP IPv6 Address..... ::

captive portal disable:

```
Switch #show captive-portal
```

Administrative Mode..... Disable

Operational Status..... Disabled

Disable Reason..... Administrator Disabled

CP IP Address..... 0.0.0.0

CP IPv6 Address..... ::

14.1.22 show captive-portal status

Command: `show captive-portal status`

Function: Shows the status of all the Captive Portal instance in the system.

Parameters: None.

Default: None.

Command Mode: Admin mode

Usage Guide: This command shows the captive portal configuration and the supported property parameters on this AC.

Example: Show the Captive Portal status of the controller.

Switch #show captive-portal status

Peer Switch Statistics Reporting Interval..... 120

Authentication Type..... External

Authentication Mode..... Chap

Supported Captive Portals..... 2

Configured Captive Portals..... 1

Active Captive Portals..... 0

Local Supported Users..... 128

Configured Local Users..... 0

System Supported Users..... 385

Authenticated Users..... 0

14.1.23 show captive-portal configuration

Command: show captive-portal configuration <cp-id>

Function: Show the status of Captive Portal configuration.

Parameters: <cp-id> is the ID number of captive portal, range is 1 to 10.

Default: None.

Command Mode: Admin mode

Usage Guide: Show the configured parameters of portal instance.

Example: Show the configured situation of captive portal1.

Switch #show captive-portal configuration 1

CP ID..... 1

CP Name..... Default

Operational Status..... Enabled

Block Status..... Not Blocked

Configured Locales..... 1

Authenticated Users..... 0

14.1.24 show captive-portal configuration interface

Command: show captive-portal configuration <cp-id> interface ws-network <id>

Function: Shows all the interface information assigned to the captive portal configuration.

Parameters: <cp-id>, ID number of cp; <id> is the ID number of network binding to captive portal instance; <cp-id> shows the content of a instance, <id> shows the content

of a network.

Default: None.

Command Mode: Admin mode

Usage Guide: Shows the interface state of the a portal instance.

Example: Shows all the interface information of Captive Portal configuration.

Switch #show captive-portal configuration 1 interface ethernet 1/0/1

CP ID..... 1

CP Name..... Default

Interface..... 1

Interface Description..... 1/0/1

Operational Status..... Enabled

Block Status..... Not Blocked

Authenticated Users..... 0

14.1.25 show captive-portal configuration status

Command: **show captive-portal configuration [<cp-id>] status**

Function: Shows the configuration information of all or specific Captive Portal.

Parameters: <cp-id>, ID number of cp, the parameter <cp-id> means the content of a instance, without the parameter to show all the current configured instance parameters.

Default: None.

Command Mode: Admin mode

Usage Guide: Show detailed configuration parameters of portal instance.

Example: Show all Captive Portal configuration information.

Show the status of all the instances:

Switch # show captive-portal configuration status

| CP ID | CP Name | Mode | Protocol | Verification |
|-------|---------|-------|----------|--------------|
| ----- | ----- | ----- | ----- | ----- |

| | | | | |
|---|---------|--------|------|--------|
| 1 | Default | Enable | HTTP | RADIUS |
|---|---------|--------|------|--------|

| | | | | |
|---|---------|--------|------|--------|
| 2 | Default | Enable | HTTP | RADIUS |
|---|---------|--------|------|--------|

14.1.26 show captive-portal client status

Command: **show captive-portal client [<FF-FF-FF-FF-FF-FF> {ipv4 | ipv6 }status**

Function: This command shows detailed connection information or an overview of users connected to the captive portal.

Parameters: <FF-FF-FF-FF-FF-FF> is the MAC address of the user.

Default: None.

Command Mode: Admin mode

Usage Guide: This command shows the status of all or a portal user.

Example: Show detailed information of the user connected to the captive portal with MAC address as 34-08-04-30-07-ca.

show captive-portal client 00-24-8c-01-09-81 ipv4 192.168.1.2 status

Client MAC Address..... 34-08-04-30-07-ca
 Client IP Address..... 192.168.1.2
 Protocol Mode..... HTTPS
 Verification Mode..... RADIUS
 CP ID..... 2
 CP Name..... Default
 Interface..... 2
 Interface Description..... 1/0/2
 User Name..... test00004
 Session Time..... 0d:00:03:22
 Switch MAC Address.....
 Switch IP Address..... 173.17.9.99
 Switch Type..... Local
 Session Timeout..... 172800000
 Idle Timeout..... 59940
 RADIUS Accounting Update Interval (seconds).... 210

14.1.27 show captive-portal configuration client

Command: `show captive-portal configuration [<cp-id> | client | status] client status`

Function: This command shows the client information through the portal authentication in an interface.

Parameters: <cp-id>, ID number of Captive Portal.

Default: None.

Command Mode: Admin mode

Usage Guide: This command shows the user parameters of a portal instance.

Example: Show all the portal configuration information of the client passed authentication.

Switch #show captive-portal configuration 1 client status

CP ID..... 1

CP Name..... Default

| Client | Client | | |
|-------------------|-------------|-----------|-----------------------|
| MAC Address | IP Address | Interface | Interface Description |
| 34-08-04-30-07-ca | 192.168.1.2 | 1 | 1/0/1 |

14.1.28 show captive-portal ext-portal-server status

Command: `show captive-portal ext-portal-server status`

Function: Use this command to check the status of the external portal server.

Parameters: None.

Default: None.

Command Mode: Admin mode.

Usage Guide: Check the status of the external portal server.

Example: Check the status of the external portal server.

Switch #show captive-portal ext-portal-server status

| Server Name | Server IP Address | port | SocketNo |
|-------------|-------------------|------|----------|
| dcn | 192.168.1.10 | 7749 | 0 |

14.1.29 show captive-portal interface configuration status

Command: show captive-portal interface configuration [<cp-id>] status

Function: This command shows the interface information of all captive portal configurations or a specific configuration.

Parameters: <cp-id>, captive portal ID.

Default: None.

Command Mode: Admin mode

Usage Guide: This command shows the binding relationship of all or a portal instance with interface.

Example: Show the interface information of all captive portal configurations.

Switch #show captive-portal interface configuration status

| CP ID..... | 1 | |
|--------------|-----------------------|----------|
| CP Name..... | Default | |
| Interface | Interface Description | Type |
| 1 | 1/0/1 | Physical |

14.2 Commands for Accounting Function

14.2.1 captive-portal client deauthenticate

Command: captive-portal client deauthenticate {<1-2> | <FF-FF-FF-FF-FF-FF> { ipv4 | ipv6 } <ip-addr>}

Function: Use this command to disassociate with the specified Captive Portal Client.

Parameters: <1-2> Captive Portal ID.

<FF-FF-FF-FF-FF-FF> MAC address of the Client.

ipv4: user address is ipv4 address.

ipv6: user address is ipv6 address.

<*ip-addr*> is user address. Ipv4 address is decimal format with point and ipv6 address is the format of X:X::X:X.

Default: None.

Command Mode: Admin mode

Usage Guide: Use this command to disassociate with the client of the appointed MAC address; it can also remove all or a single user in the specified captive portal configuration; with no parameters, remove all users.

Example: Disassociate with the specified Captive Portal Client.

Switch #captive-portal client deauthenticate (Force the portal user offline on the controller)

The specified clients will be deauthenticated. Are you sure you want to deauthenticated clients? [Y/N]

Switch #captive-portal client deauthenticate 1 (Force the user offline on the instance 1)

Switch #captive-portal client deauthenticate 34-08-04-30-07-ca (Force a user offline)

14.2.2 radius accounting

Command: radius accounting

 no radius accounting

Function: Use this command to enable the accounting function of Captive Portal instance. the no command will disable the function.

Parameters: None.

Default: Disable the function of Captive Portal accounting.

Command Mode: Captive Portal Instance configuration mode.

Usage Guide: Configure Captive Portal accounting function.

Example: Enable the accounting function of a Captive Portal instance.

Switch (config-cp-instance)#radius accounting

14.2.3 radius-accounting update interval

Command: radius-accounting update interval <60-3600>

 no radius-accounting update interval

Function: Configure the accounting updating interval of portal user of AC sent to the radius. the no command will restore the default value.

Parameters: <60-3600> is interval, unit is second.

Default: 300s.

Command Mode: Captive Portal Instance configuration mode.

Usage Guide: Configure the accounting updating interval of Captive Portal.

Example: Configure the accounting updating interval of portal user of AC sent to the radius as 60s.

Switch (config-cp-instance)# radius-accounting update interval 60

14.2.4 radius-acct-server

Command: radius-acct-server <server-name>

 no radius-acct-server

Function: Defines the RADIUS accounting server name of the Captive Portal configuration. The no command will delete the configuration.

Parameters: <server-name>, RADIUS accounting server name.

Default: None.

Command Mode: Captive Portal Instance configuration mode.

Usage Guide: Define the RADIUS accounting server of Captive Portal configuration.

Example: Define the RADIUS accounting server of Captive Portal configuration as radius_aaa_1.

```
Switch (config-cp-instance)#radius-acct-server radius_aaa_1
```

14.2.5 session-timeout

Command: session-timeout <0-86400>

no session-timeout

Function: Define session timeout of Captive Portal configuration. The no command will disable this function.

Parameters: <0-86400>, Session timeout, unit is second, 0 means Timeout Function is not effective.

Default: 86400.

Command Mode: Captive Portal Instance configuration mode.

Usage Guide: Define session timeout of Captive Portal configuration.

Example: Define session timeout of Captive Portal configuration as 100s.

```
Switch (config-cp-instance)# session-timeout 100
```

14.3 Commands for Free-resource

14.3.1 free-resource(global)

Command: free-resource <free-resource-id> destination { any | ipv4 } <ip-addr><netmask> [{source}]{ any | ipv4 }

no free-resource { all|<free-resource-id> }

Function: Configure the free-resource rules, the client who conforms the source IP address in rules can access the resources of the destination IP address in rules, the switch does not redirect, the client can access directly without Portal authentication.

Parameters: **free-resource-id:** the range is 1-32; it supports 32 free-resources.

ipv4: the configured free resource address is ipv4 address.

<ip-addr>: free-resource rules interviewees'/visitors' IP addresses.

<netmask>: free-resource rules interviewees'/visitors' IP addresses.

Default: None.

Command Mode: Captive Portal Global configuration mode.

Usage Guide: Configure the client address field (visitor) which can be free to access the resources and the address field which is free to provide the resource (interviewee).

Example: Set free-resource rules.

```
Switch (config-cp)# free-resource 1 destination ipv4 1.1.1.1/24
```

14.3.2 free-resource(instance)

Command: `free-resource <free-resource-id>`

`no free-resource <free-resource-id>`

Function: This command is used to configure the instance to bind to the free-resource rule. It can connect to the port enabled web portal, and the client with the source IP address in the rule can access the resource in this IP address field. The switch does not redirect, the client can access without portal authentication.

Parameters: `free-resource-id`: the range is 1-32; it supports 32 free-resources.

`ipv4`: the configured free resource address is ipv4 address.

`<ip-addr>`: free-resource rules interviewees'/visitors' IP addresses.

`<netmask>`: free-resource rules interviewees'/visitors' IP addresses.

Default: None.

Command Mode: Captive Portal Global configuration mode.

Usage Guide: Configure the client address field (visitor) which can be free to access the resources and the address field which is free to provide the resource (interviewee).

Example: Set free-resource rules.

```
Switch(config-cp-instance)# free-resource 1
```

14.4 Commands for Automatic Page Pushing after Successful Authentication

14.4.1 redirect attribute url-after-login enable

Command: `redirect attribute url-after-login enable`

`no redirect attribute url-after-login enable`

Function: Enable the function that the redirect url carries the pushed url after the successful authentication. The no command disables this function.

Parameters: None.

Command Mode: Captive Portal Instance Mode.

Default: Disable.

Usage Guide: This command is used to enable the function that the redirect url carries the pushed url after the successful authentication. After enabled this command, the redirect url pushed by AC will carry the url which needs to be pushed after the successful authentication. At the same time, when the `<url-value>` of redirect attribute url-after-login value is configured as empty, the carried url is the page url that the user access before the authentication. If it is not empty, the carried url is the page url configured by `<url-value>`.

Example: Enable the function that the redirect url carries the pushed url after the successful authentication.

Switch (config-cp-instance)#redirect attribute url-after-login enable

14.4.2 redirect attribute url-after-login name

Command: redirect attribute url-after-login name <name>

no redirect attribute url-after-login name

Function: Configure the attribute name of the pushed url after the successful authentication which is carried in the redirect url. The no command recovers it to be the default value.

Parameters: <name>, it is the attribute name including 32 characters at most.

Command Mode: Captive Portal Instance Mode.

Default: The default name is srcurl.

Usage Guide: This command is used to configure the attribute name of the pushed url after the successful authentication which is carried in the redirect url.

Example: Configure the attribute name of the pushed url after the successful authentication which is carried in the redirect url as redirect.

Switch (config-cp-instance)#redirect attribute url-after-login name redirect

14.4.3 redirect attribute url-after-login encode

Command: redirect attribute url-after-login encode {plain-text|base64}

Function: Configure the encode of the pushed url after the successful authentication which is carried in the redirect url.

Parameters: plain-text, it is the plain-text;
base64, it is the base64 encode.

Command Mode: Captive Portal Instance Mode.

Default: The default encode is plain-text.

Usage Guide: This command is used to configure the encode of the pushed url after the successful authentication which is carried in the redirect url. It can be configured according to the encode supported by the portal server.

Example: Configure the encode of the pushed url after the successful authentication which is carried in the redirect url as base64.

Switch (config-cp-instance)#redirect attribute url-after-login encode base64

14.4.4 redirect attribute url-after-login value

Command: redirect attribute url-after-login value <url-value>

no redirect attribute url-after-login value

Function: Configure the appointed url which is popped up after the success authentication. The no command deletes it.

Parameters: <url-value>, it is the configured appointed url including 512 characters at

most.

Command Mode: Captive Portal Instance Mode.

Default: None.

Usage Guide: This command is used to configure the appointed url which is popped up after the success authentication. If enable the function that the redirect url carries the pushed url after the successful authentication, the redirect url will carry the url with the <url-value>.

Example: Configure the appointed url which is popped up after the success authentication as http://www.test.com.

```
Switch (config-cp-instance)#redirect attribute url-after-login value http://www.test.com
```

Chapter 15 Commands for VLAN-ACL

15.1 clear vacl statistic vlan

Command: `clear vacl [in | out] statistic vlan [<1-4094>]`

Function: This command can clear the statistic information of VACL.

Parameter: `in | out`: Clear the traffic statistic of the ingress/egress.

`vlan <1-4094>`: The VLAN which needs to clear the VACL statistic information. If do not input VLAN ID, then clear all VLAN statistic information.

Command mode: Admin Mode.

Default: None.

Usage Guide: Egress direction filtering is not supported by switch.

Example:

Clear VACL statistic information of Vlan1.

Switch#`clear vacl statistic vlan 1`

15.2 show vacl vlan

Command: `show vacl [in | out] vlan [<1-4094>] | [begin | include | exclude <regular-expression>]`

Function: This command shows the configuration and the statistic information of VACL.

Parameter: `in | out`: Show ingress/egress configuration and statistic

`vlan <1-4094>`: The VLAN which needs to show the configuration and the statistic information of VACL. If do not input VLAN ID, then show VACL configuration and statistic information of all VLANs.

`begin | include | exclude <regular-expression>`: the regular expression

- . match any characters except the line feed character

- ^ match the beginning of the row

- \$ match the end of the row

- | match the character string at the left or right of upright line

- [0-9] match the number 0 to the number 9

- [a-z] match the lowercase a to z

- [aeiou] match any letter in “aeiou”

- \ Escape Character is used to match the intervocalic character, for example, \\$ will match the \$ character, but it is not match the end of the character string

- \w match the letter, the number or the underline

- \b match the beginning or the end of the words

- \W match any characters which are not alphabet letter, number and underline

- \B match the locations which are not the begin or end of the word

[^x] match any characters except x
 [^aeiou] match any characters except including aeiou letters
 * repeat zero time or many times
 + repeat one time or many times
 (n) repeat n times
 (n,) repeat n or more times
 (n, m) repeat n to m times

At present, the regular expression used does not support the following syntaxes:

\s match the blank character
 \d match the number
 \S match any characters except blank character
 \D match non-number character
 ? repeat zero time or one time

Command mode: Admin Mode.

Default: None.

Usage Guide: Egress direction filtering is not supported by switch.

Example:

Switch (config)#show vACL vlan 2

Vlan 2:

IP Ingress access-list used is 100, traffic-statistics Disable.

Switch (config)# show vACL vlan 3

Vlan 3:

IP Ingress access-list used is myacl, packet(s) number is 5.

| Displayed Information | Explanation |
|----------------------------|--|
| Vlan 2 | The name of VLAN |
| 100, myacl | The name of VACL |
| traffic-statistics Disable | Disable VACL statistic function |
| packet(s) number is 5 | The sum of out-profile data packets matching this VACL |

15.3 vACL ip access-group

Command: vACL ip access-group {<1-299> | WORD} {in | out} [traffic-statistic] vlan WORD

no vACL ip access-group {<1-299> | WORD} {in | out} vlan WORD

Function: This command configures VACL of IP type on the specific VLAN.

Parameter: <1-299> | WORD: Configure the numeric IP ACL (including standard ACL rule <1-99>, extended ACL rule <100-299>) or the named ACL.

in | out: Filter the ingress/egress traffic.

traffic-statistic: Enable the statistic of matched packets number.

vlan WORD: The VLAN will be bound to VACL.

Command mode: Global Mode.

Default: None.

Usage Guide: Use “;” or “-” to input the VLAN or multi-VLANs, but do not exceed 128, and CLI length can not exceed 80 characters. Egress direction filtering is not supported by switch.

Example: Configure the numeric IP ACL and enable the statistic function for Vlan 1-5, 6, 7-9.

```
Switch(config)#vaci ip access-group 1 in traffic-statistic vlan 1-5; 6; 7-9
```

15.4 vaci ipv6 access-group

Command: **vaci ipv6 access-group {<500-699> | WORD} {in } [traffic-statistic] vlan WORD**

no vaci ipv6 access-group {<500-699> | WORD} {in } vlan WORD

Function: This command configure VACL of IPv6 on the specific VLAN.

Parameter: <500-599> | WORD: Configure the IPv6 digital standard access table rule or IPv6 command standard access table rule.

in : Filter the ingress traffic.

traffic-statistic: Enable the statistic of matched packets number.

vlan WORD: The VLAN will be bound to VACL.

Command mode: Global Mode.

Default: None.

Usage Guide: Use “;” or “-” to input the VLAN or multi-VLANs, but do not exceed 128, and CLI length cannot exceed 80 characters. Egress direction filtering and extended IPv6 is not supported by switch.

Example: Configure the numeric IPv6 ACL for Vlan 5.

```
Switch(config)#vaci ipv6 access-group 600 in traffic-statistic vlan 5
```

15.5 vaci mac access-group

Command: **vaci mac access-group {<700-1199> | WORD} {in } [traffic-statistic] vlan WORD**

no vaci mac access-group {<700-1199> | WORD} {in } vlan WORD

Function: This command configure VACL of MAC type on the specific VLAN.

Parameter: <700-1199> | WORD: Configure the numeric IP ACL (include: <700-799> MAC standard access list, <1100-1199> MAC extended access list) or the named ACL.

in : Filter the ingress traffic.

traffic-statistic: Enable the statistic of matched packets number.

vlan WORD: The VLAN will be bound to VACL.

Command mode: Global Mode.

Default: None.

Usage Guide: Use “;” or “-” to input the VLAN or multi-VLANs, but do not exceed 128,

and CLI length cannot exceed 80 characters. Egress direction filtering is not supported by switch.

Example: Configure the numeric MAC ACL for Vlan 1-5.

```
Switch(config)#vaci mac access-group 700 in traffic-statistic vlan 1-5
```

15.6 vaci mac-ip access-group

Command: vaci mac-ip access-group {<3100-3299> | WORD} {in } [traffic-statistic] vlan WORD

no vaci mac-ip access-group {<3100-3299> | WORD} {in } vlan WORD

Function: This command configure VACL of MAC-IP type on the specific VLAN.

Parameter: <3100-3299> | WORD: Configure the numeric MAC-IP ACL or the named ACL.

in : Filter the ingress traffic.

traffic-statistic: Enable the statistic of matched packets number.

vlan WORD: The VLAN will be bound to VACL.

Command mode: Global Mode.

Default: None.

Usage Guide: Use “.” or “-” to input the VLAN or multi-VLANs, but do not exceed 128, and CLI length cannot exceed 80 characters. Egress direction filtering is not supported by switch.

Example: Configure the numeric MAC-IP ACL for Vlan 1, 2, 5.

```
Switch(config)#vaci mac-ip access-group 3100 in traffic-statistic vlan 1;2;5
```

Chapter 16 Commands for SAVI

16.1 Commands for SAVI

16.1.1 ipv6 cps prefix

Command: `ipv6 cps prefix <ipv6-address> vlan <vid>`

`no ipv6 cps prefix<ipv6-address>`

Function: Configure IPv6 address prefix of the link manually, no command deletes IPv6 address prefix.

Parameter: `ipv6-address`: the address prefix of link, like 2001::/64;

`vid`: vlan ID of the current link.

Command Mode: Global Mode.

Default: None.

Usage Guide: Users should configure local address prefix: fe80::/64 of the link before enable the function of matching address prefix of the link, it accepts the packets of which source addresses are the local addresses of the link.

Example: Configure the address prefix of the link to 2001::/64.

Switch(config)#`ipv6 cps prefix 2001::/64`

16.1.2 ipv6 cps prefix check enable

Command: `ipv6 cps prefix check enable`

`no ipv6 cps prefix check enable`

Function: Enable SAVI address prefix check function, no command will disable this function.

Parameter: None.

Command Mode: Global Mode.

Default: Disable SAVI address prefix check function.

Usage Guide: After enable the prefix check function, if the IPv6 address prefix of the packets does not accord with the link prefix, then do not establish the corresponding IPv6 address binding. If users enable the matched address prefix of the link, configure the local address prefix of fe80::/64 first to accept the packets with the source address as local link address. Disable address prefix check function by default.

Example: Enable SAVI address prefix check function.

Switch(config)#`ipv6 cps prefix check enable`

16.1.3 ipv6 dhcp snooping trust

Command: `ipv6 dhcp snooping trust`

no ipv6 dhcp snooping trust

Function: Configure the port as dhcpcv6 trust port, it does not establish dynamic DHCPv6 binding again and allows all DHCPv6 protocol packets to pass; no command deletes the port trust function.

Parameter: None.

Command Mode: Port Mode.

Default: Disable.

Usage Guide: Set the port as dhcpcv6 trust attribute, enable uplink port of the switch with SAVI function for connecting dhcpcv6 server or dhcpcv6 relay generally.

Example: Set ethernet1/0/1 to be DHCP trust port.

```
Switch(config)#interface ethernet1/0/1
```

```
Switch(config-if-etherne1/0/1)#ipv6 dhcp snooping trust
```

16.1.4 ipv6 nd snooping trust

Command: **ipv6 nd snooping trust**

no ipv6 nd snooping trust

Function: Configure the port as slaac trust and RA trust port, this port will not establish dynamic slaac binding any more and forwards RA packets. The no command deletes the port trust function.

Parameter: None.

Command Mode: Port Mode.

Default: Disable port trust function.

Usage Guide: If the port disables ipv6 nd snooping trust function, it is considered to untrust RA packets port and discards all RA packets. Setting the port as trust attribute, enable the uplink port of the switch with SAVI or the conjoint port between switches with SAVI generally.

Example: Set the port ethernet1/0/1 to be nd trust port.

```
Switch(config)#interface ethernet1/0/1
```

```
Switch(config-if-etherne1/0/1)#ipv6 nd snooping trust
```

16.1.5 savi check binding

Command: **savi check binding <simple | probe> mode**

no savi check binding mode

Function: Configure the check mode for conflict binding, the no command deletes the check mode.

Parameter: **simple mode:** only check the port state for conflict binding, if the state is up, keep the conflict binding and do not set new binding. If the state is down, delete the conflict binding to set a new one

probe mode: besides checking the port state for conflict binding, it will send NS packets to probe the usability of the corresponding user when the port state is up. If receiving the responded NA packets from users, it will keep the current conflict binding

and does not set new binding, otherwise delete the conflict binding to set new one.

Command Mode: Global Mode.

Default: Disable the conflict binding check mode by default. It will adopt the mode that delete the conflict binding directly to set new one.

Usage Guide: It is recommended to configure probe mode to prevent the attack that the spurious address conflict binding deletes the legal user binding.

Example: Configure the conflict binding check mode to probe mode.

```
Switch(config)#savi check binding probe mode
```

16.1.6 savi enable

Command: **savi enable**

no savi enable

Function: Enable the global SAVI function, the no command disables this global function.

Parameter: None.

Command Mode: Global Mode.

Default: Disable the global SAVI function.

Usage Guide: Command configuration can be processed for SAVI function after enabling the global SAVI function. Because SAVI function has already contained security RA function, global SAVI function and security RA function are mutually exclusive in the global mode.

Example: Enable SAVI function.

```
Switch(config)#savi enable
```

16.1.7 savi ipv6 binding num

Command: **savi ipv6 binding num <limit-num>**

no savi ipv6 binding num

Function: Configure the number of the corresponding binding with the port, no command restores the default value.

Parameter: **limit-num:** set the range from 0 to 65535, the default value of the port binding number is 65535.

Command Mode: Port Mode.

Default: 65535.

Usage Guide: The configured binding number only include the dynamic binding type of slaac, dhcp. If the binding sum exceeds the configured number, this port does not create new dynamic binding any more, if the configured number is 0, this port does not create any dynamic binding.

Example: Configure the binding number to be 100 for port ethernet1/0/1.

```
Switch(config)#interface ethernet1/0/1
```

```
Switch(config-if-ethernet1/0/1)# savi ipv6 binding num 100
```

16.1.8 savi ipv6 check source binding

Command: `savi ipv6 check source binding ip <ip-address> mac <mac-address> interface <if-name> {type [slaac | dhcp] lifetime <lifetime> | type static}`

no `savi ipv6 check source binding ip <ip-address> interface <if-name>`

Function: Configure the static or dynamic binding function manually; the no command deletes the configured binding.

Parameter: **ip-address**: is the unicast IPv6 address, including local link and global unicast address

mac-address: is the mac address of Ethernet

if-name: is the port name, like interface ethernet 1/0/1

slaac|dhcp: **slaac** means create the dynamic binding for slaac type, **dhcp** means create the dynamic binding for dhcp type

lifetime: configure the lifetime period for the dynamic binding, the unit is second.

static: create the binding of the static type.

Command Mode: Global Mode.

Default: None.

Usage Guide: After the dynamic binding configured by handwork is overtime, the corresponding binding will be deleted but the configuration is still be kept, so the binding still be shown. If the binding needs to take effect again, it should delete it first and configure a new binding again.

When the binding type is static type, do not configure lifetime period, the lifetime period is infinite.

Example: Configure the dynamic binding of slaac type for SAVI manually.

```
Switch(config)#savi ipv6 check source binding ip 2001::10 mac 00-25-64-BB-8F-04
Interface ethernet1/0/1 type slaac lifetime 2010
```

Configure the static binding for SAVI manually.

```
Switch(config)#savi ipv6 check source binding ip 2001::20 mac 00-25-64-BB-8F-04
Interface ethernet1/0/1 type static
```

16.1.9 savi ipv6 check source ip-address mac-address

Command: `savi ipv6 check source [ip-address mac-address | ip-address | mac-address]`

no `savi ipv6 check source`

Function: Enable the control authentication function for the packets of the port, no command disables this function.

Parameter: None.

Command Mode: Port Mode.

Default: Disable the control filtering function of the port.

Usage Guide: The global SAVI function must be enabled before configuring this

command.

Example: Enable the control filtering function of the packets on port ethernet1/0/1.

```
Switch(config)#interface ethernet1/0/1
```

```
Switch(config-if-ethernet1/0/1)# savi ipv6 check source ip-address mac-address
```

16.1.10 savi ipv6 {dhcp-only | slaac-only | dhcp-slaac}

enable

Command: `savi ipv6 {dhcp-only | slaac-only | dhcp-slaac} enable`

`no savi ipv6 {dhcp-only | slaac-only | dhcp-slaac} enable`

Function: Enable SAVI application scene function, no command disables the function.

Parameter: **dhcp-only:** dhcp-only application scene

slaac-only: slaac-only application scene

dhcp-slaac: combination application scene of dhcp-only and slaac-only

Command Mode: Global Mode.

Default: Disable SAVI application scene.

Usage Guide: dhcp-only application scene only detects DHCPv6 packets and DAD NS packets of link-local ipv6 address to be IPv6 address with target field, it does not detect DAD NS packets of non-link-local address. slaac-only application scene detects DAD NS packets of all types. dhcp-slaac combination application scene detects all DHCPv6 and DAD NS packets. Disable all kinds of application scene detection function for SAVI by default.

Example: Enable the specified dhcp-only application scene for SAVI.

```
Switch(config)#savi ipv6 dhcp-only enable
```

16.1.11 savi ipv6 mac-binding-limit

Command: `savi ipv6 mac-binding-limit <limit-num>`

`no savi ipv6 mac-binding-limit`

Function: Configure the dynamic binding number of the same MAC address, no command restores the default value.

Parameter: **limit-num:** set the ranging from 1 to 10, the default dynamic binding number is 32 for the same MAC address.

Command Mode: Global Mode.

Default: 32.

Usage Guide: This command is used to prevent the exhaust attack of the dynamic binding entry for SAVI.

Example: Set the dynamic binding number to be 5 for the same MAC address.

```
Switch(config)#isavi ipv6 mac-binding-limit 5
```

16.1.12 savi max-dad-delay

Command: savi max-dad-delay <max-dad-delay>**no savi max-dad-delay**

Function: Configure the dynamic binding at DETECTION state and send lifetime period of DAD NS packet detection, no command restores the default value.

Parameter: **max-dad-delay:** set the ranging between 1 and 65535 seconds, its default value is 1 second.

Command Mode: Port Mode.

Default: 1 second.

Usage Guide: It is recommended to use the default value.

Example: Set the detection lifetime as 2 seconds.

```
Switch(config)#savi max-dad-delay 2
```

16.1.13 savi max-dad-prepare-delay

Command: savi max-dad-prepare-delay <max-dad-prepare-delay>**no savi max-dad-prepare-delay**

Function: Configure lifetime period of redetection for the dynamic binding, no command restores the default value.

Parameter: **max-dad-prepare-delay:** set the ranging between 1 and 65535 seconds, its default value is 1 second.

Command Mode: Global Mode.

Default: 1 second.

Usage Guide: It is recommended to user the default value.

Example: Set the redetection lifetime as 2 seconds.

```
Switch(config)#savi max-dad-prepare-delay 2
```

16.1.14 savi max-slaac-life

Command: savi max-slaac-life <max-slaac-life>**no savi max-slaac-life**

Function: Configure lifetime period of slaac dynamic binding at BOUND state, no command restores the default value.

Parameter: **max-slaac-life:** set the ranging between 1 and 31536000 seconds, its default value is 4 hours.

Command Mode: Global Mode.

Default: 4 hours.

Usage Guide: None.

Example: Configure lifetime period of slaac binding type as 2010 seconds at BOUND state.

```
Switch(config)#savi max-slaac-life 2010
```

16.1.15 savi timeout bind-protect

Command: savi timeout bind-protect <protect-time>

no savi timeout bind-protect

Function: Configure the bind-protect lifetime period for a port after its state from up to down, no command restores the default value.

Parameter: **protect-time:** set the ranging between 1 and 300 seconds, its default value is 30 seconds.

Command Mode: Global Mode.

Default: 30 seconds.

Usage Guide: After the configured lifetime period is overtime, the port is still at down state, the binding of this port will be deleted. If the port state is changed from down to up state during the configured lifetime period, the binding of the port will reset it as lifetime period of BOUND state. If the configured parameter is 0 second, all binding of the port will be deleted immediately.

Example: Set bind-protect lifetime period to be 20 seconds.

```
Switch(config)#savi timeout bind-protect 20
```

16.2 Commands for Monitor and Debug

16.2.1 Monitor and Debug

16.2.1.1 debug ipv6 dhcp snooping binding

Command: debug ipv6 dhcp snooping binding

no debug ipv6 dhcp snooping binding

Function: Enable binding debug of dhcp type for SAVI, no command disables the debug.

Parameter: None.

Command Mode: Admin Mode.

Default: None.

Usage Guide: After enable this function, the relative binding of dhcp type or static type create the print information for misarranging. The no command disables this function.

Example: Enable the binding debug of dhcp type.

```
Switch#debug ipv6 dhcp snooping binding
```

16.2.1.2 debug ipv6 dhcp snooping event

Command: debug ipv6 dhcp snooping event

no debug ipv6 dhcp snooping event

Function: Enable event debug of dhcp type for SAVI, no command disables the debug.

Parameter: None.

Command Mode: Admin Mode.

Default: None.

Usage Guide: After enable event debug, the relative event information of dhcp type will be print for misarranging. The no command disables this function.

Example: Enable binding event debug of dhcp type.

Switch#debug ipv6 dhcp snooping event

16.2.1.3 debug ipv6 dhcp snooping packet

Command: **debug ipv6 dhcp snooping packet**
no debug ipv6 dhcp snooping packet

Function: Enable the debug of DHCPv6 packets, no command disables the debug.

Parameter: None.

Command Mode: Admin Mode.

Default: None.

Usage Guide: After enable packets debug, the relative DHCPv6 packtets will be print for misarranging. The no command disables this function.

Example: Enable the debug of DHCPv6 packets.

Switch#debug ipv6 dhcp snooping packet

16.2.1.4 debug ipv6 nd snooping binding

Command: **debug ipv6 nd snooping binding**
no debug ipv6 nd snooping binding

Function: Enable the binding debug of slaac type for SAVI, no command disables the binding debug.

Parameter: None.

Command Mode: Admin Mode.

Default: None.

Usage Guide: After enable binding debug, the relative binding of slaac type will create the print information for misarranging. The no command disables this function.

Example: Enable binding debug of slaac type.

Switch#debug ipv6 nd snooping binding

16.2.1.5 debug ipv6 nd snooping event

Command: **debug ipv6 nd snooping event**
no debug ipv6 nd snooping event

Function: Enable the event debug of slaac type for SAVI, no command disables the event debug.

Parameter: None.

Command Mode: Admin Mode.

Default: None.

Usage Guide: After enable event debug, the relative event information of slaac type will be print for misarranging. The no command disables this function.

Example: Enable the event debug of slaac type.

Switch#debug ipv6 nd snooping event

16.2.1.6 debug ipv6 nd snooping packet

Command: debug ipv6 nd snooping packet

no debug ipv6 nd snooping packet

Function: Enable ND packets debug, no command disables ND packets debug.

Parameter: None.

Command Mode: Admin Mode.

Default: None.

Usage Guide: After enable packets debug, the relative ND packets will be print for misarranging. The no command disables this function.

Example: Enable ND packets debug.

Switch#debug ipv6 nd snooping packet

16.2.1.7 show savi ipv6 check source binding

Command: show savi ipv6 check source binding [interface<if-name>]

Function: Show the global SAVI binding entry list.

Parameter: if-name: port name such as interface ethernet 1/0/1.

Command Mode: Admin Mode.

Default: None.

Usage Guide: Descriptions of each field are as below:

| Field | Description |
|---------|-----------------------------|
| MAC | The bound MAC address |
| IP | The bound IP address |
| Vlan | The binding VLAN belongs to |
| Port | The binding port belongs to |
| Type | Binding type |
| State | Binding state |
| Expires | The bound lifetime period |

Example: Show the global binding state of SAVI.

Switch(config)#show savi ipv6 check source binding

Static binding count: 0

Dynamic binding count: 3

Binding count: 3

| MAC | IP | VLAN | Port | Type | State | Expires |
|-----|----|------|------|------|-------|---------|
|-----|----|------|------|------|-------|---------|

```
00-25-64-bb-8f-04 fe80::225:64ff:febb:8f04 1 Ethernet1/0/5 slaac BOUND 14370
00-25-64-bb-8f-04 2001::13 1 Ethernet1/0/5 slaac BOUND 14370
00-25-64-bb-8f-04 2001::10 1 Ethernet1/0/5 slaac BOUND 14370
```
