

DRY Contact Option Installation Manual for HTX33010 V1.0

Option lists:

- ◆ Dry Contact board 1pcs(17001-01362)
- ◆ Cables 1pcs (W201)

1. Remove the cabinet and parallel cover, and install the parallel board, as is shown in figure 1.

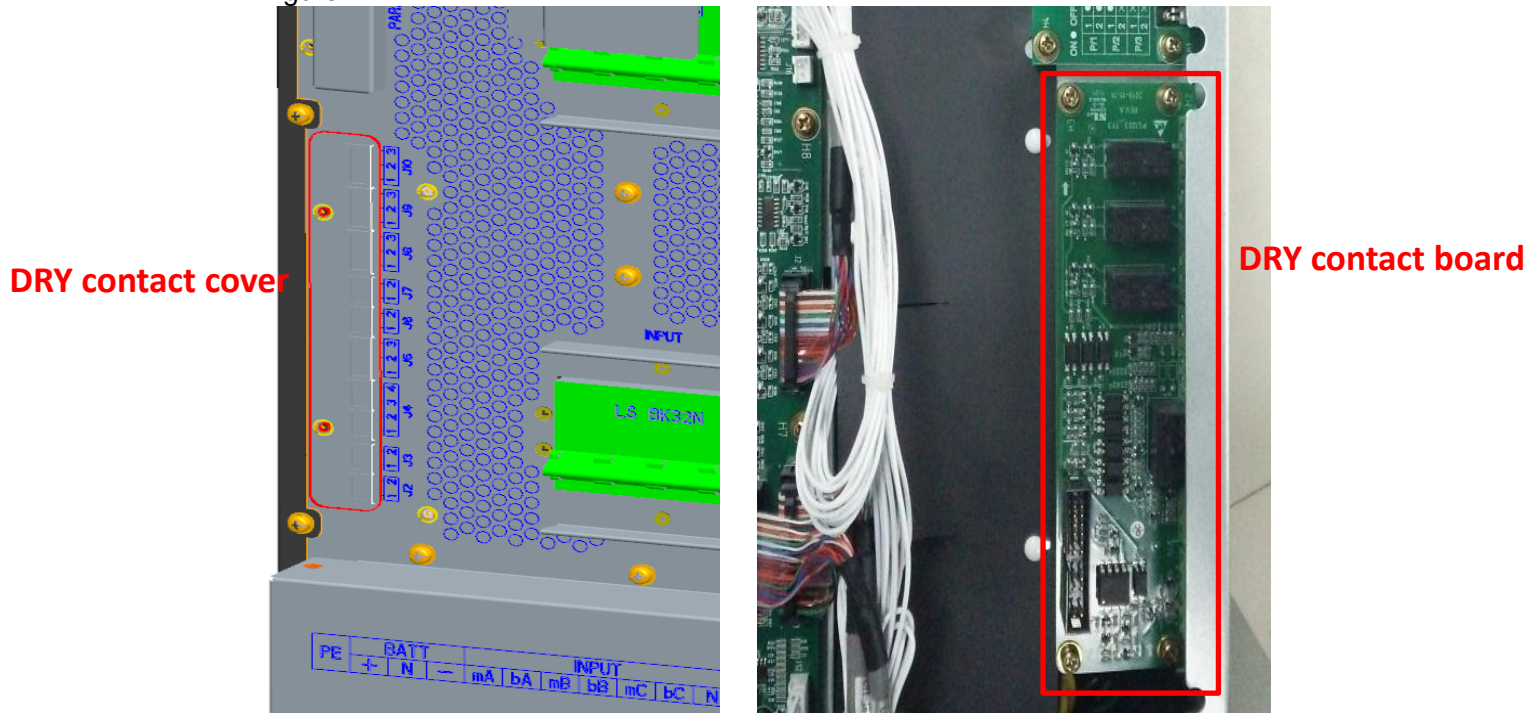


Figure 1 parallel board installation

2. Connect the signal cable W201 (DRY Contact board J1 to communication transfer board J10), as is shown in figure 2.

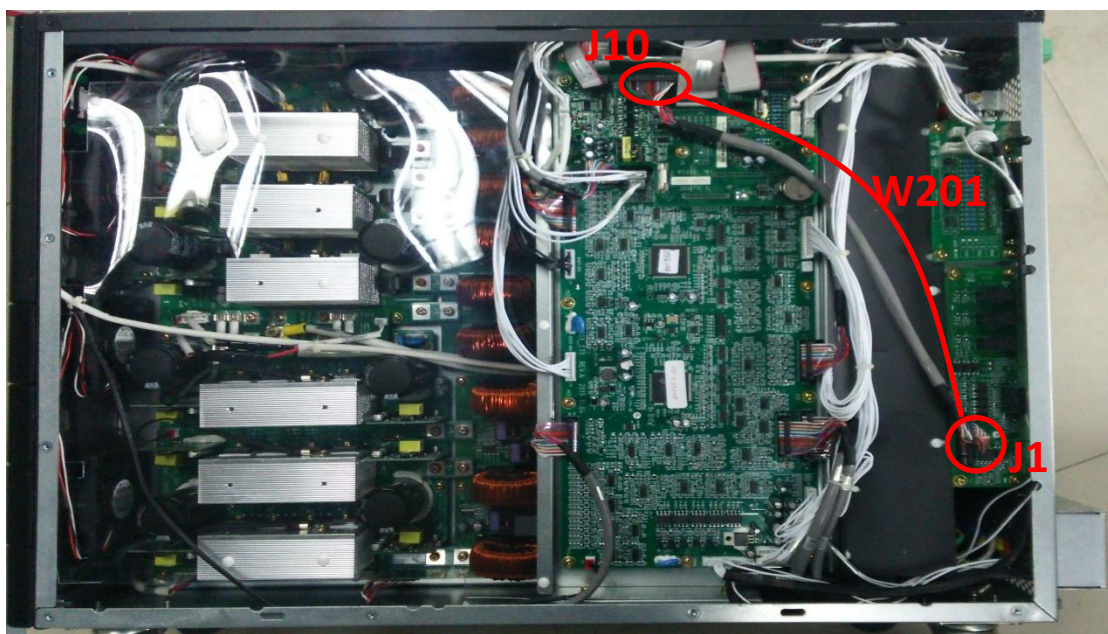


Figure 2 W201 cable

3. Make the J4 terminals pin 1 and 2 shorted circuit, if not , UPS can not turn on and show alarm: emergency power OFF, as is shown in figure 3.

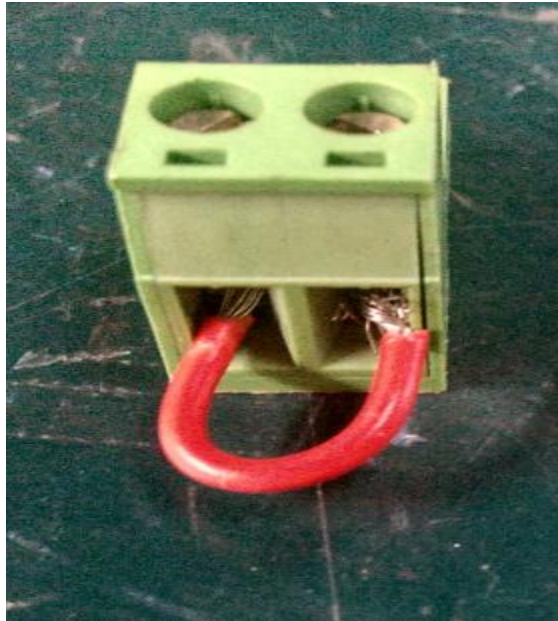
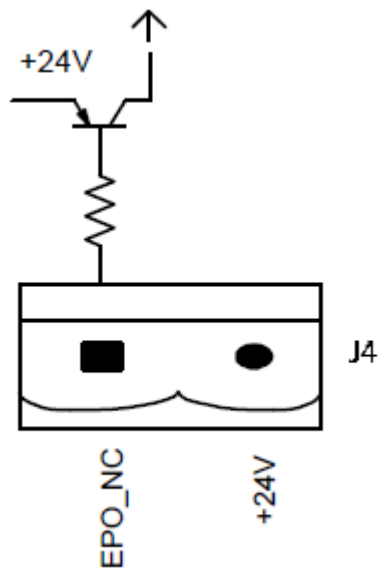


Figure 3 J4 terminal

4. After check and fix all cables, and install back the unit cover.